



CREATOR

6742



6745



6743

 


6747






1

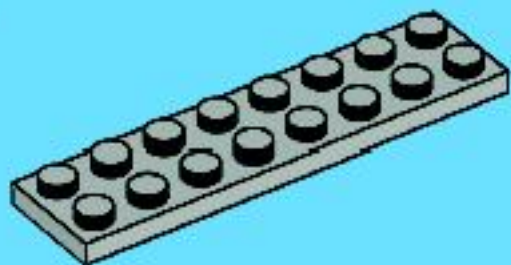

2

 
2

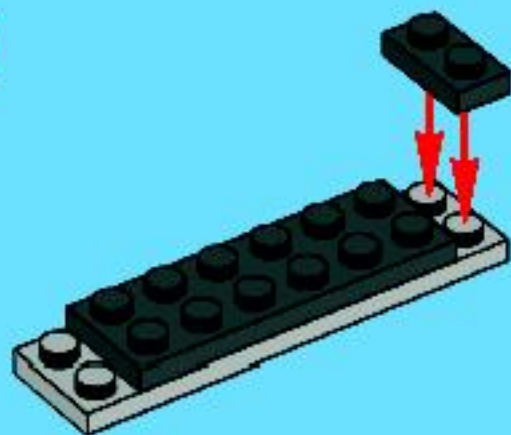


3



 
4

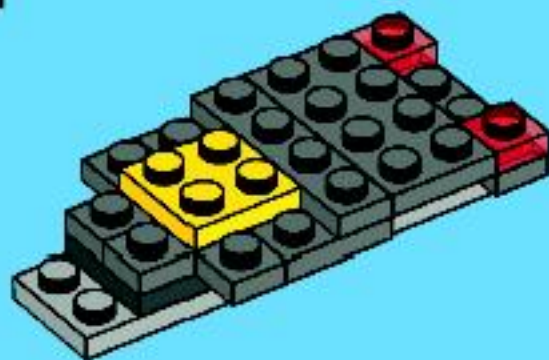



5

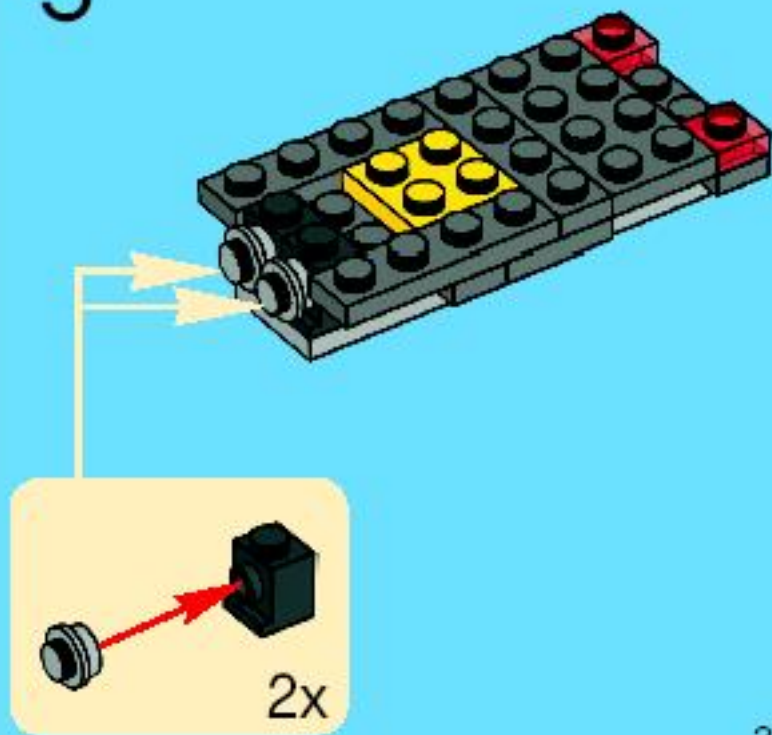 

6

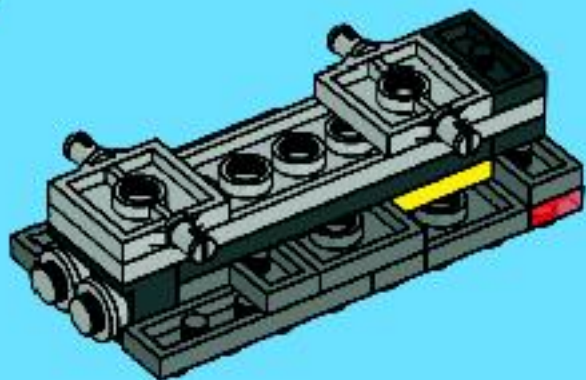 


7

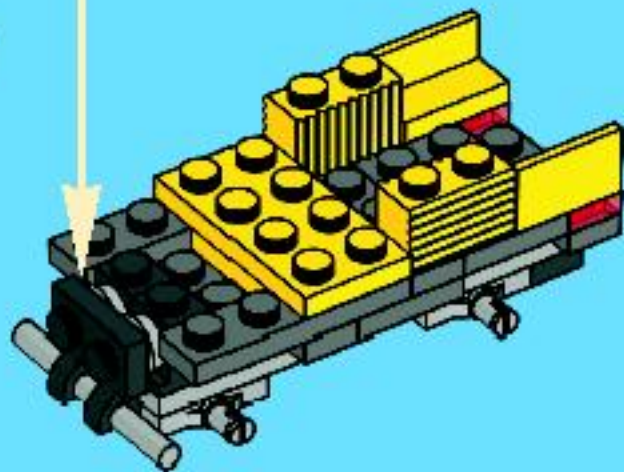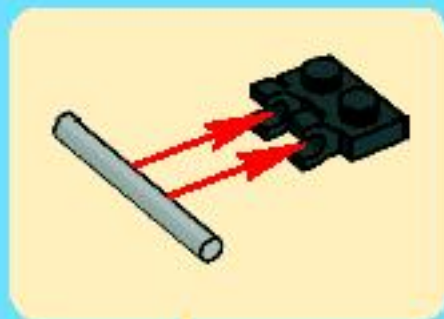  


1



 
2

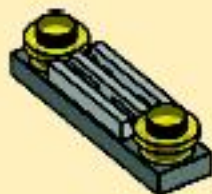


8

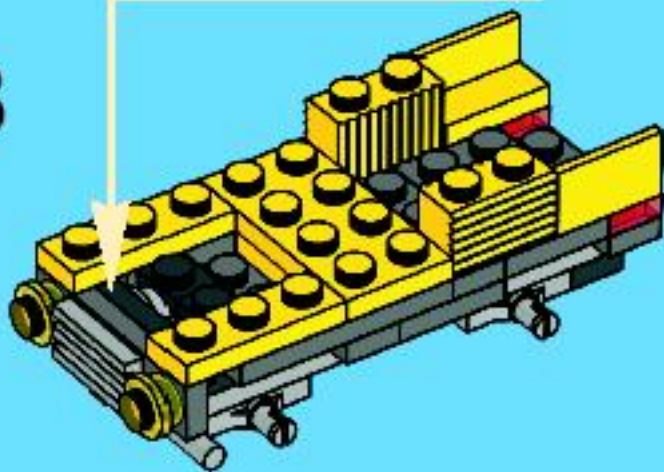 


9

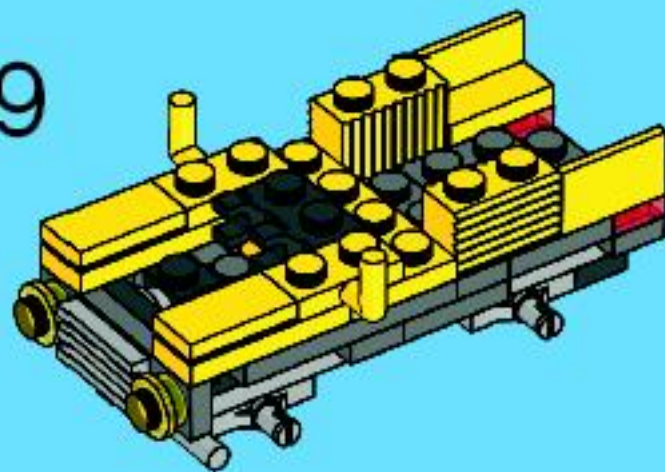 


10

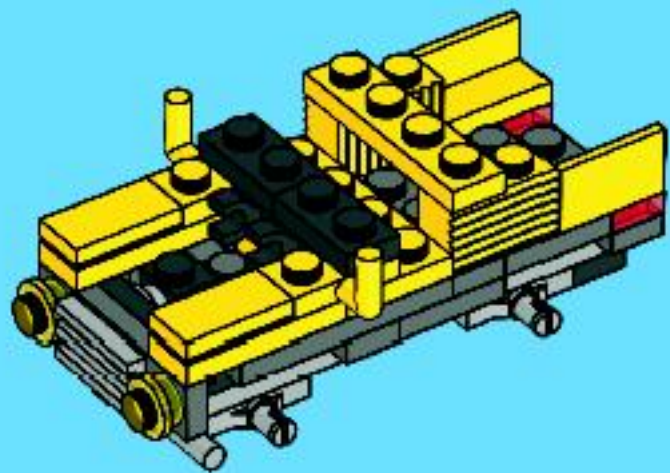 

11

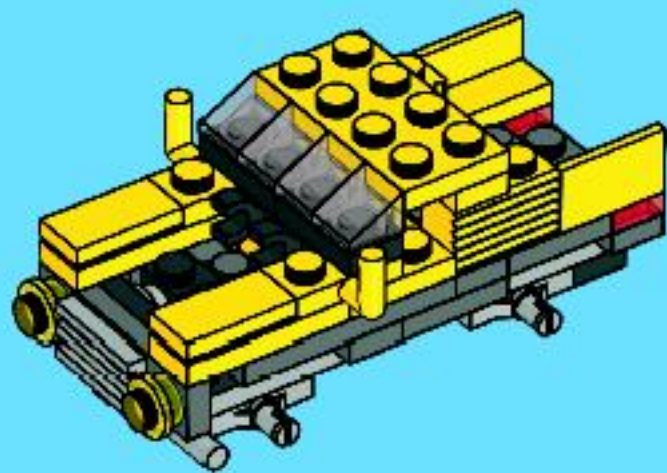 


1

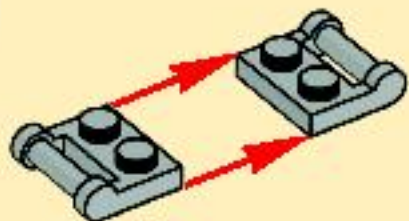 



2



 12

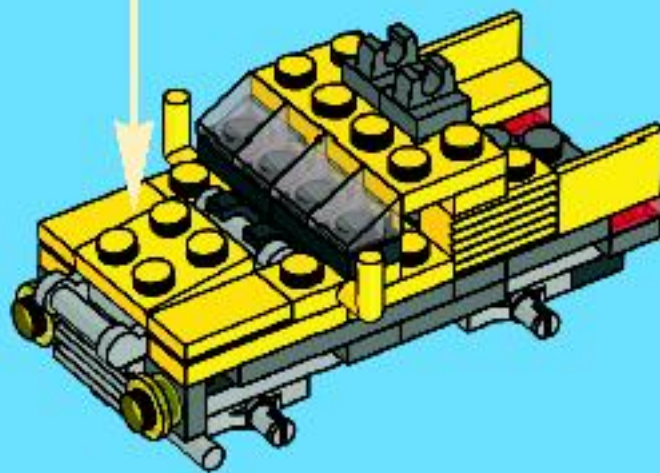


13

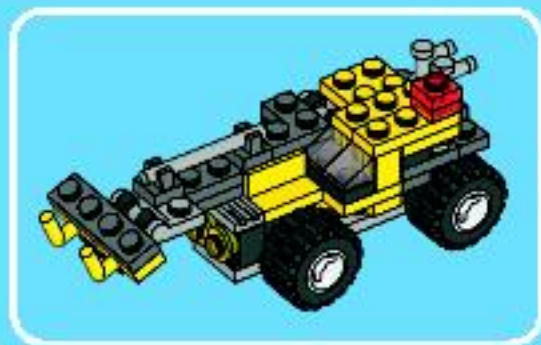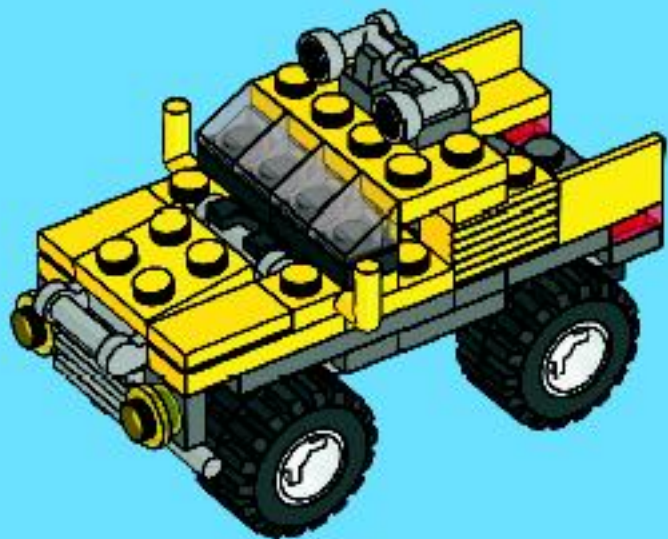  


1



 
2

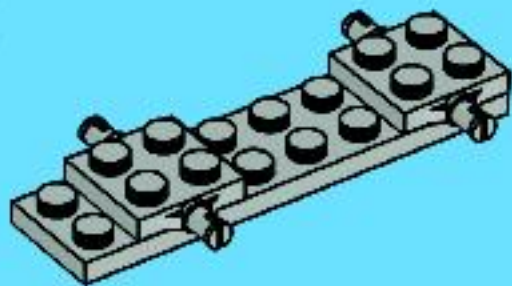


3

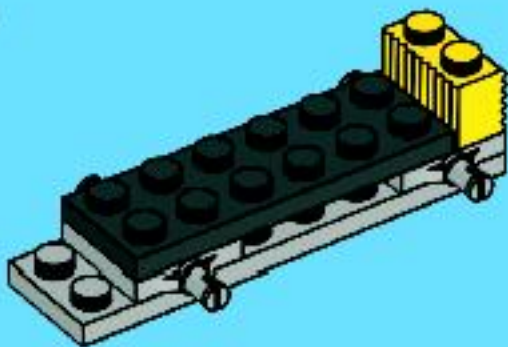 


4

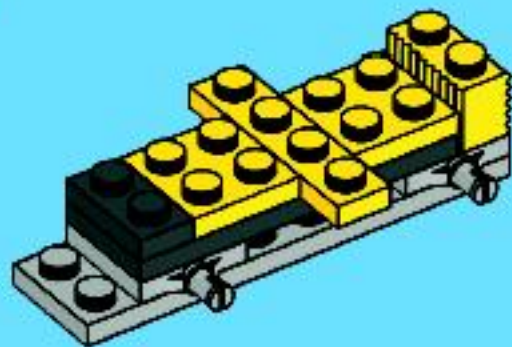 


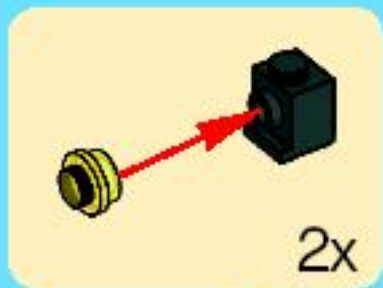 


5

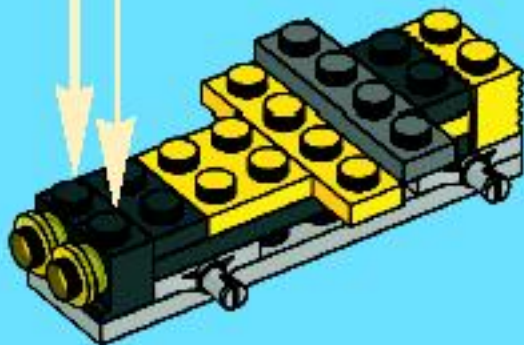 


6

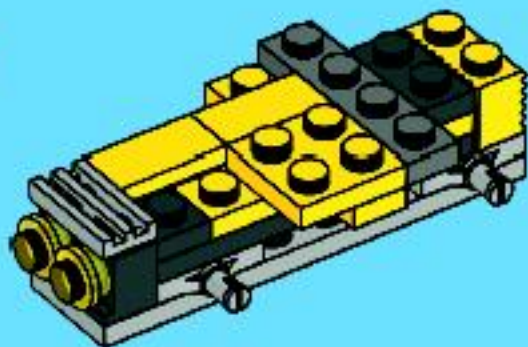 


7

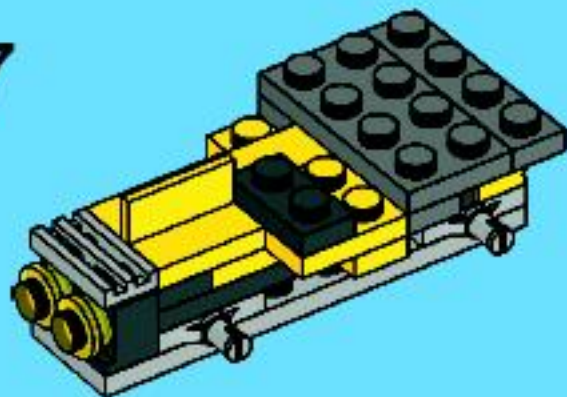 


8

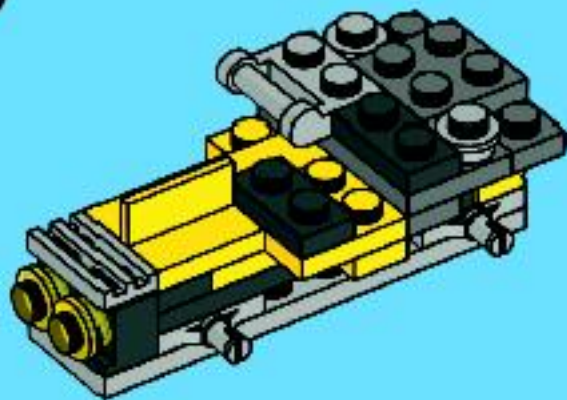 


9

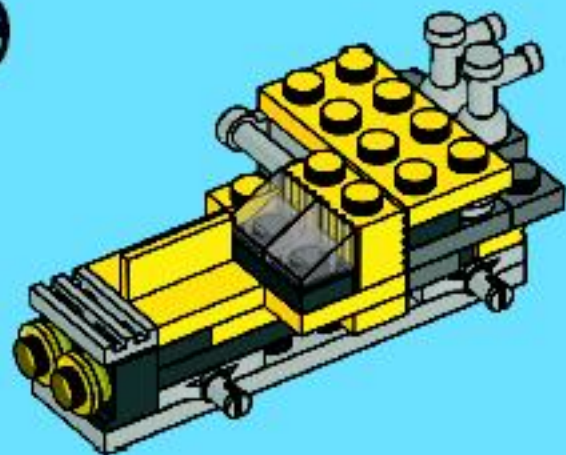 


10

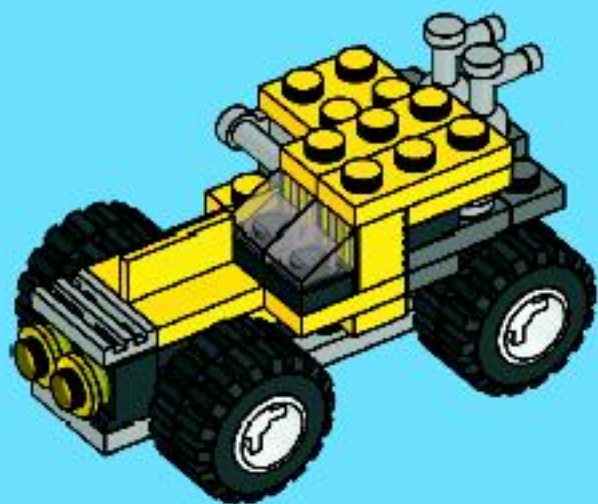 


11

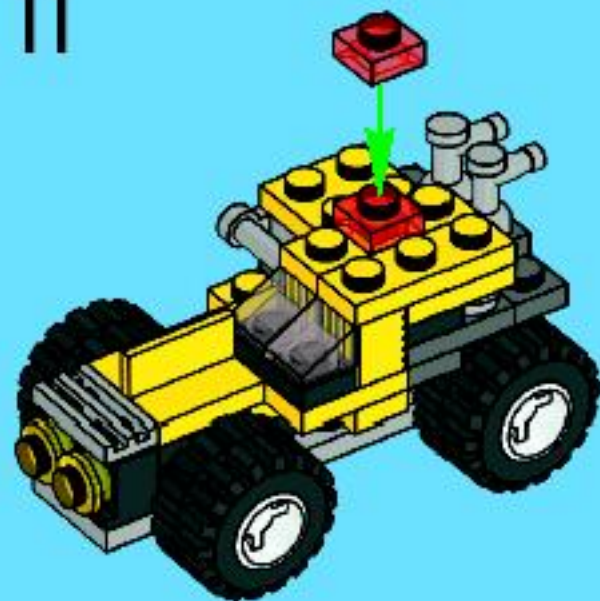 


1

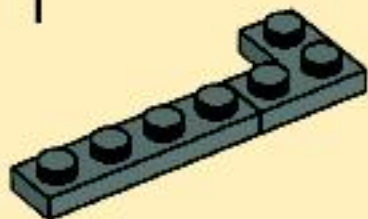 


2

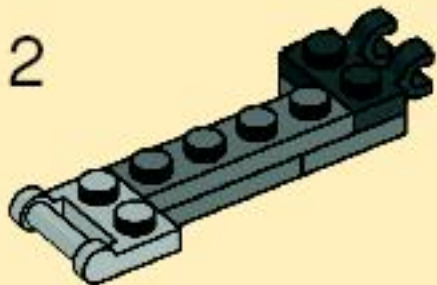 

3

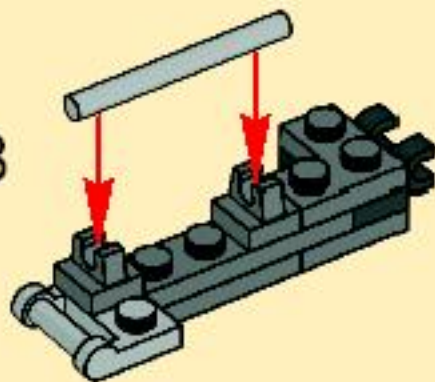 

12

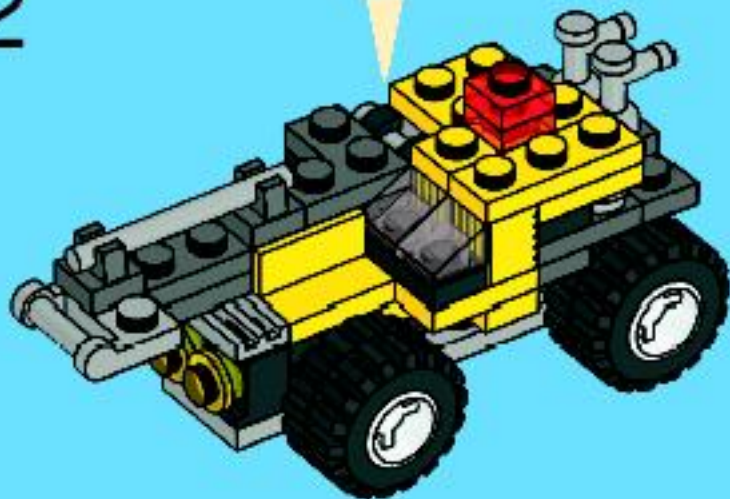 


1




2



 3

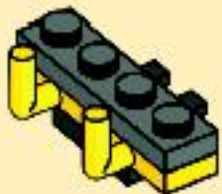

13

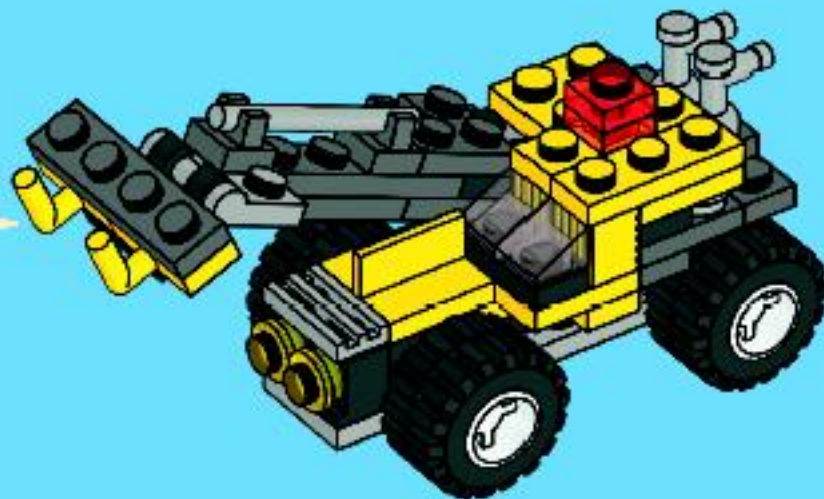 



1



 
2



3




4

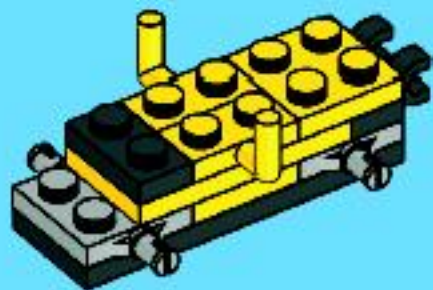

5



 6

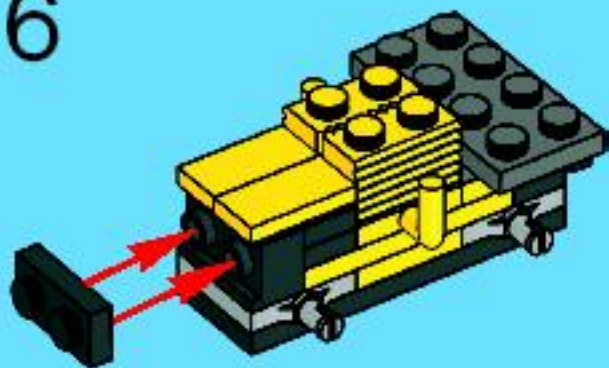


1




2



 
7

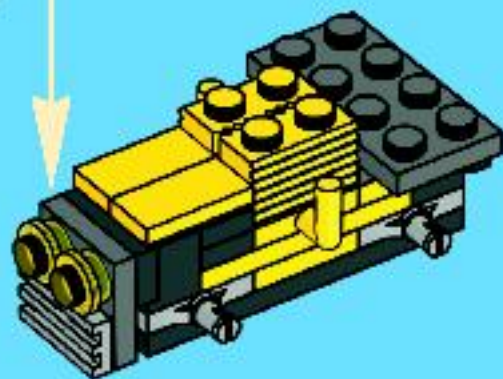


8

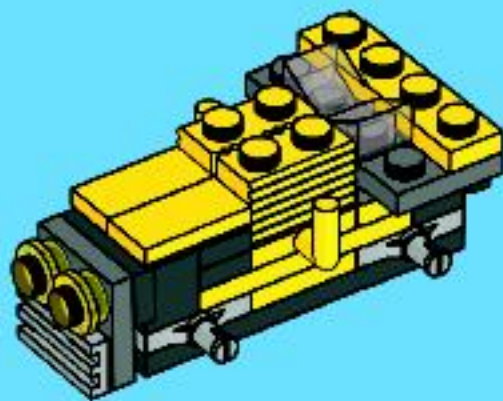 


9

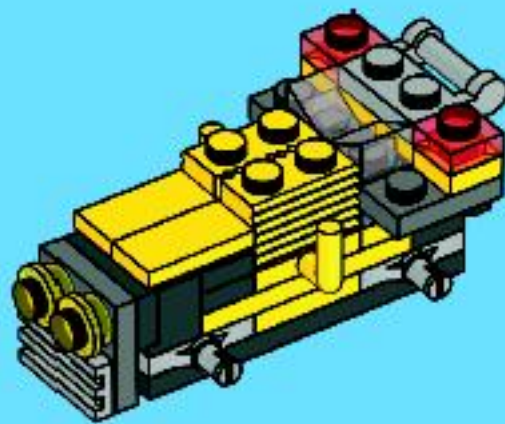 


10

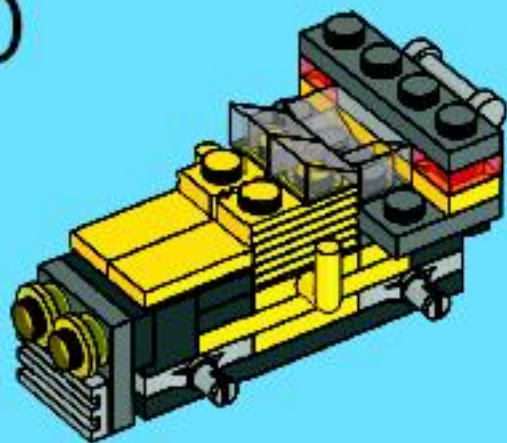 


11

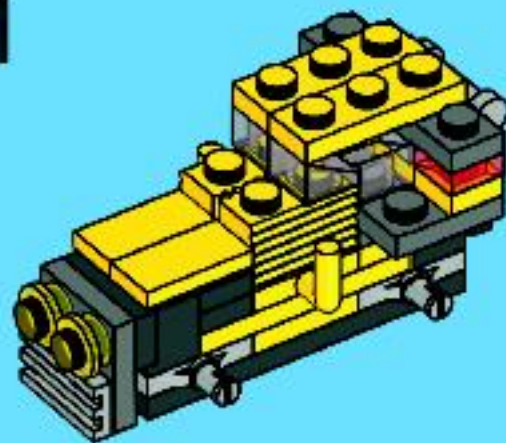 

12

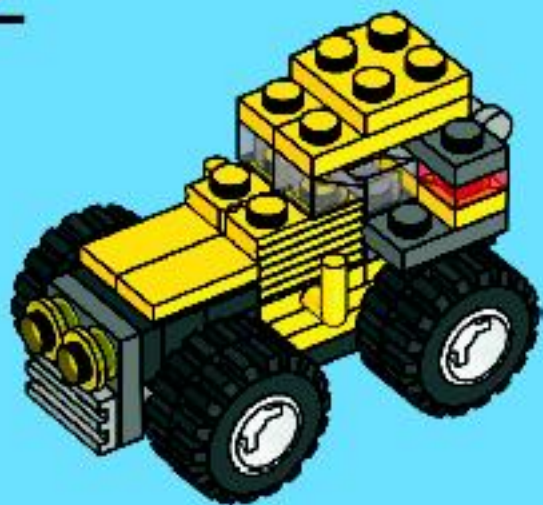 

13

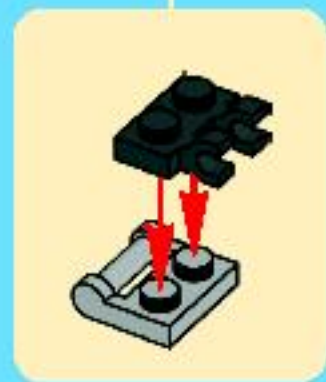 





1



 
2

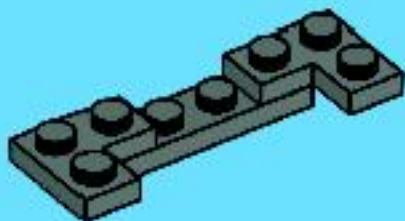


3

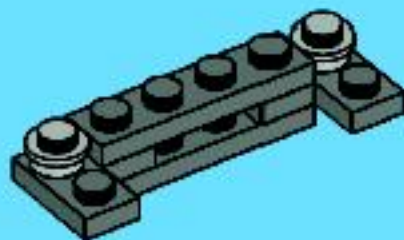 


4

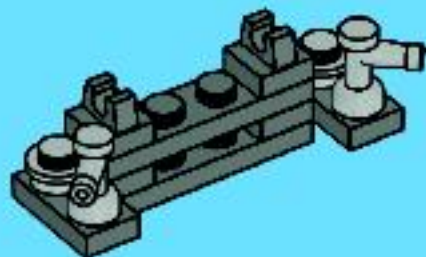 

5

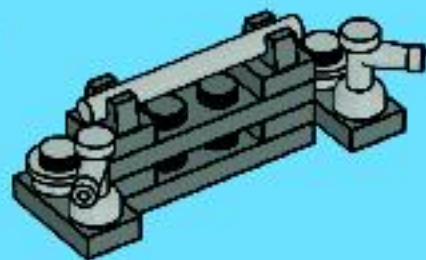 

14

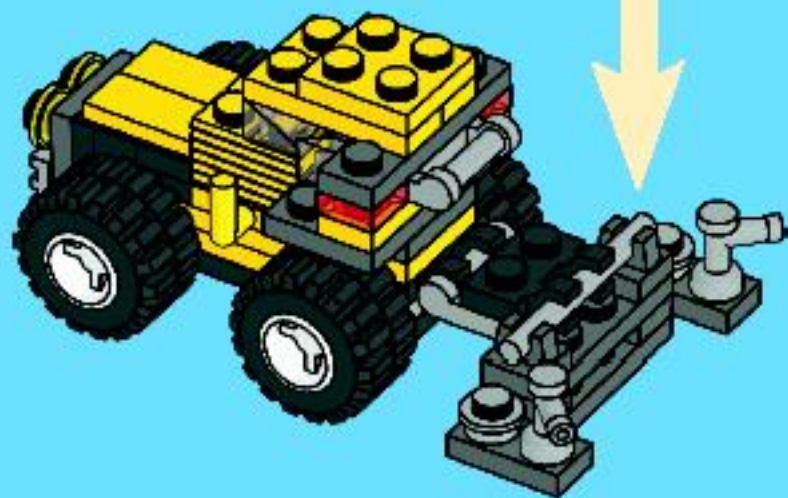 


2x
306924


2x
362324


1x
371024


2x
486524


2x
4501109


2x
287724


2x
302024


3x
302224


2x
407026


4x
302326


2x
4519849


1x
379526


4x
4514560


4x
4170457


1x
4211350


1x
4211628


2x
4244627


1x
4211406


2x
4211504


2x
4211525


2x
4211503


2x
3005744


4x
4244368


2x
3000841


2x
4210635


5x
4211001


2x
4211094


1x
4211065


2x
4211069



Customer Service
Kundenservice
Service Consommateurs
Servicio Al Consumidor

www.lego.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



CREATOR

8747



8741



8745



8742



8743

