



 
40236








1

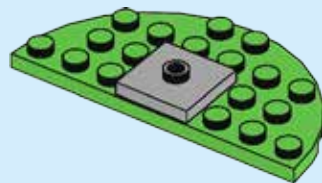



4x

 2

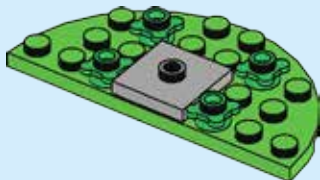

4

 


 
2x





2x


3

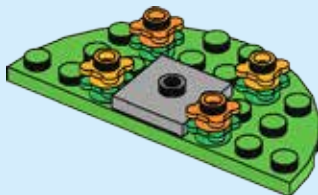

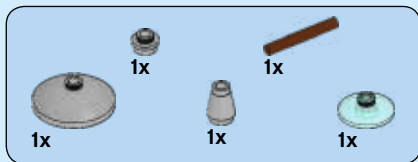


4

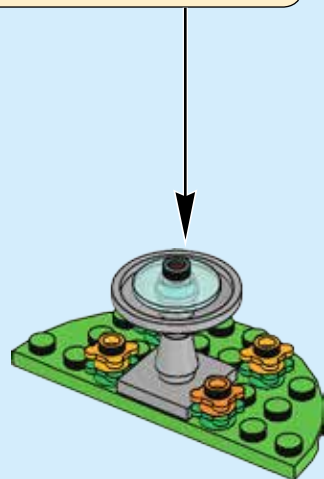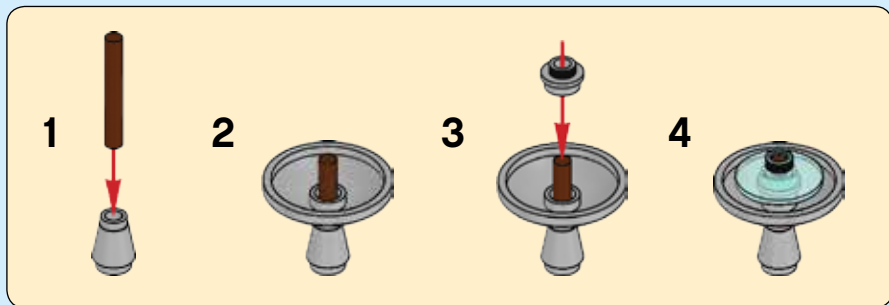  

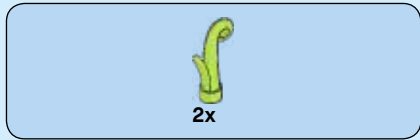 



5

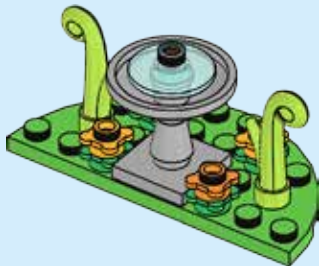 

6



  6

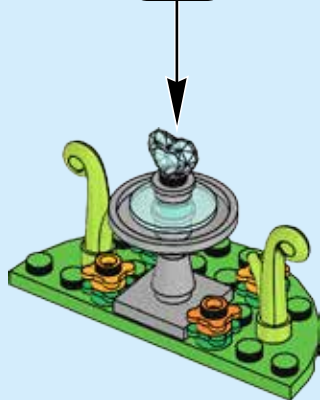



1

 
 
 


2







3

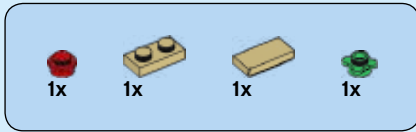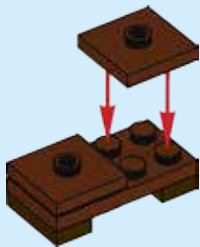


4

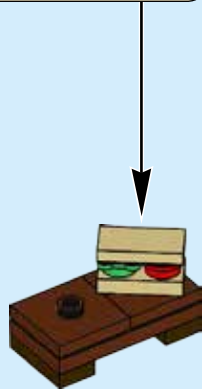 

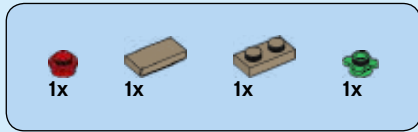 

5

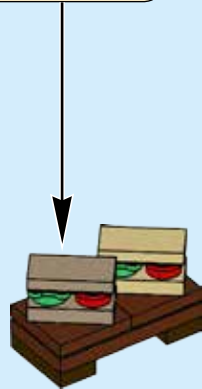 



1x

1



1x

2



10



1x

3



 
2x

4






1


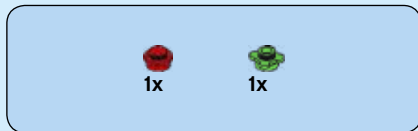


2





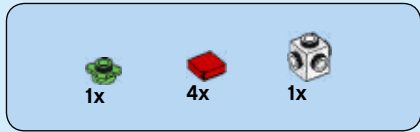 


3

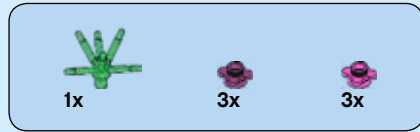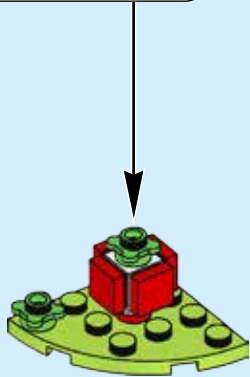  


4

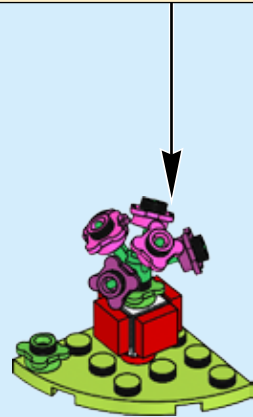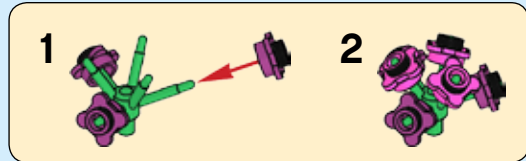  

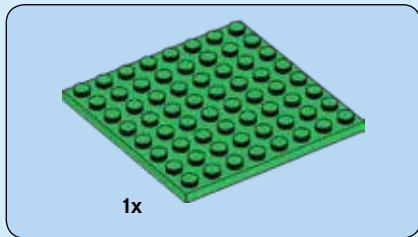 

1

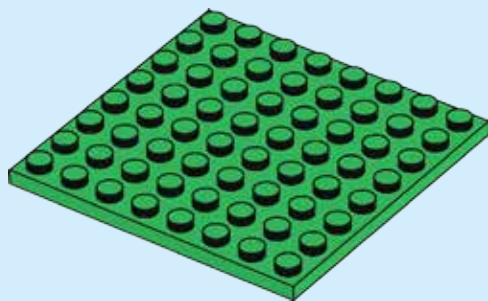 




4x



5x

 2

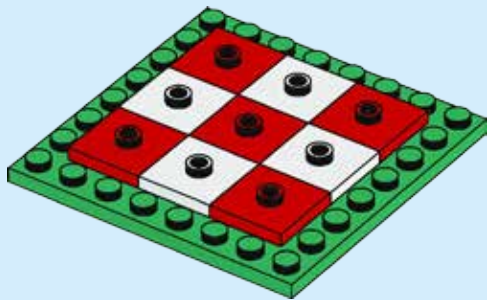




2x





1x

 
3

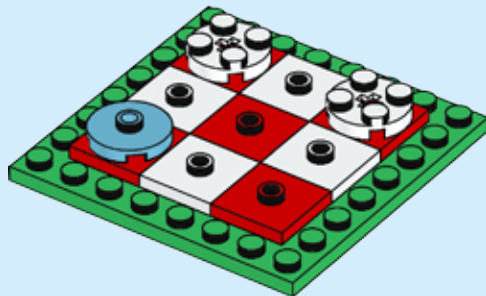




4

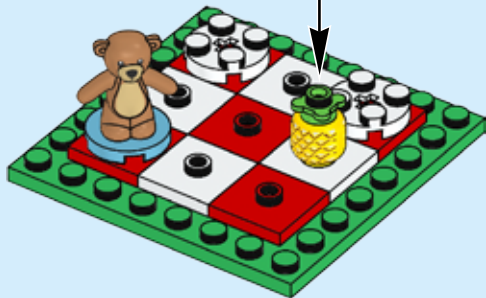  


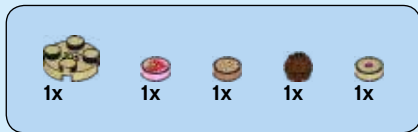 



5



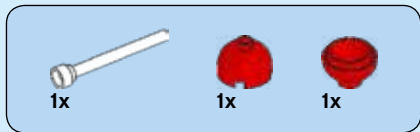 


6

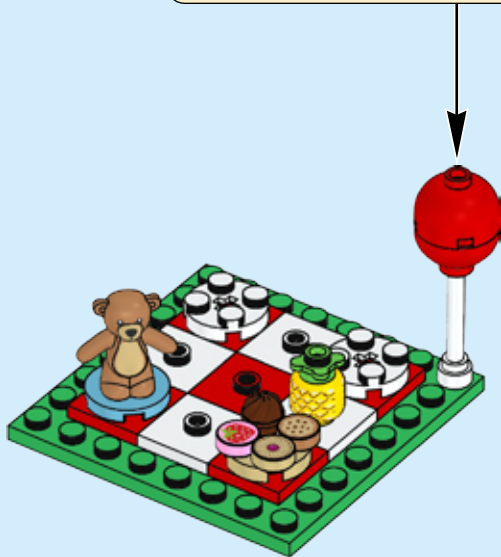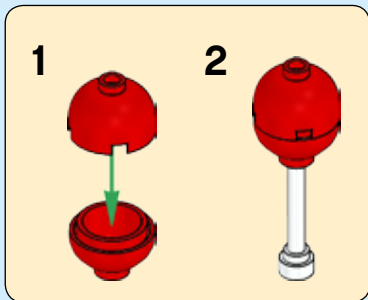  


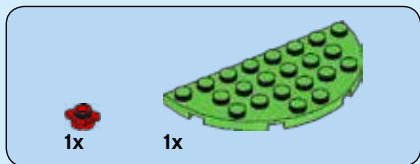 

1

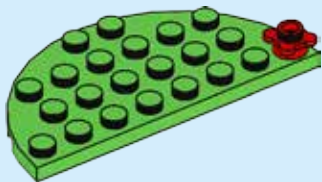 

2

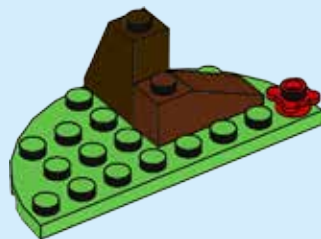 



2x

 
3






1x


4

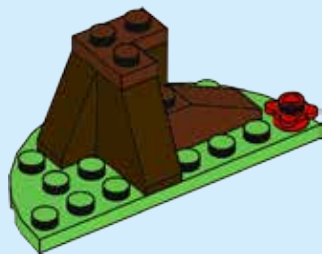



2x

  5

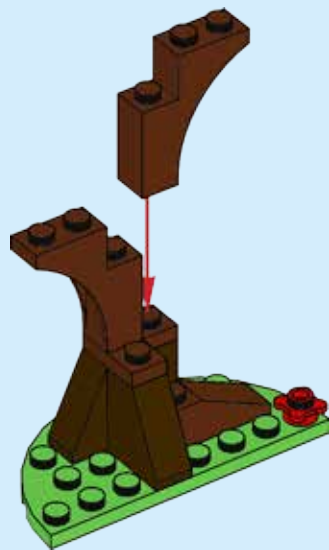

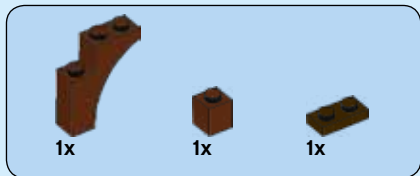

6

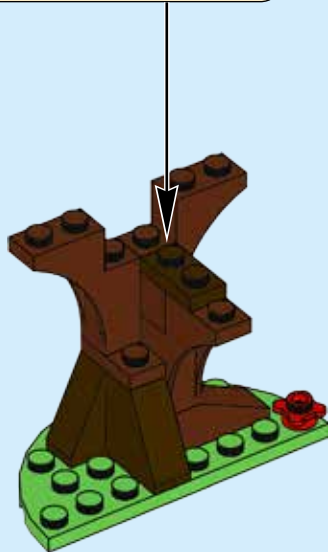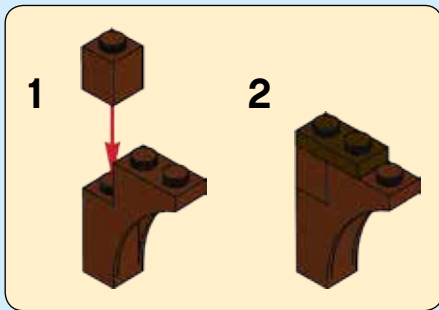  



1x

7

 
 


1x






1x

8

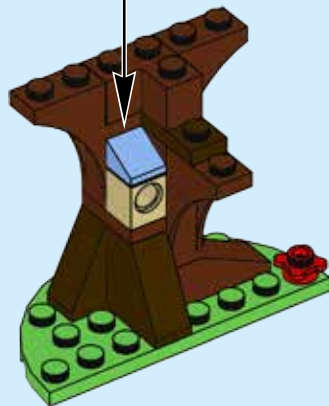





9

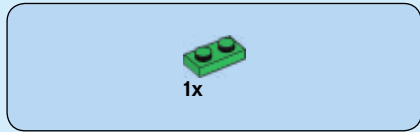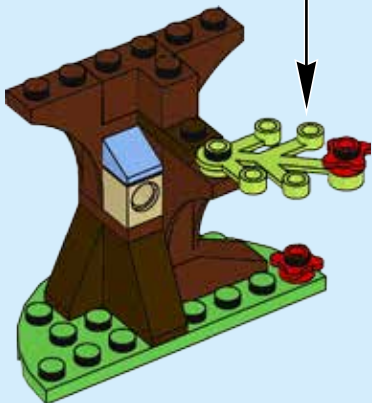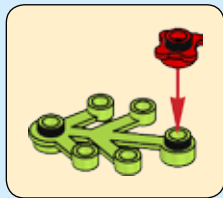   


10



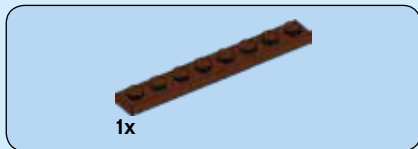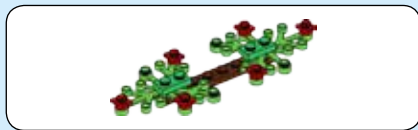  


1x

 
11

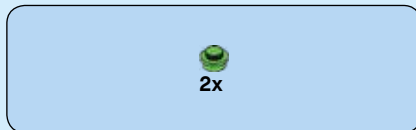



2x

  12

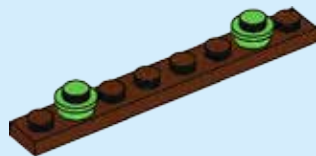

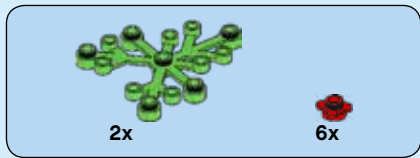

13

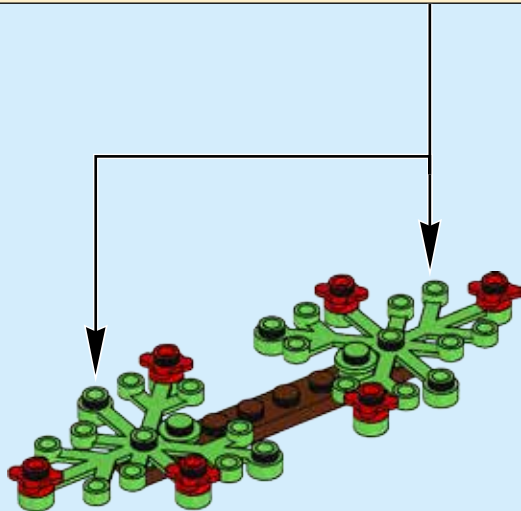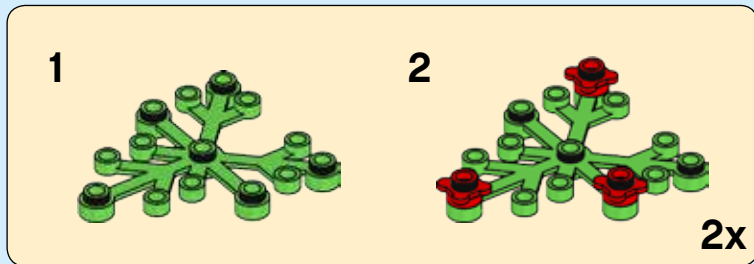  




2x

14



 2x

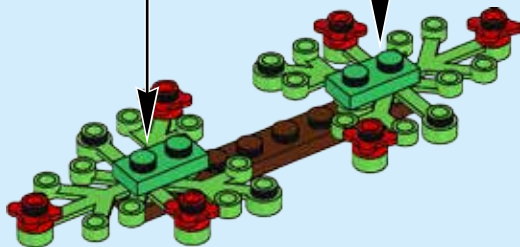

15





16

 
1



2



3

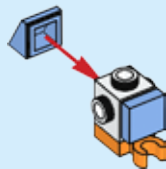

4



 
5



6



17

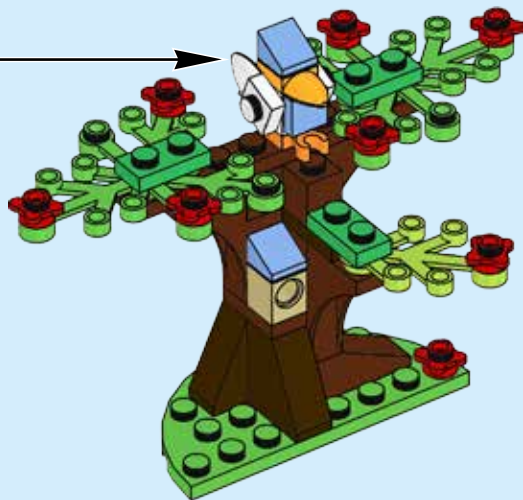





Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346

