 



LEGO

183

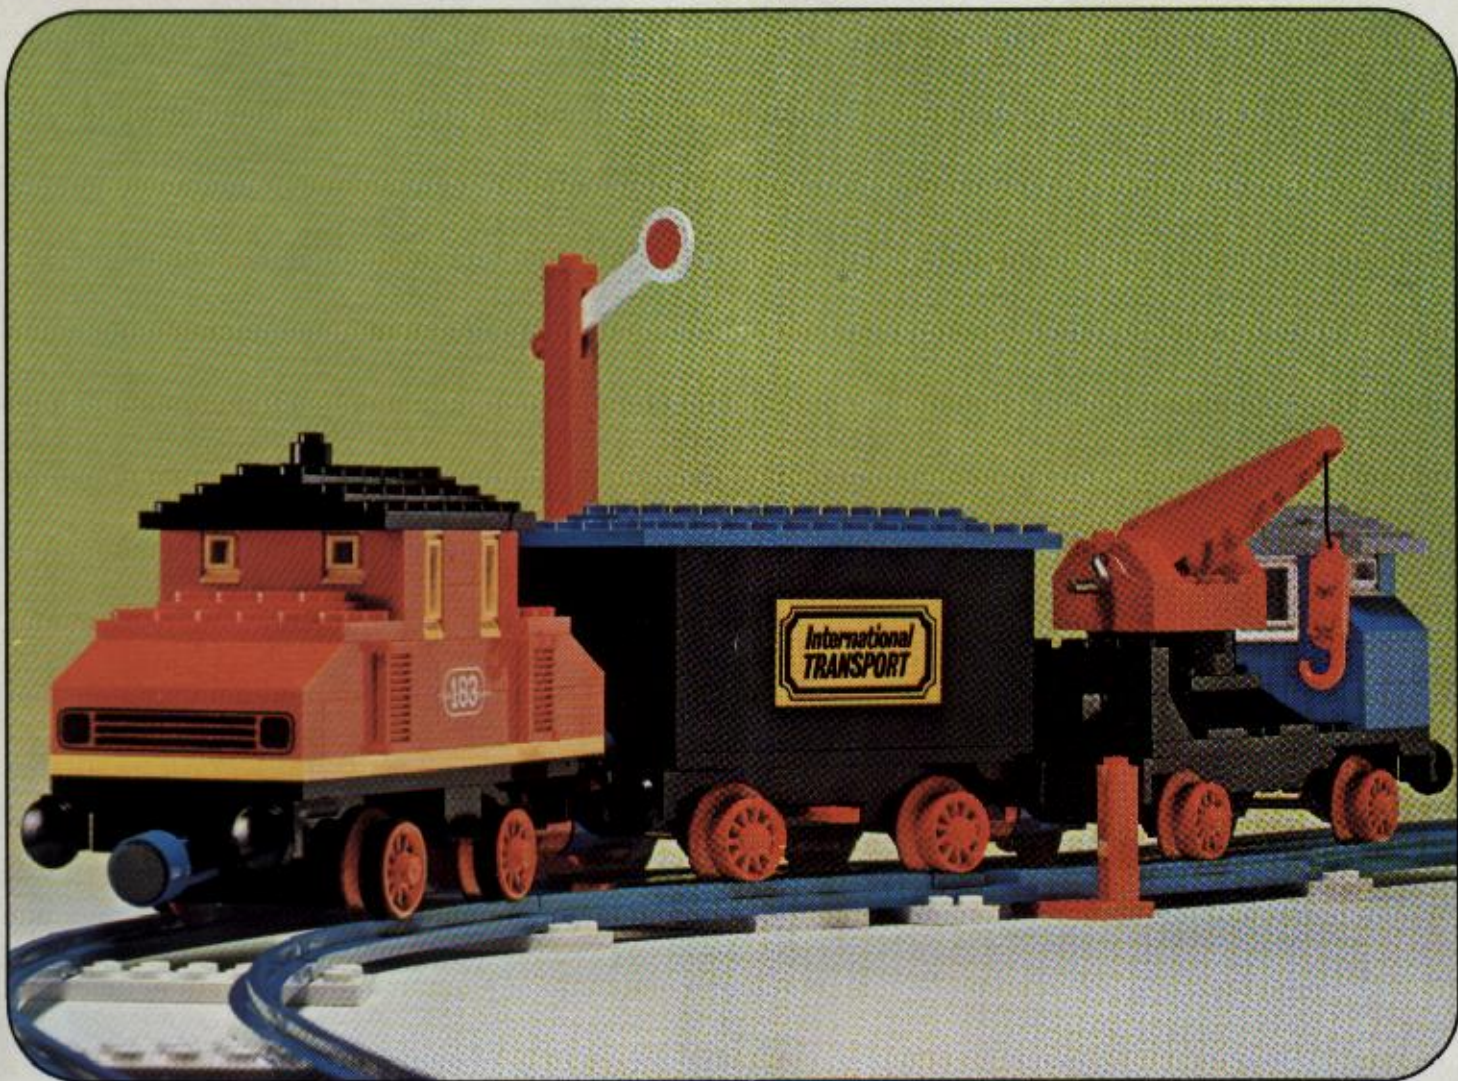


98365

 
1

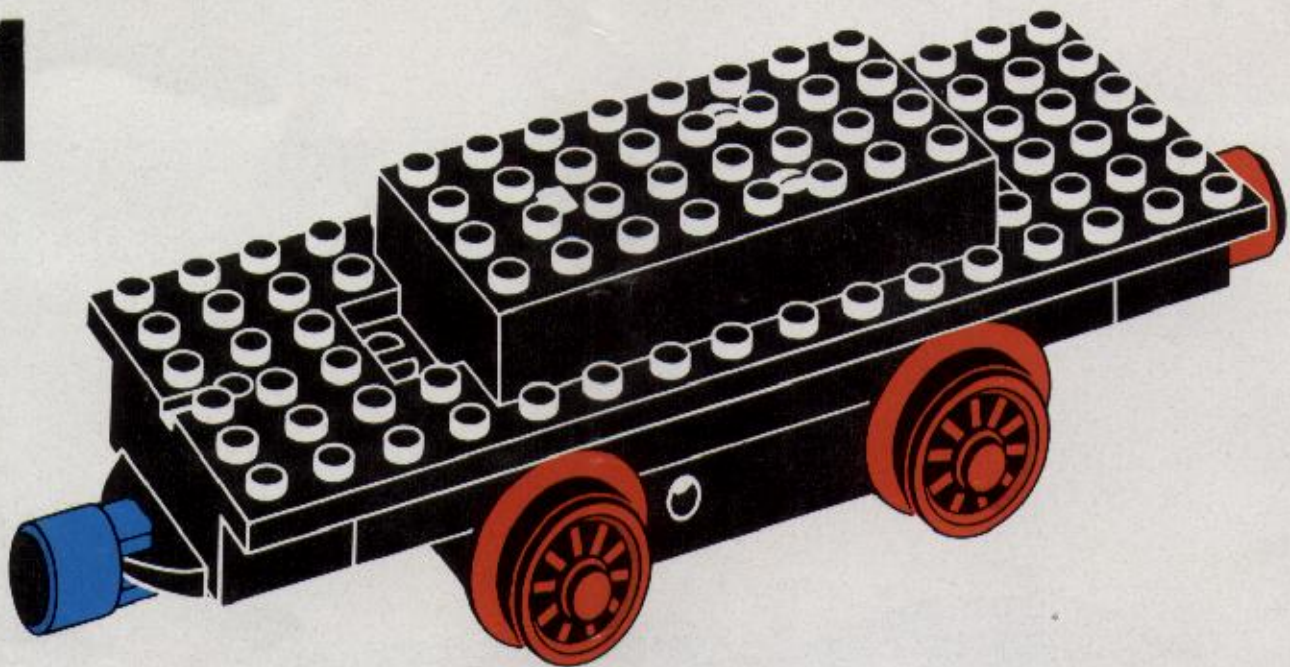


2

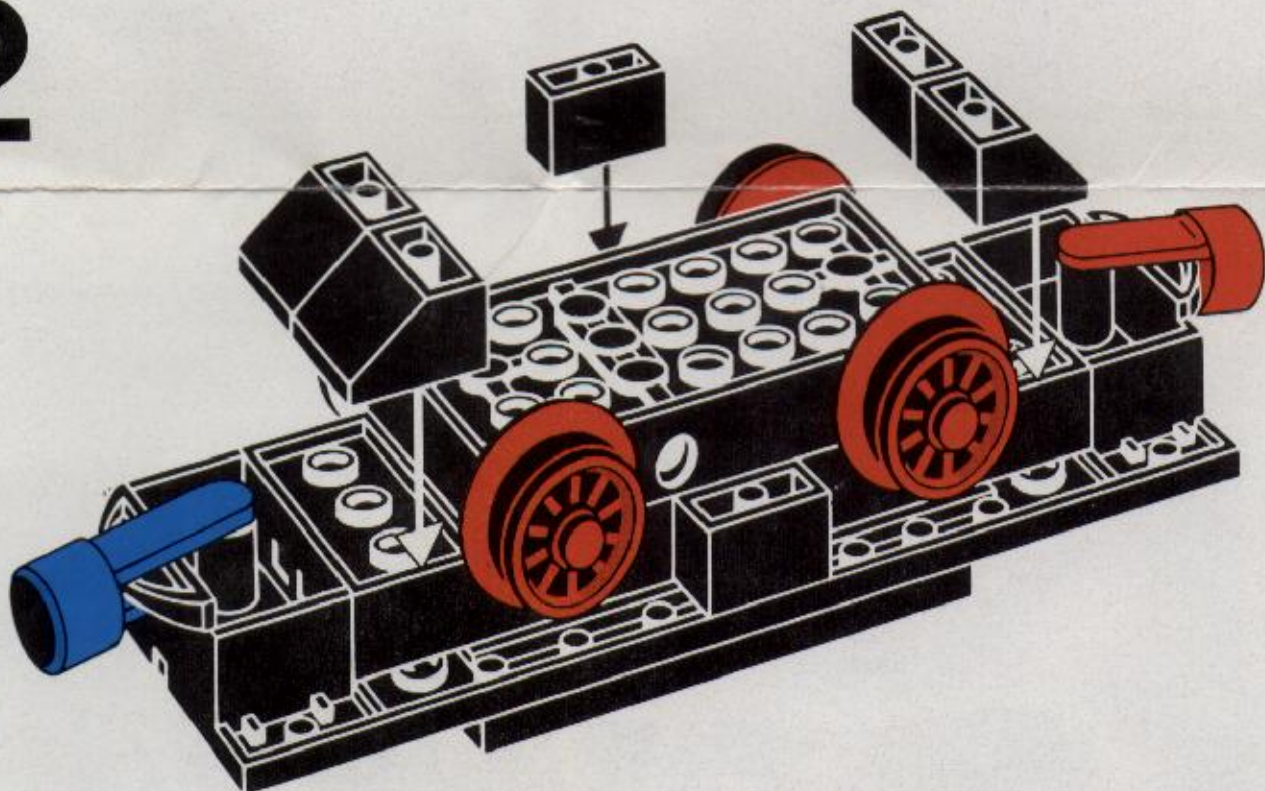 


3

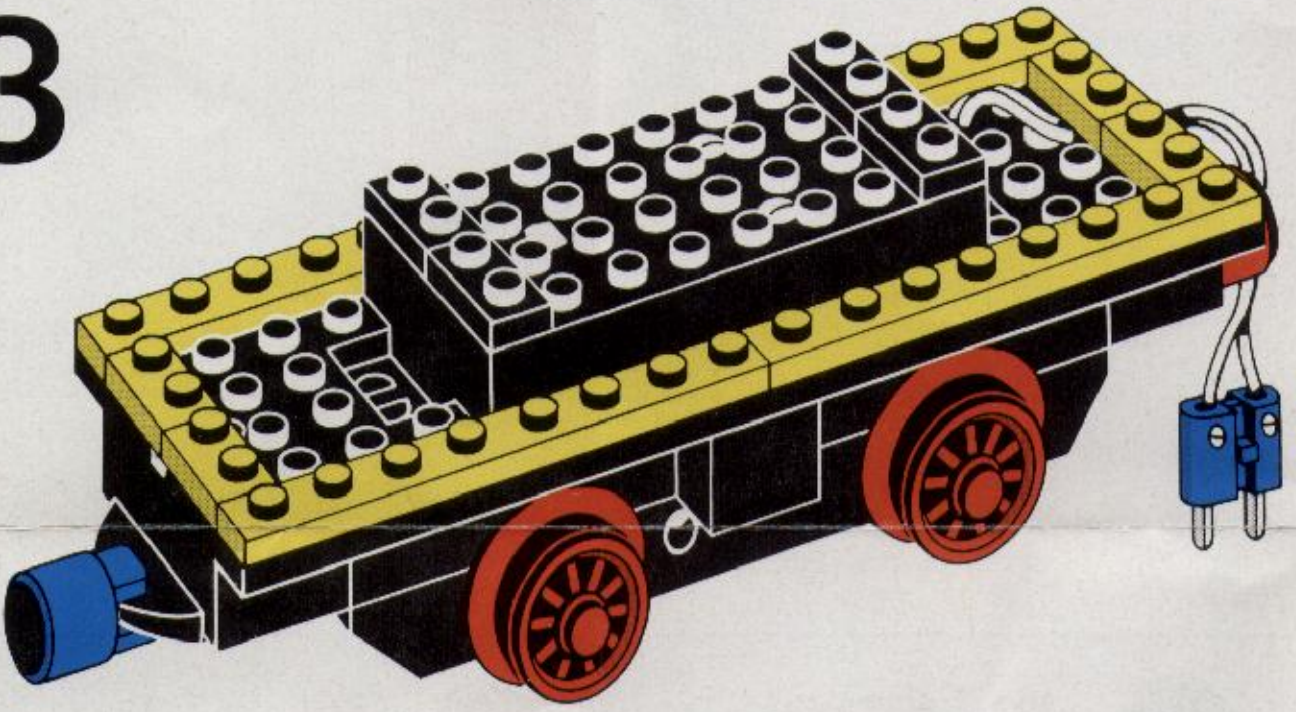 


4

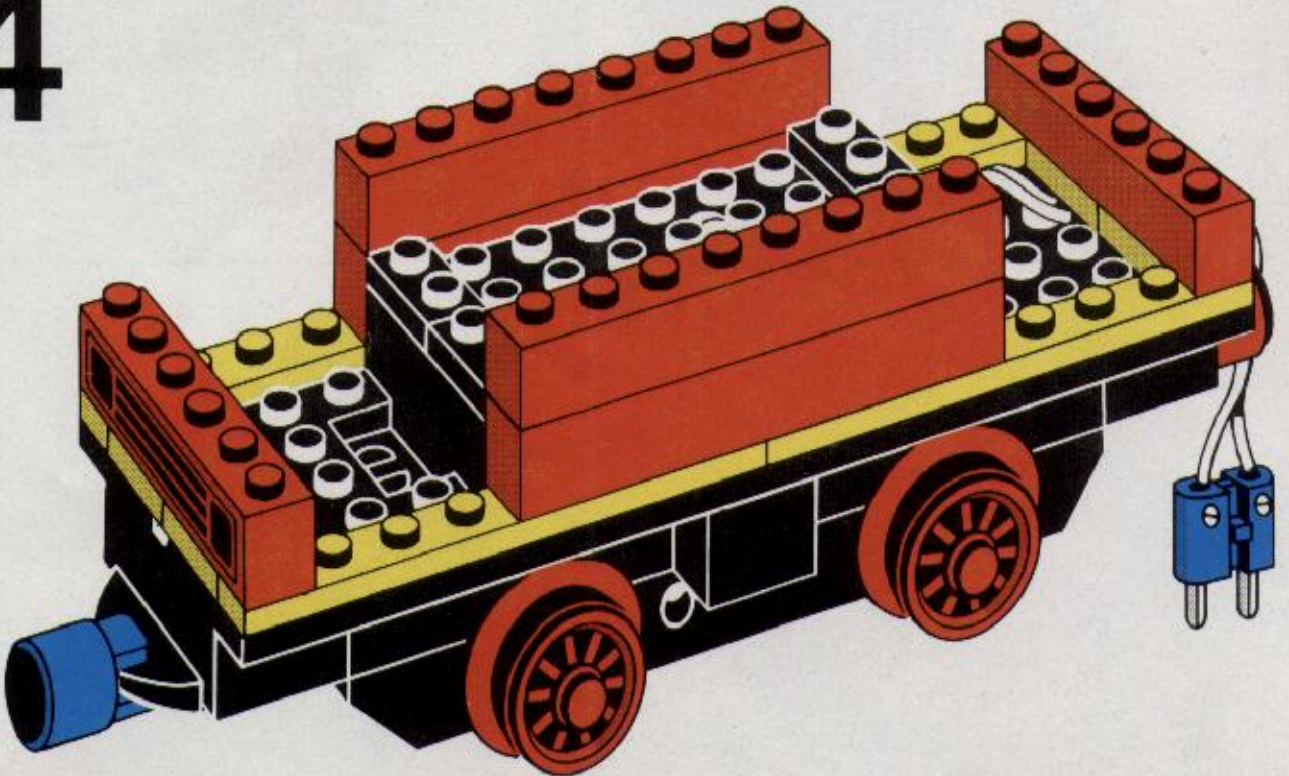 


5

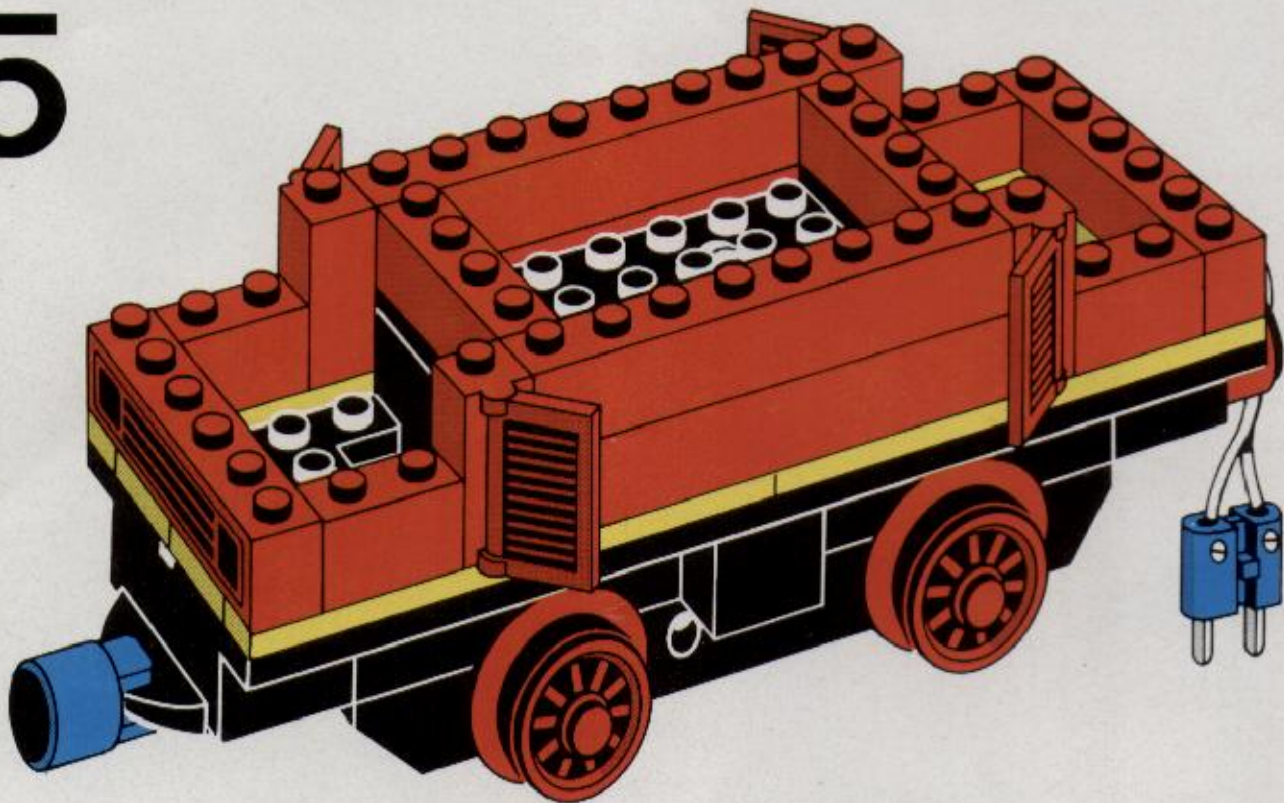 


6


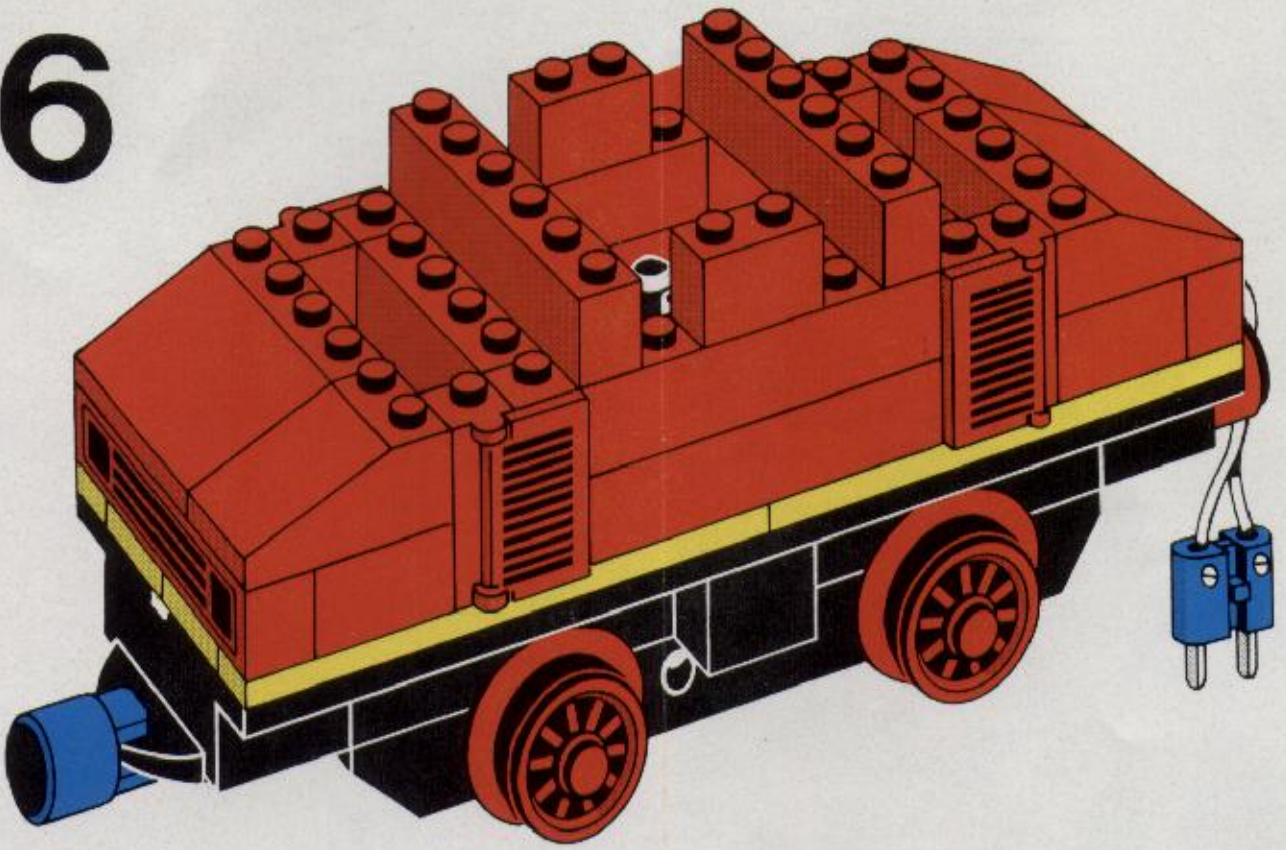 


7

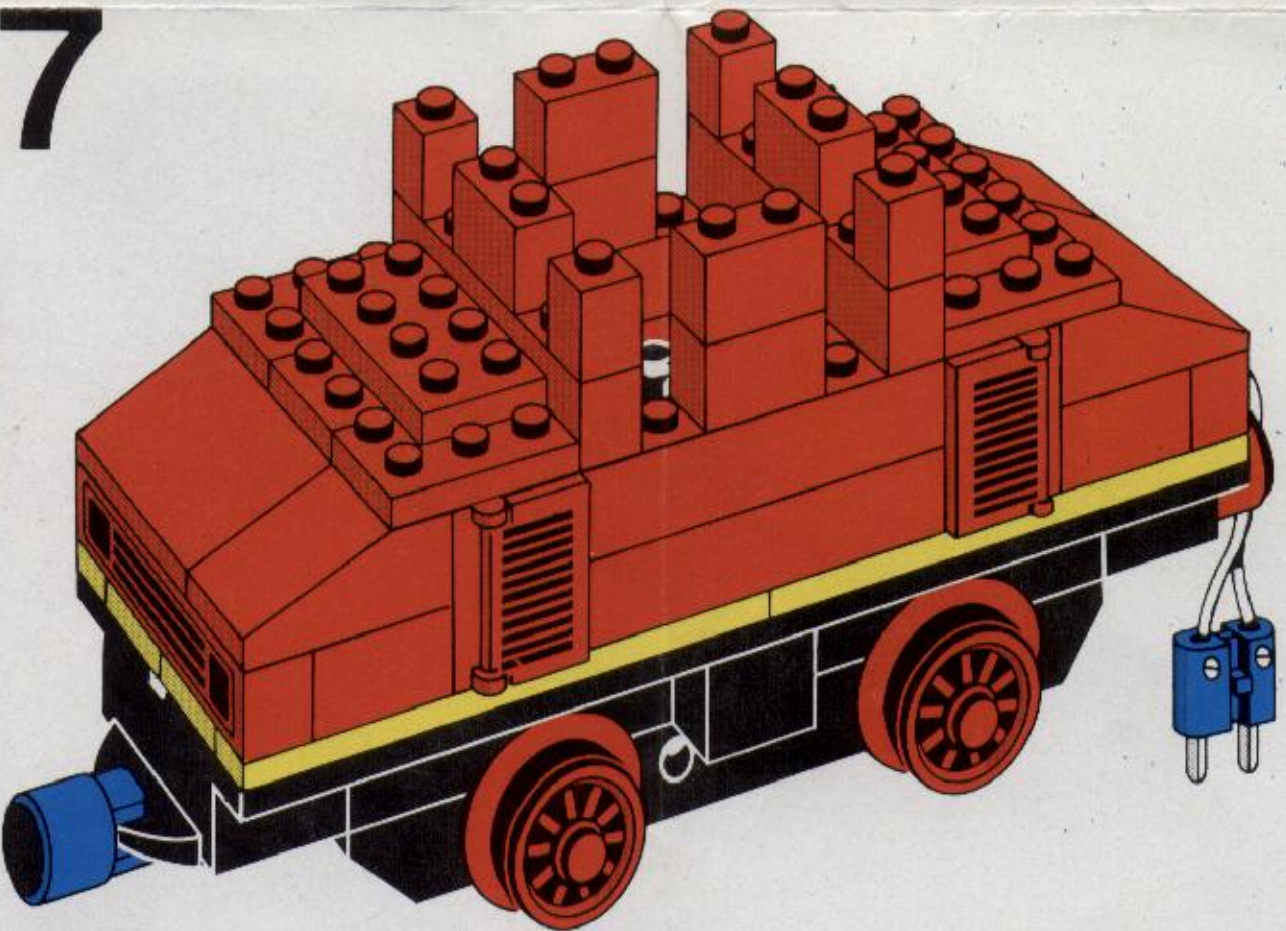 

8

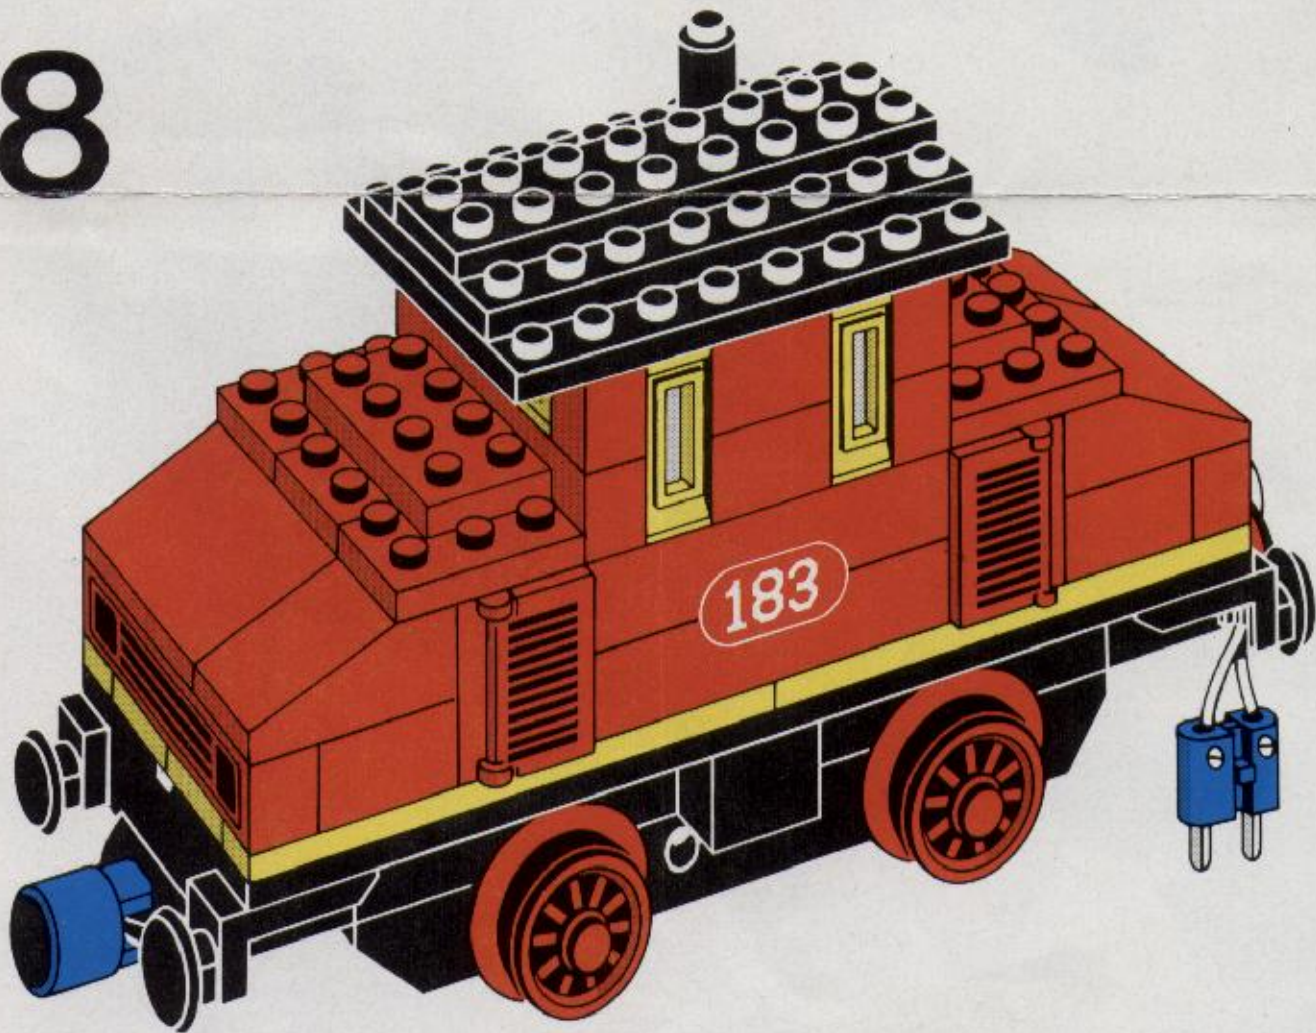 

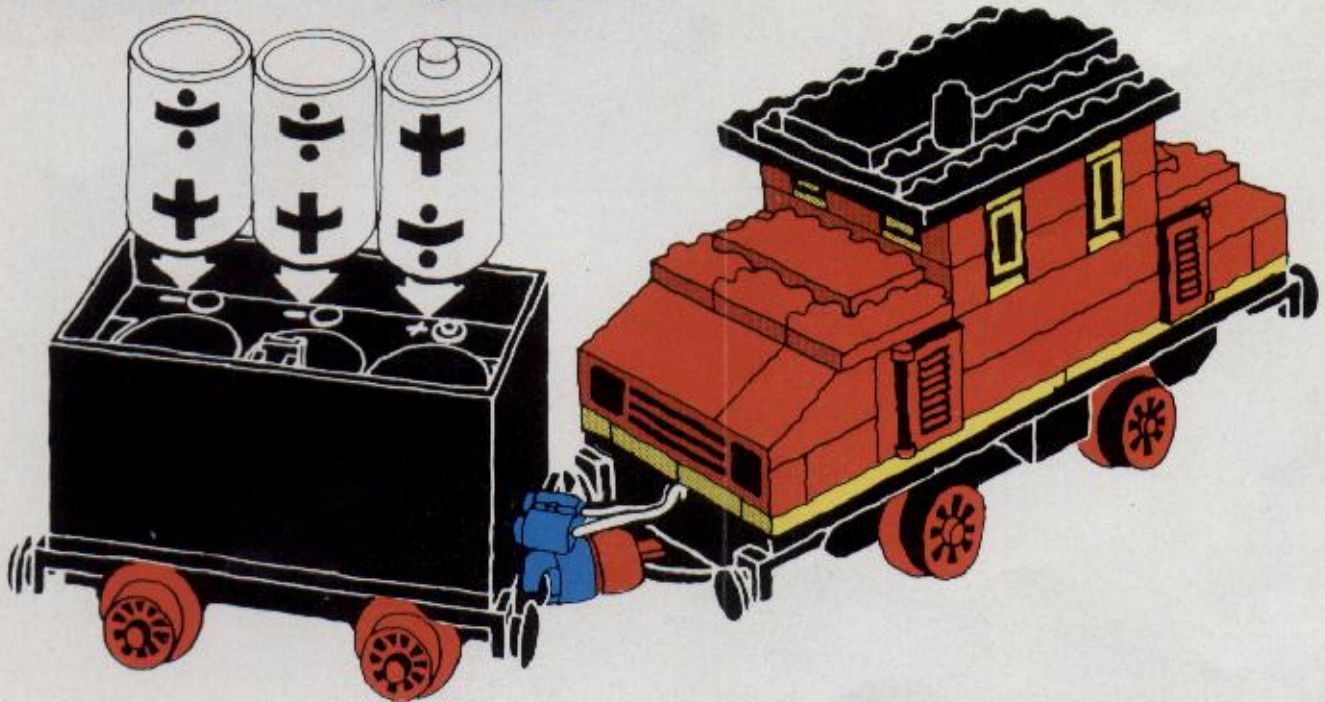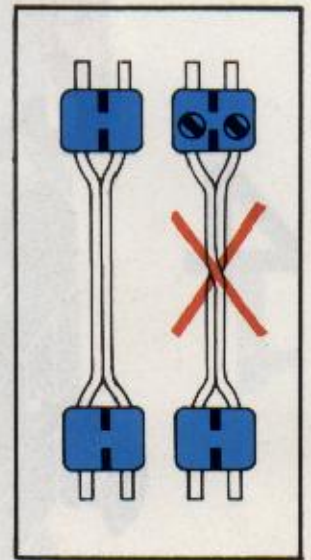  

"Important. Always remove the batteries after play, otherwise the acid from the batteries may corrode the wagon.

Nimm immer die Batterien heraus, wenn du mit dem Spielen fertig bist, weil die Seure der Batterien den Wagen beschädigen kann.

 
Enlevez toujours les piles après le jeu car l'acide des piles peut abîmer le tender.

Tag altid batterierne ud efter endt leg, da syre fra batterierne kan ødelægge vognen.


Togliete le pile dopo aver giocato poiché l'acido in esse contenuto potrebbe danneggiare il tender.

Después de terminar de jugar saque siempre las baterías, ya que el ácido de las mismas puede estropear la pieza".


1

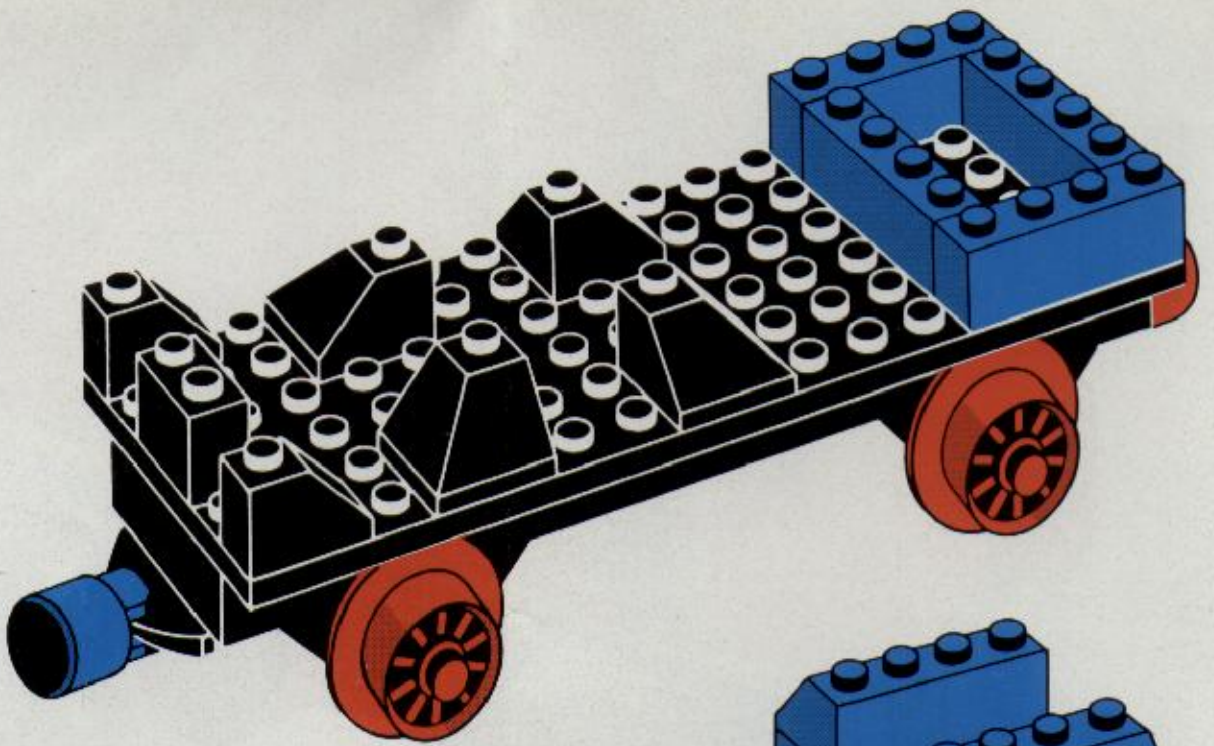




2





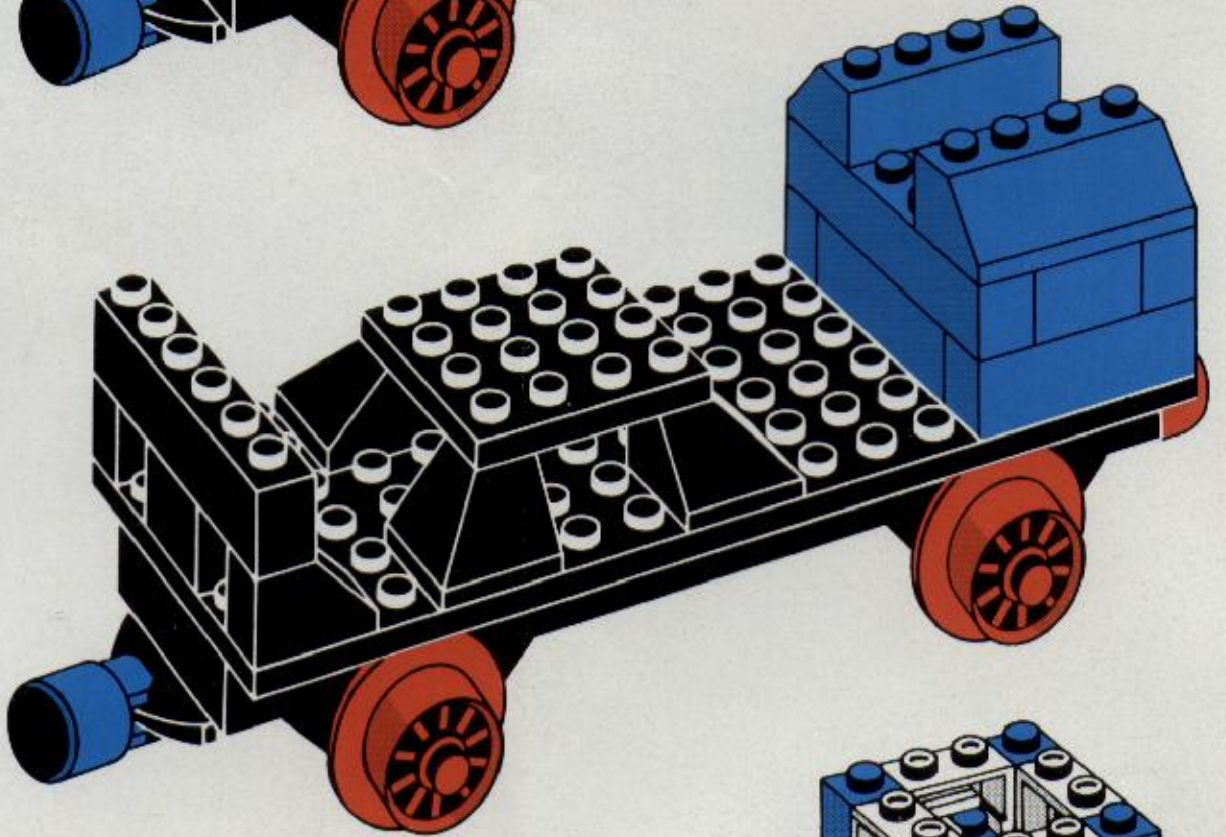 


3

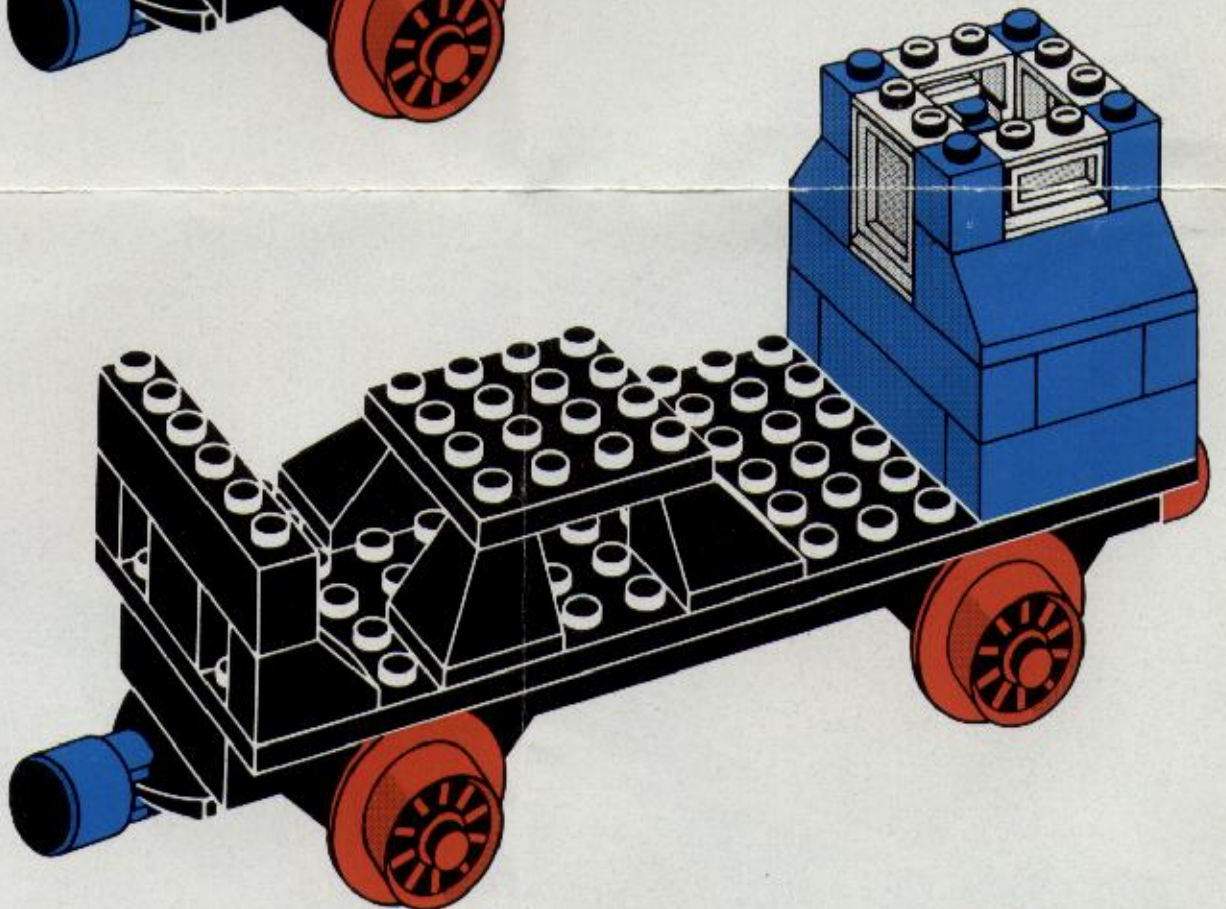 


4

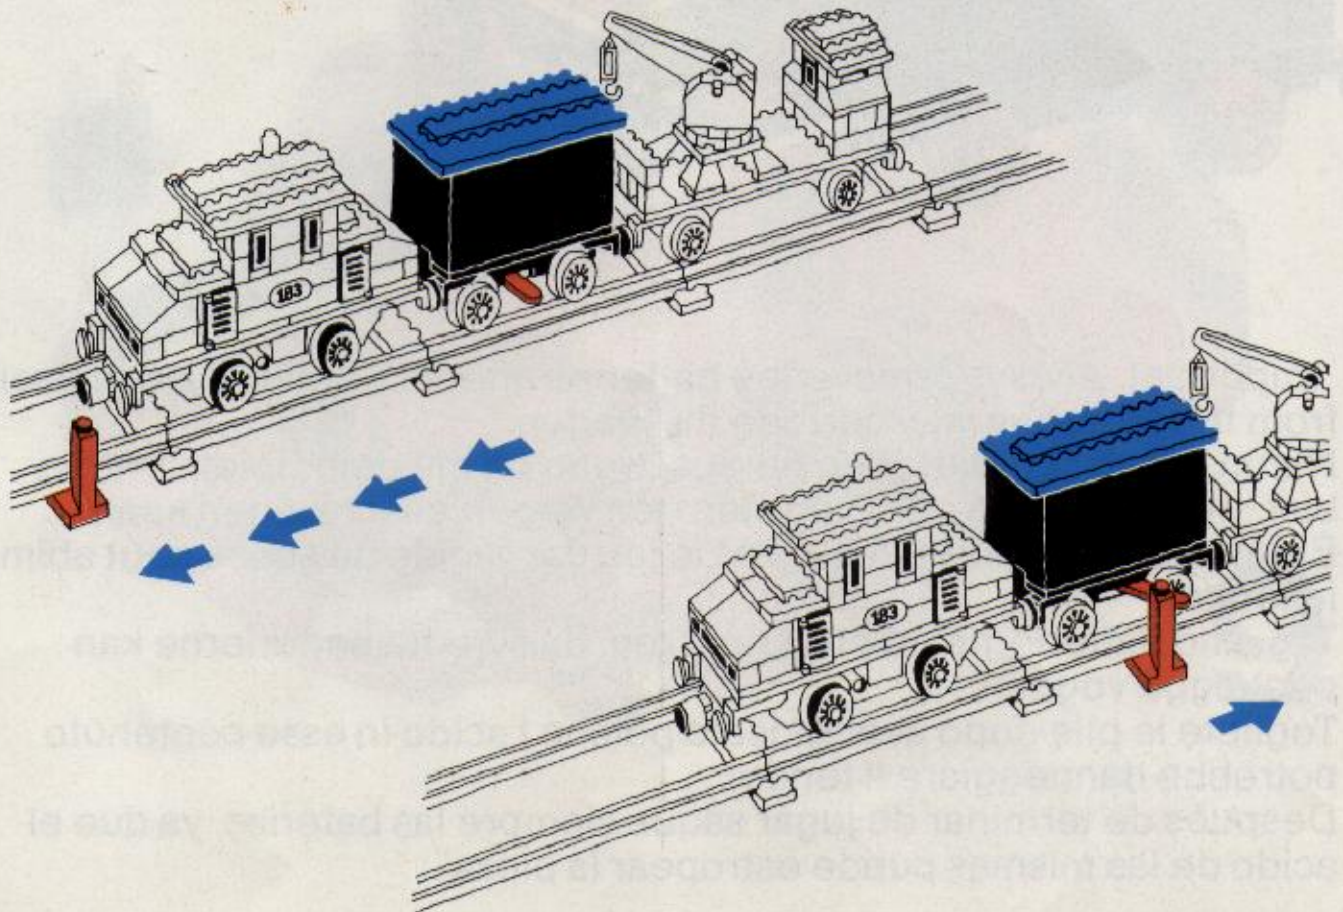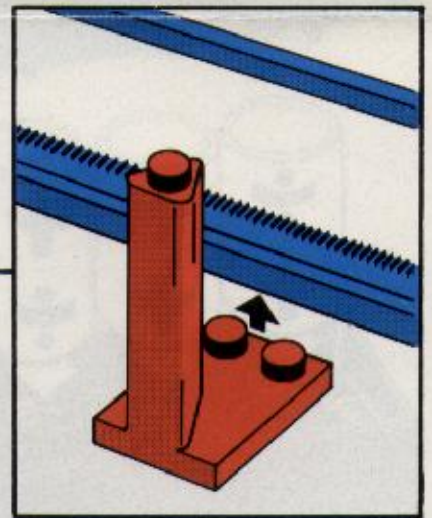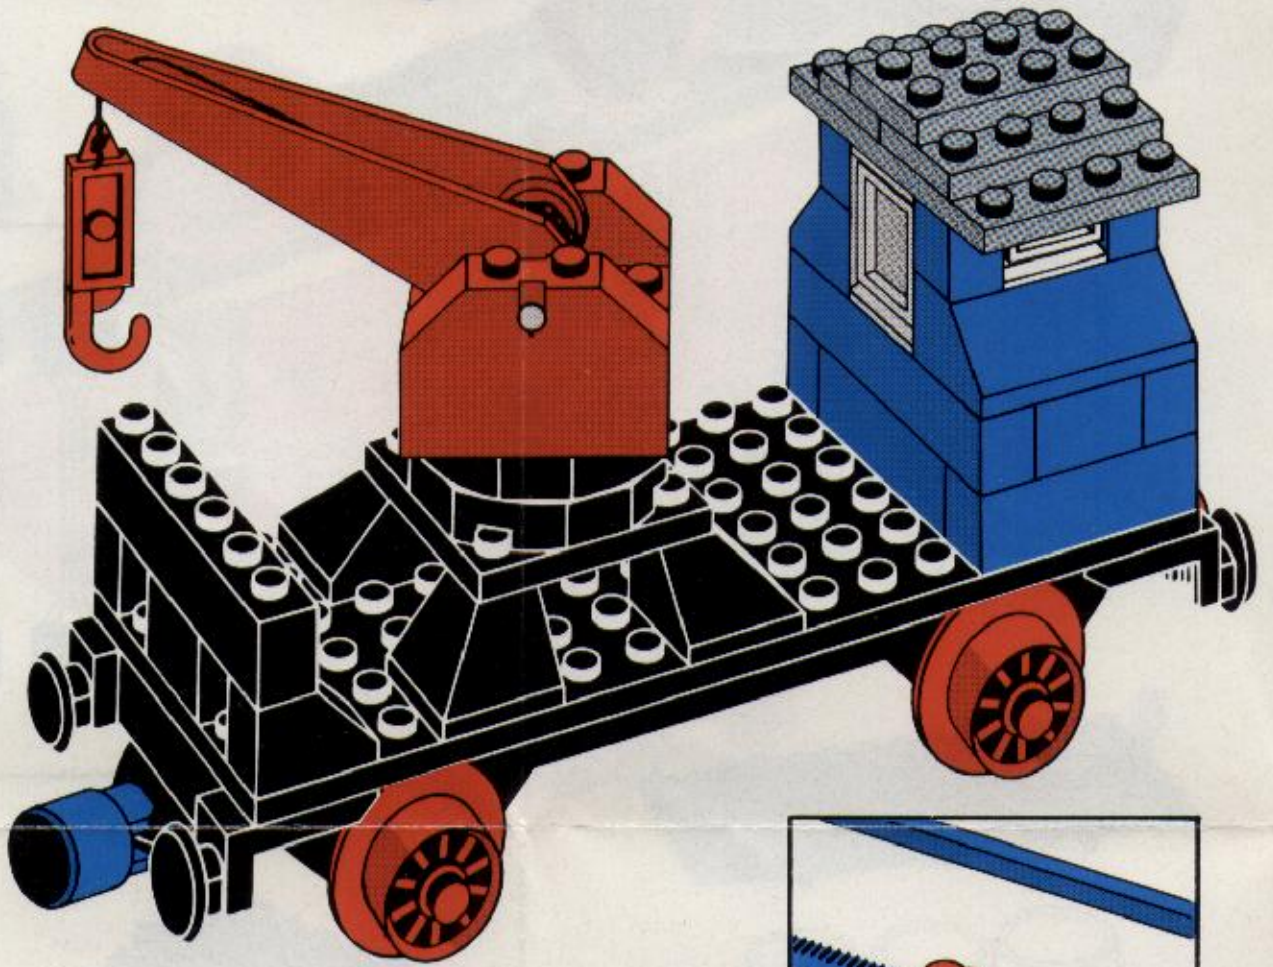   

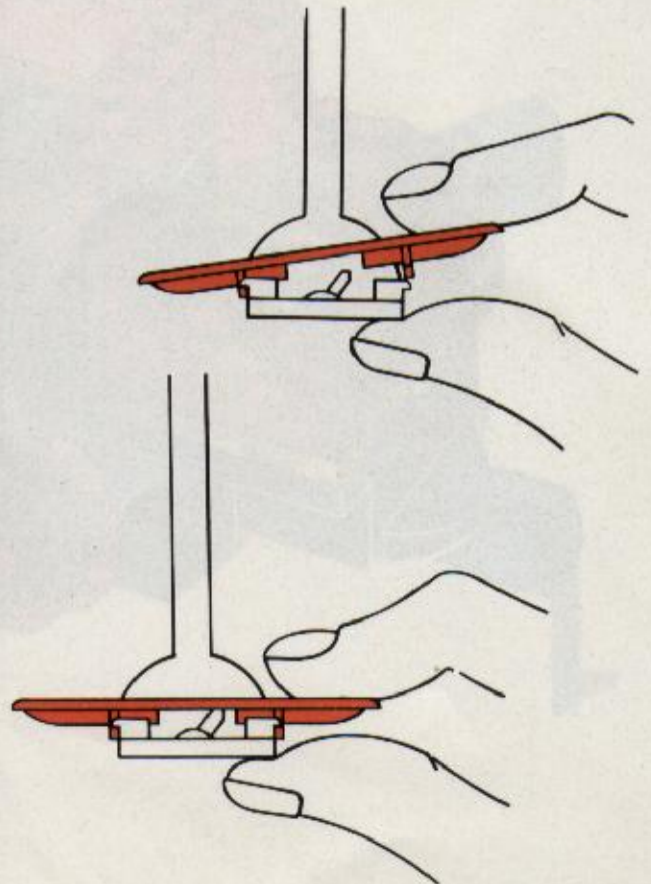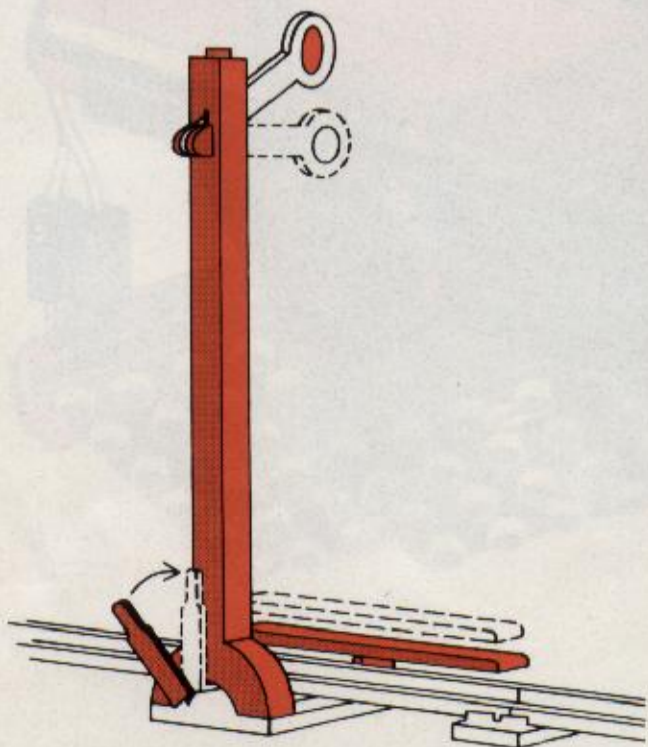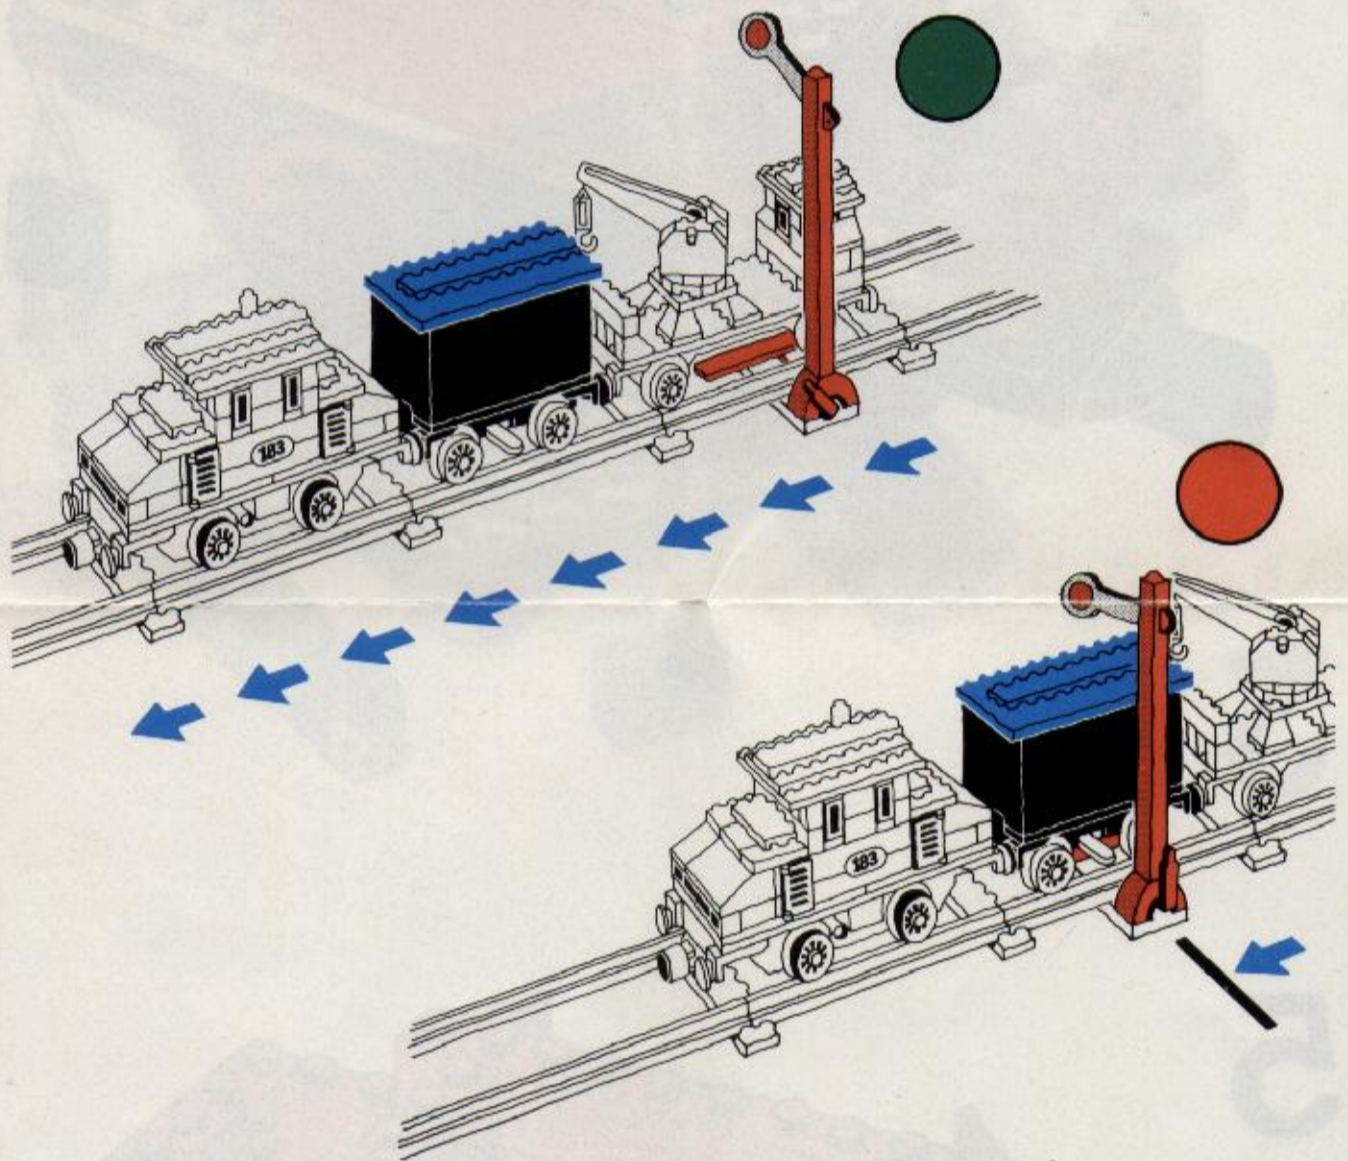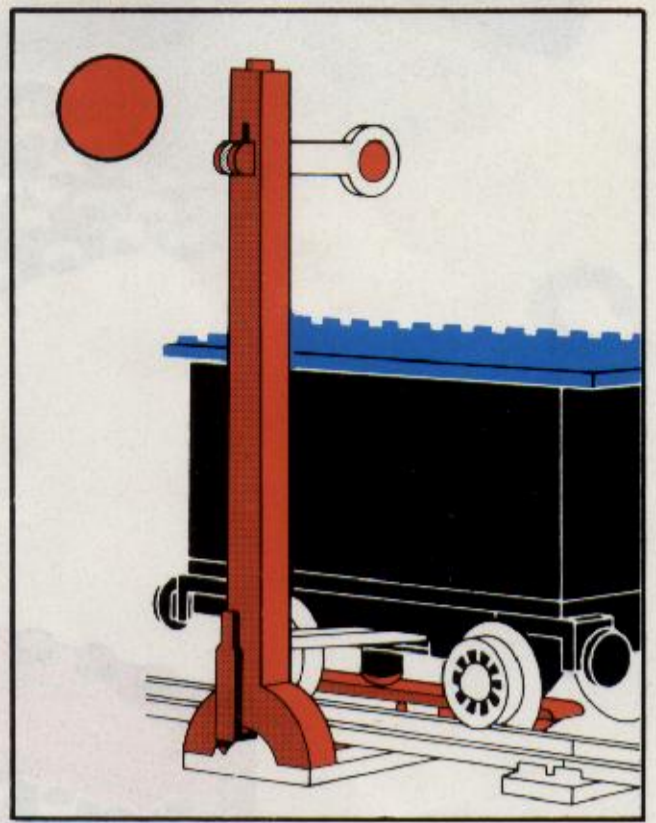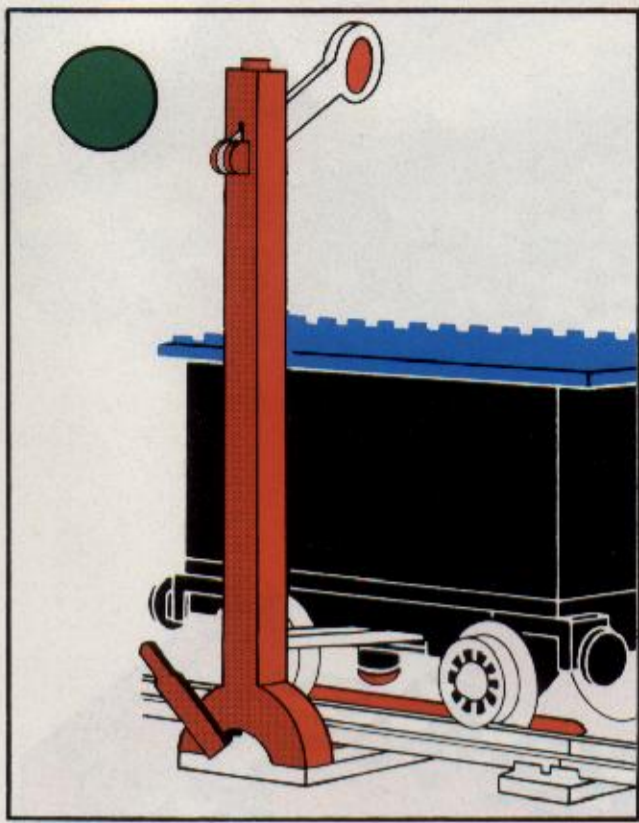     




137

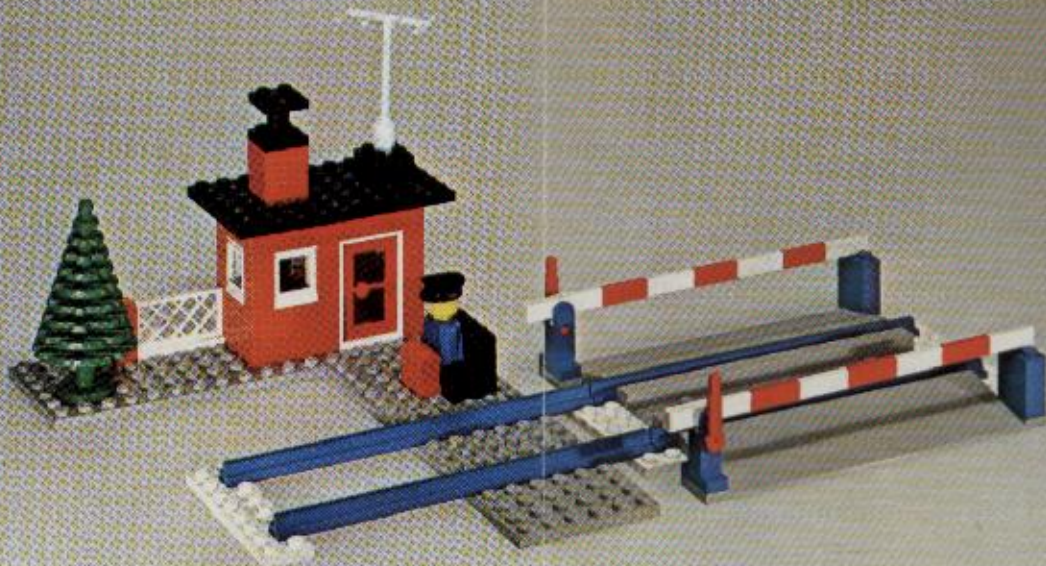 

146

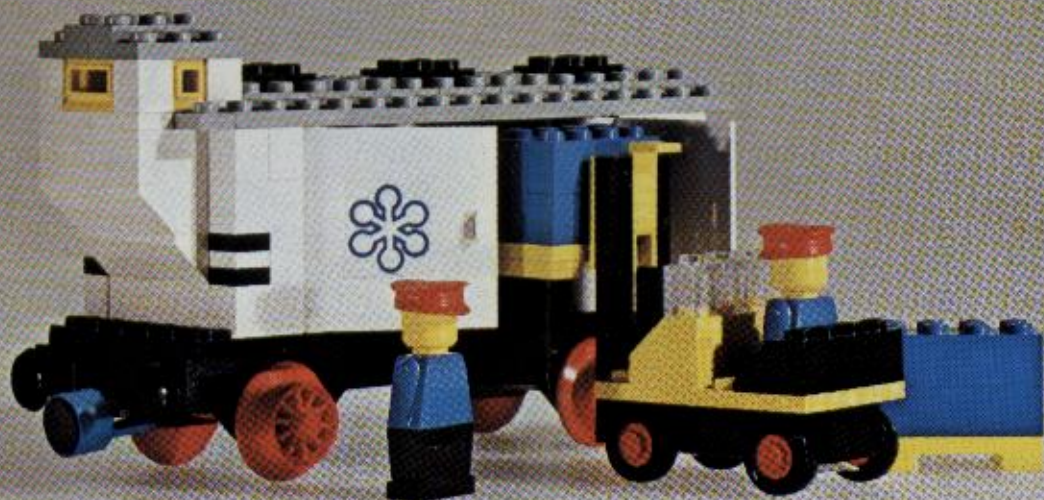 

147



149

183

183

183

004747

International
TRANSPORT

International
TRANSPORT

0 CM

1

2

3

4

5

6

7

8