



 
CITY

 
60113




LEGO.com/city



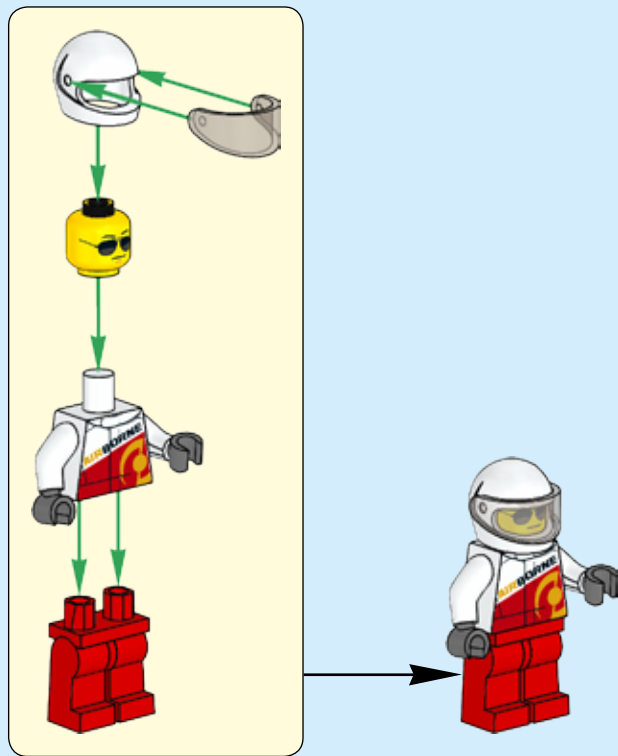

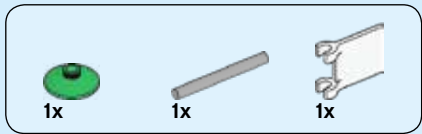


1

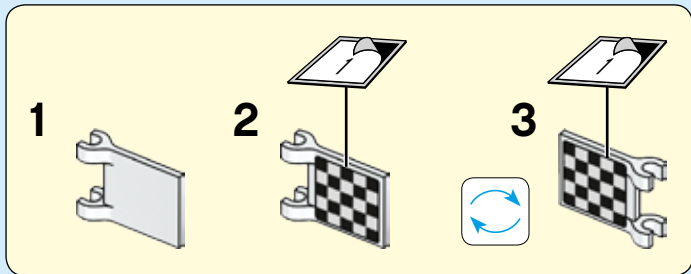 

1




 
2




3



  
4

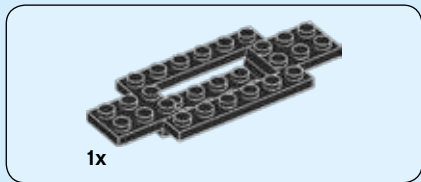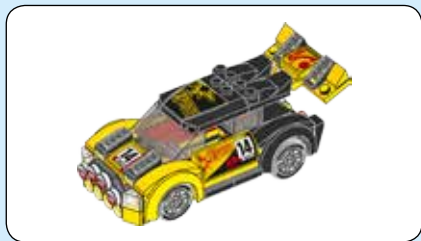

1

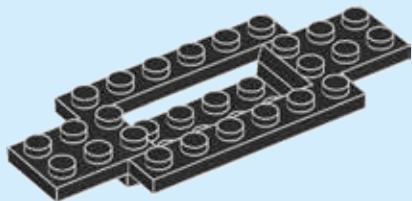 

2

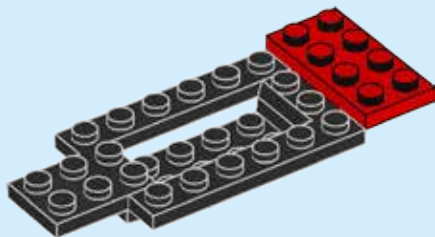 




2x




1x

 3

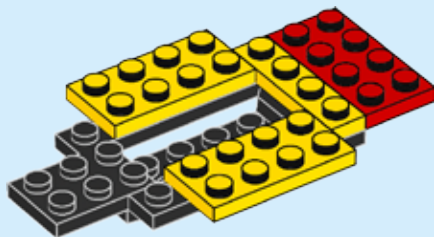




4

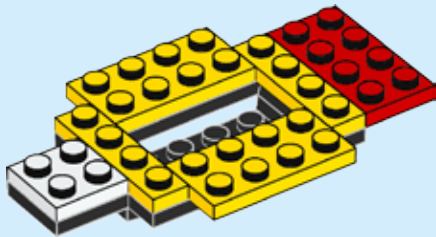 


5

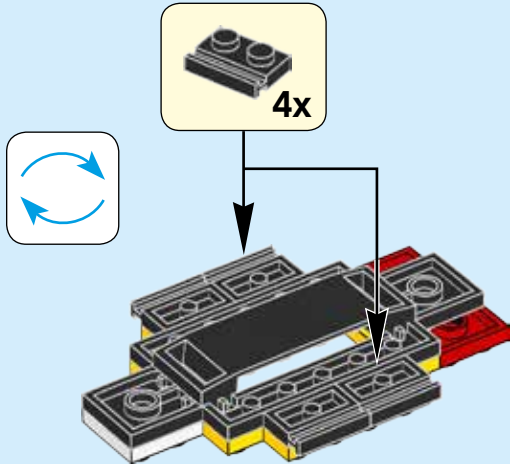 



2x

 6

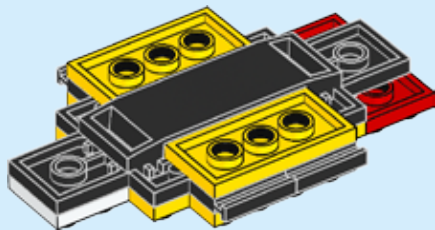


8




1x

 7

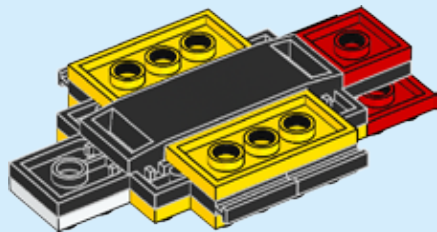

2x


 
8

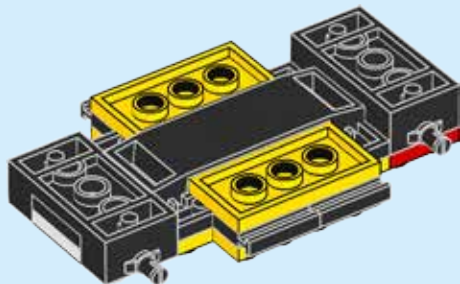



1x

  9

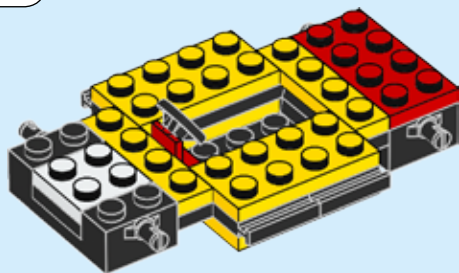




1x





1x

 10

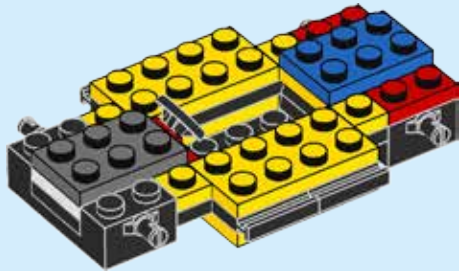

1x

  
11

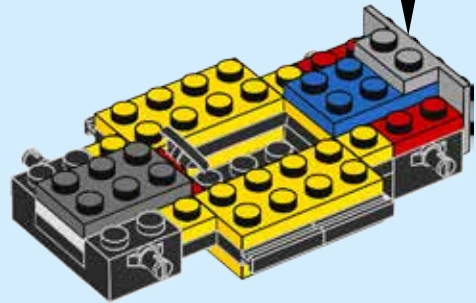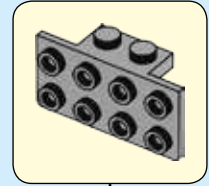



1x

 
12

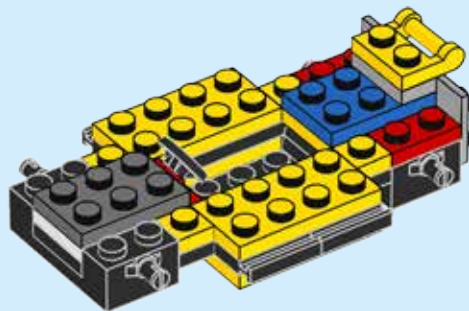



2x

 13

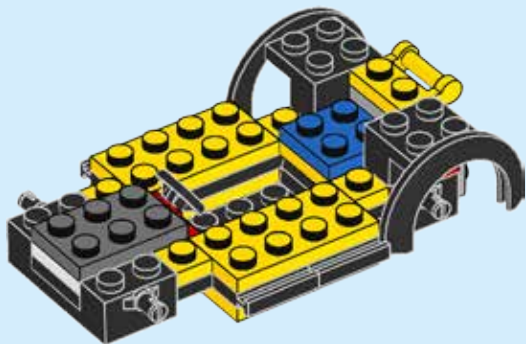


2x



2x

 
14

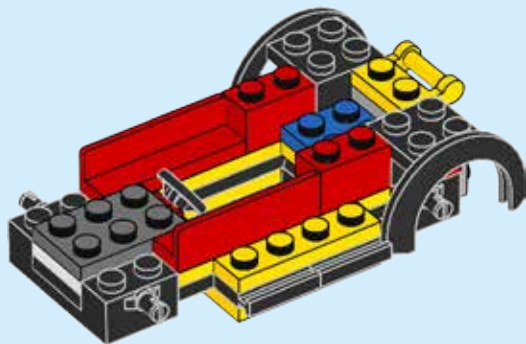






1x

  15

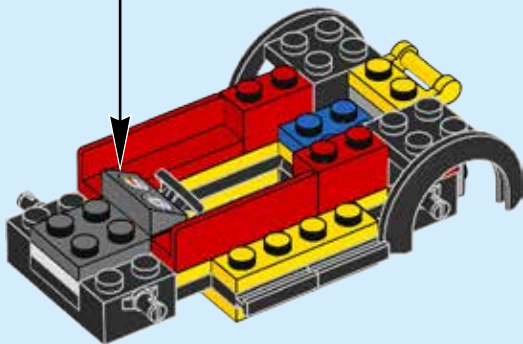


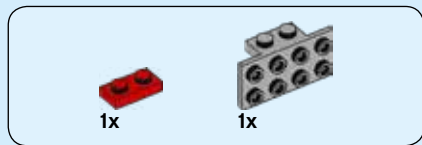

16

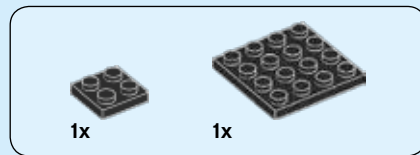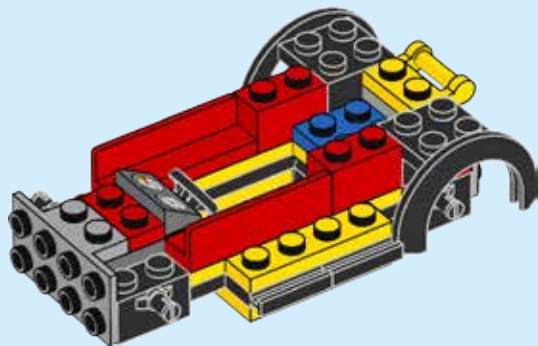  


17

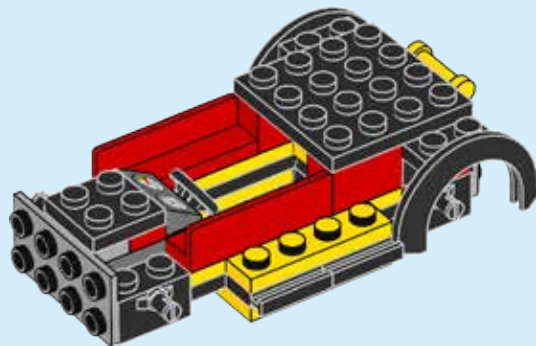 



1x

 
18

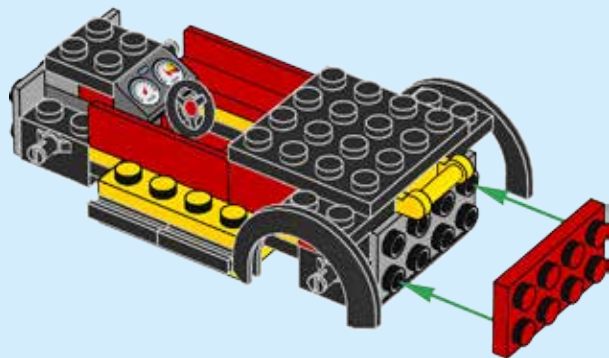




1x

 
19

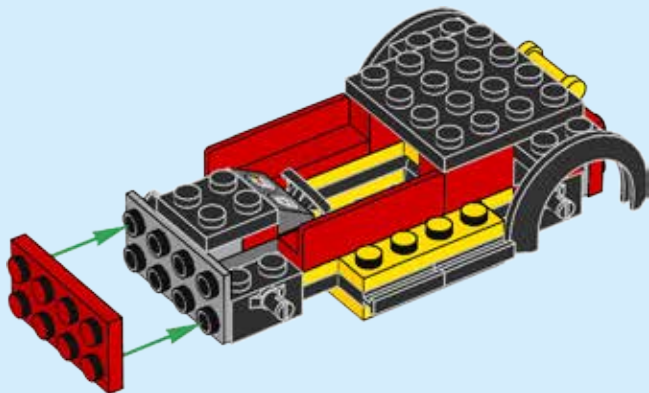

2x

 
 
20

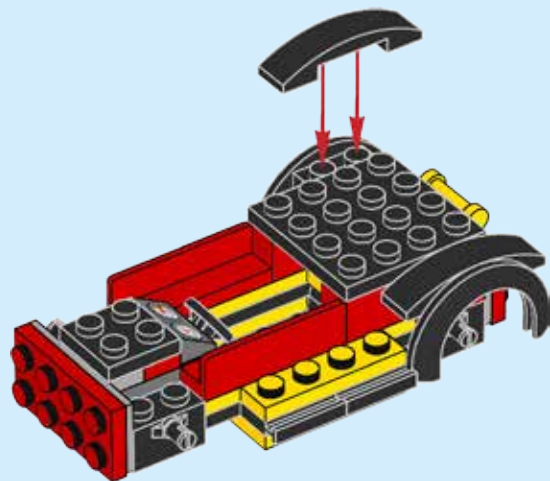




1x

   21

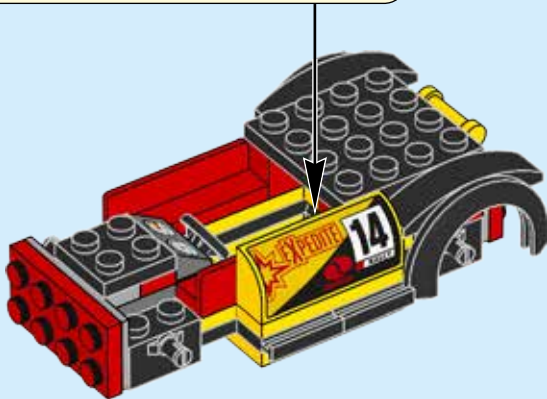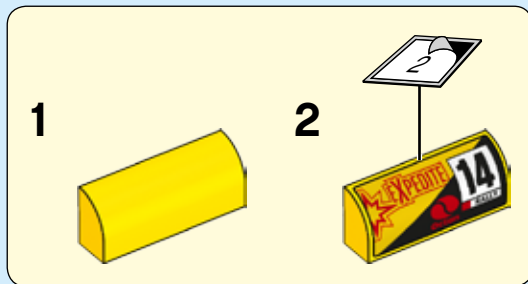





1x

22

 1

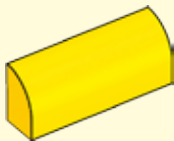



2

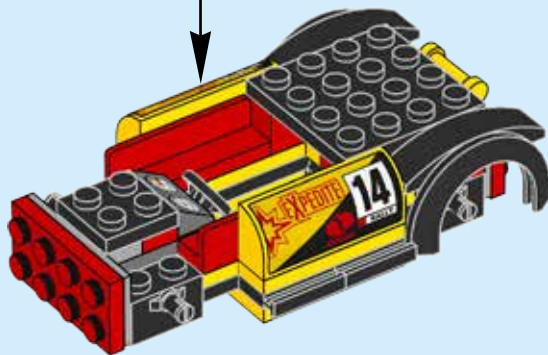 



1x

  23

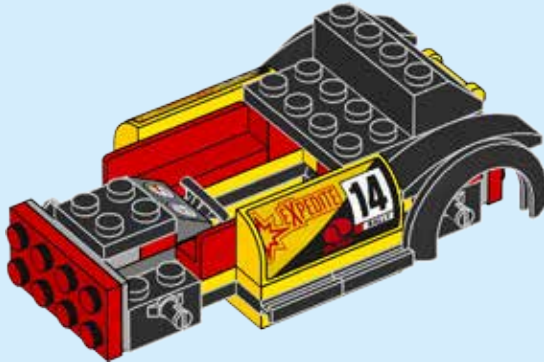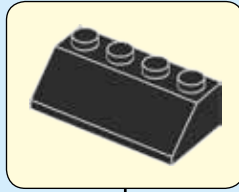




1x



2x

 24

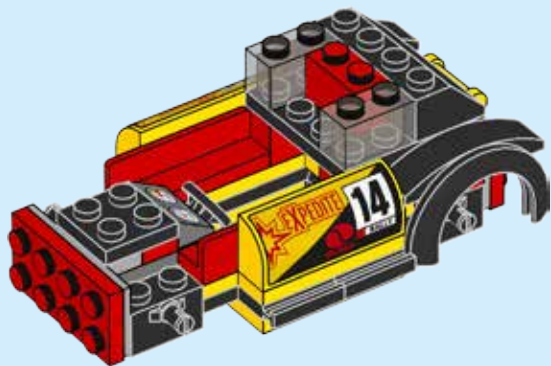


2x

25





 26

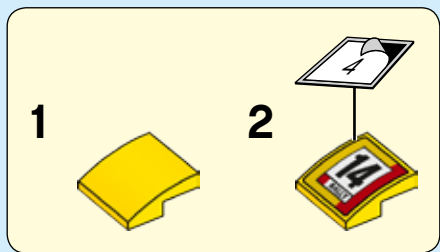



2x



2x

27

1



2



2x

 






2x

28



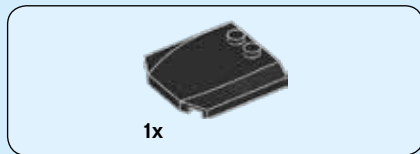

29

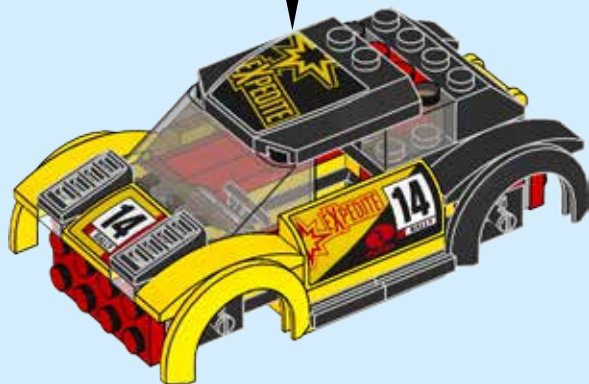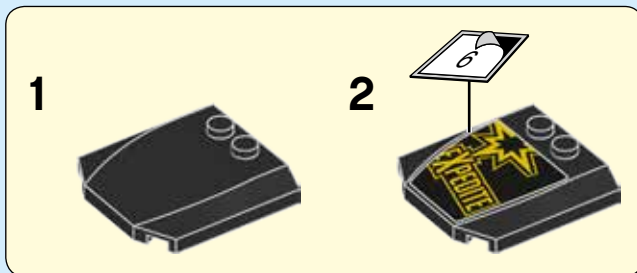  






2x

 30




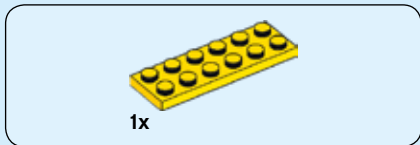

31

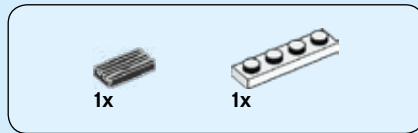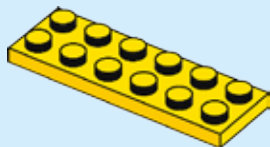  


32

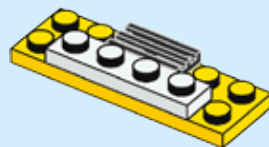 



1x

 33

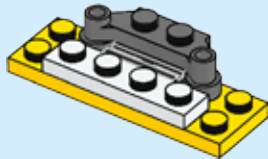




2x




2x

 34

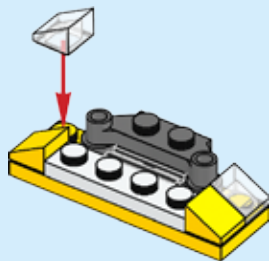

4x

 
35

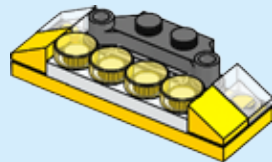





4x

 36

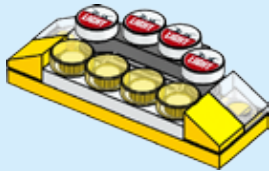


37

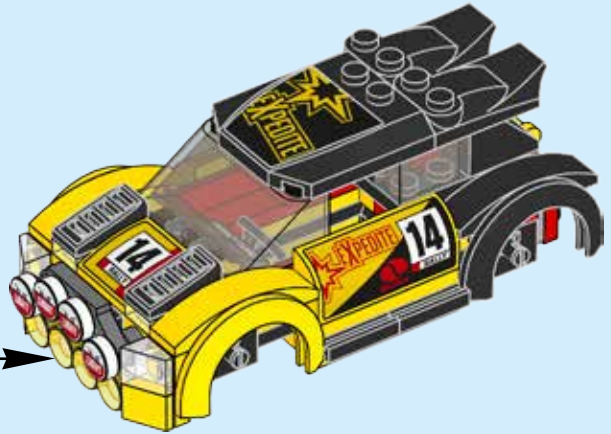 

 

1x

 38

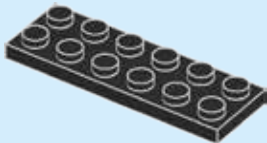

2x



2x

39





2x

40



 
41





1x

42

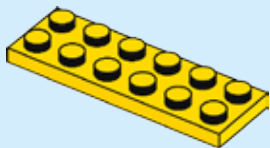


2x



2x

 
43

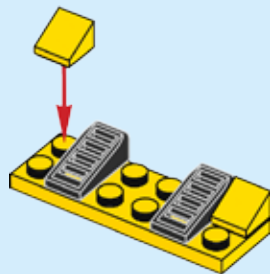





1x

 44

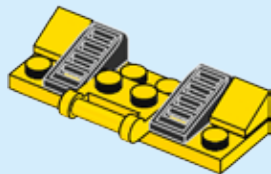

1x

  
45

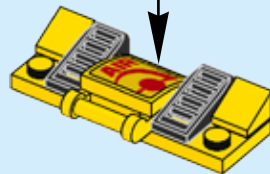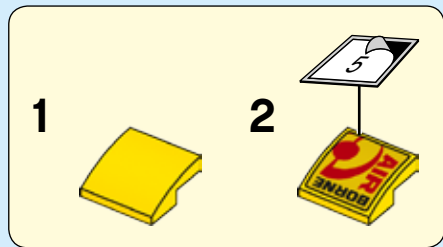



2x

 46


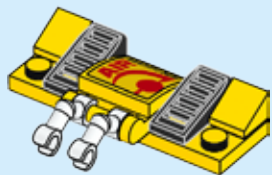



47





   48

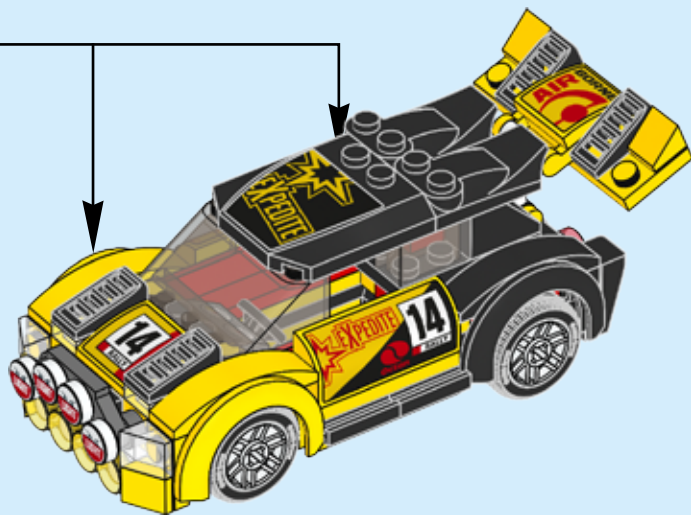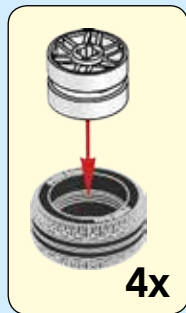

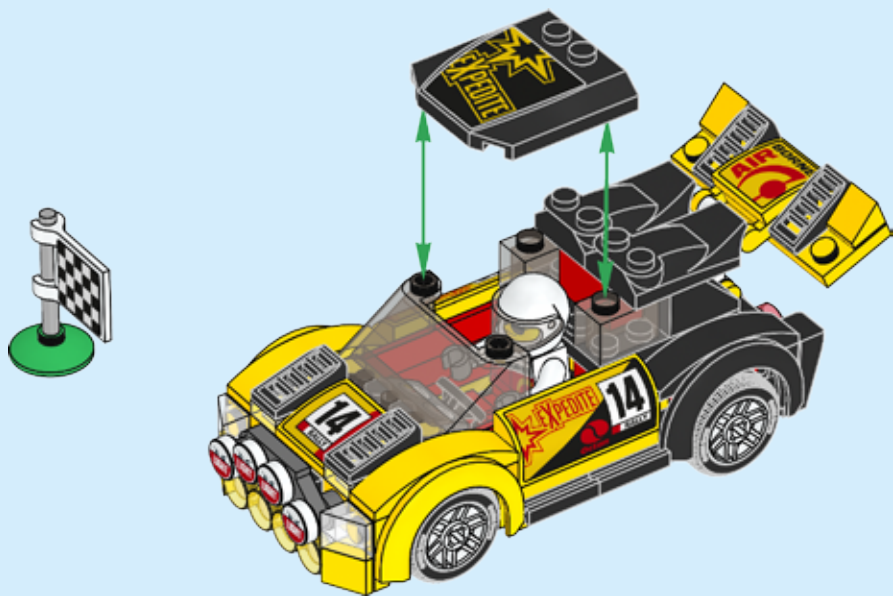



CITY



60076



60074

 


60073



60072

LEGO.COM/CITY

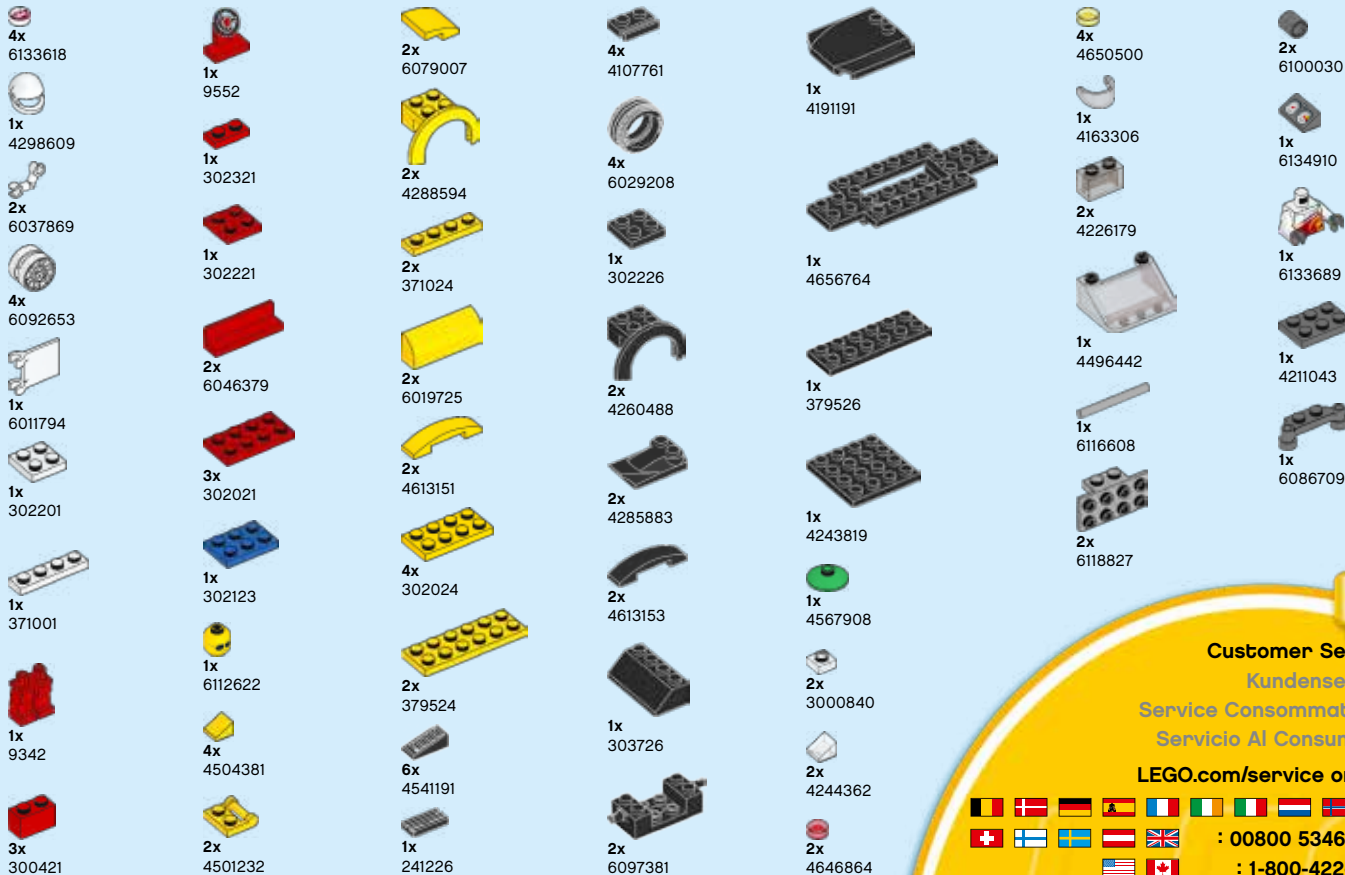

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346