



Mixels

CAMILLOT

 
41557




 LEGO.com

6150690


1

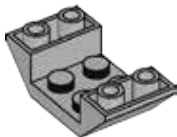

2

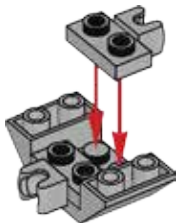 

3

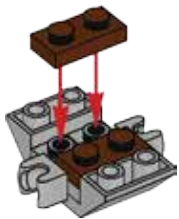 

4



 
5





6




7

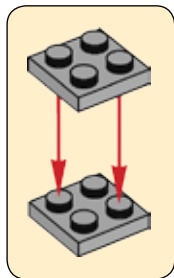


8

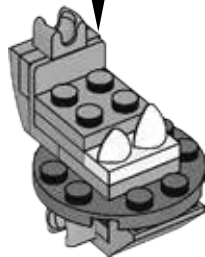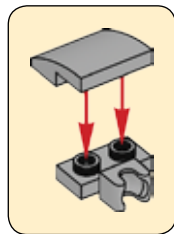  

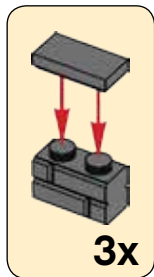 


9

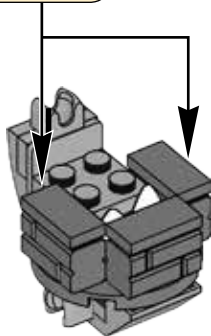 





10

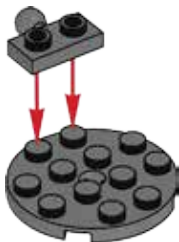 

11



  12

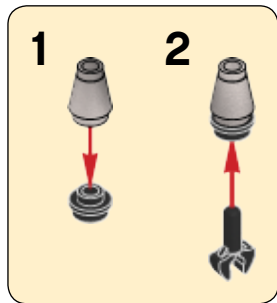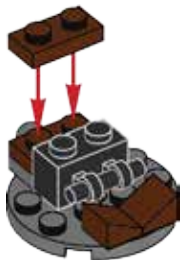


13



1



 2

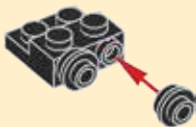

3



 
14



15



16

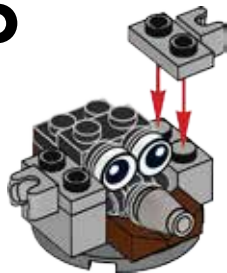

17



18



 
19




20



21

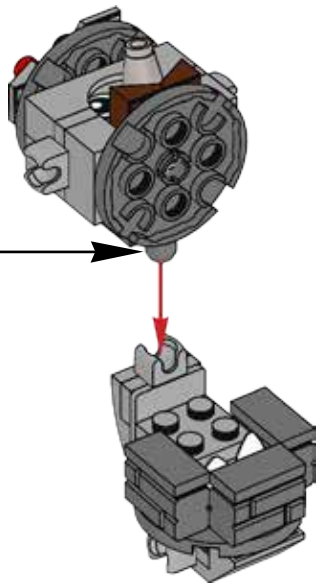

22

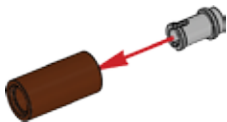 


23





24



 25

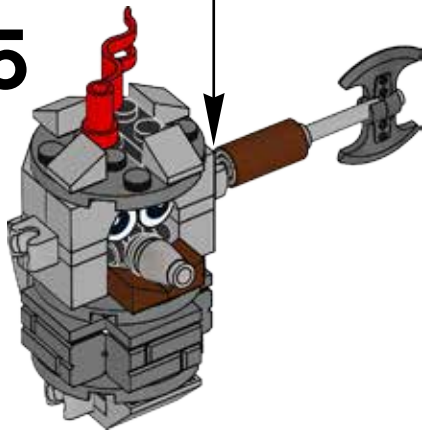


26

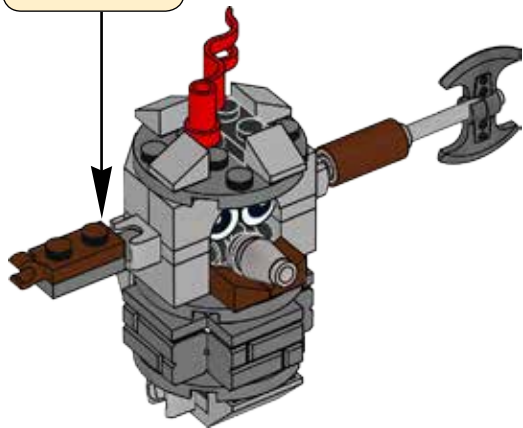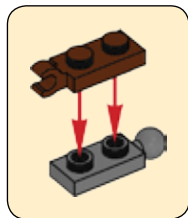  




27

 

28



 29

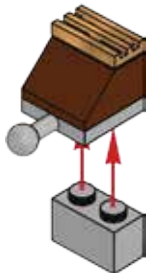


30



2x

 31

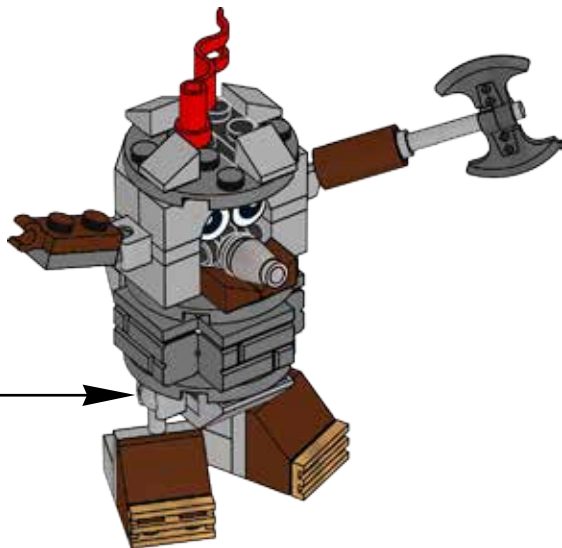



2x
6029156



3x
6100627



1x
4288212



4x
4211150



4x
4521921



3x
4211397



1x
6039479



1x
6046384



1x
4289538



1x
6052126



1x
6008297



5x
6043656



1x
6102357



3x
6000311



1x
6121350



1x
4184169



2x
4504376



2x
4211202



4x
4211388



2x
6063611



1x
6123814



2x
4490599



1x
4569733



1x
6055781



1x
4211483



1x
4654580



1x
4211435



3x
4528323



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



1x
6116608



3x
4211052



1x
449521



**CAMILLOT
41557**

 


**MIXADEL
41558**



**PALADUM
41559**

**MEDIVALS
MAX!**

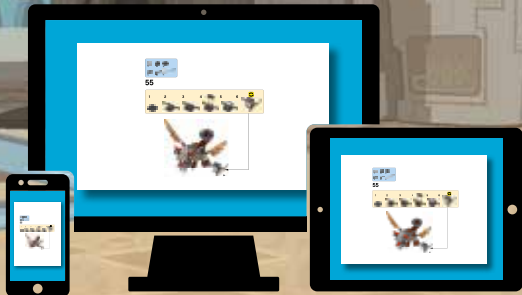

SERIES
7

WELCOME TO
MIXOPOLIS



PALADUM
41559



CAMILLOT
41557



JAMZY
41560



LEGO.com/mixels

KUFFS
41554



TAPSY
41561



BUSTO
41555



MIXADEL
41558



TRUMPSY
41562



TIKETZ
41556



Mixels™

WELCOME TO
MIXOPOLIS

