



 
Disney

40388



LEGO.com/disney



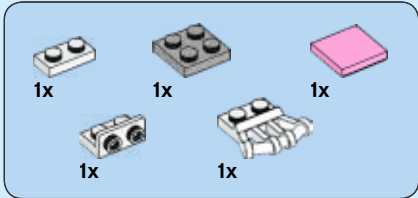


1




2



 3



4

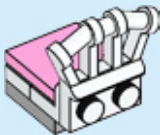 




1x



1x

 1

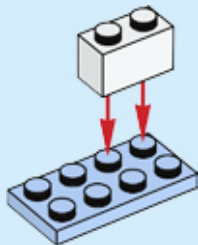

4



1x



2x

2



 


1x



2x

3

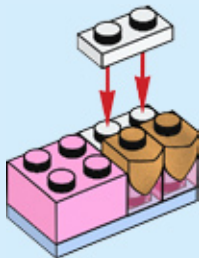

1x



1x

4



5

 


1x



1x

5

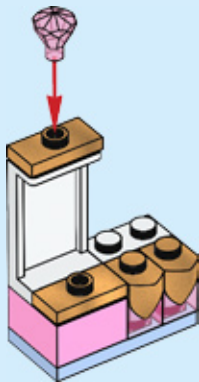

6



 
1x

6






7



8

 




1x



1x


 
9

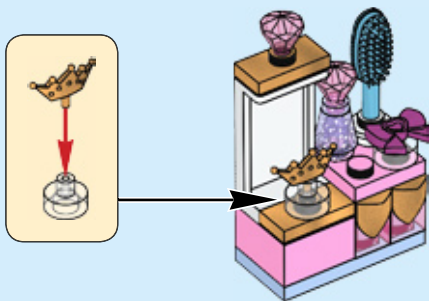


8




  1

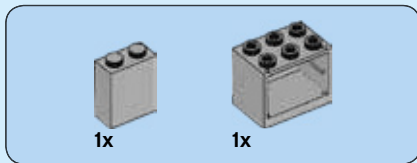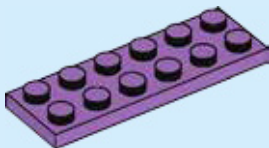


2

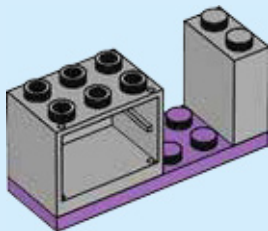 


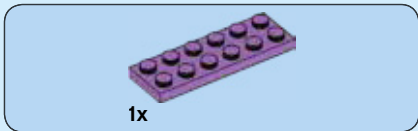 


3

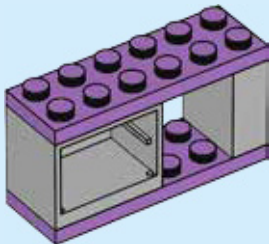 

10

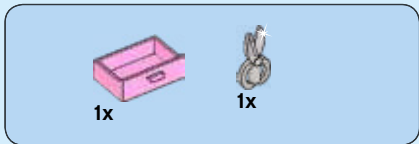 


4

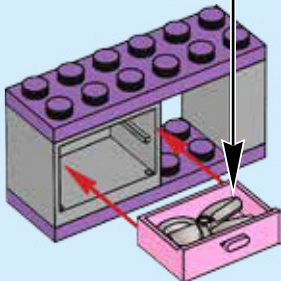 



2x

 5


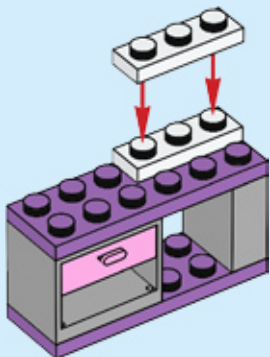


1x



1x

  6

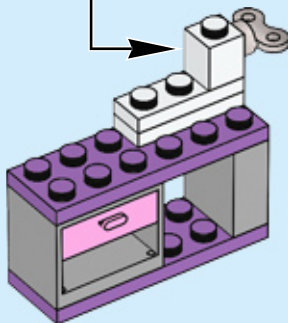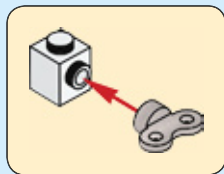





1x



1x

  7

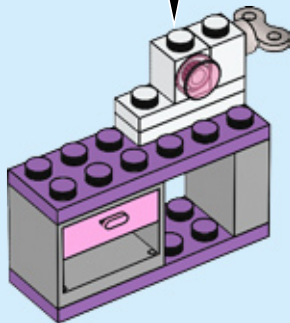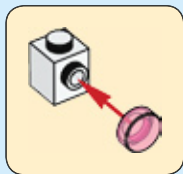


12



1x

 8

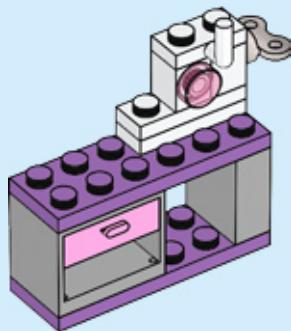




1x



1x

 9

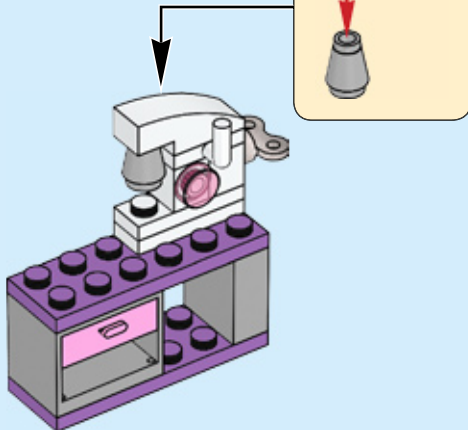


1x



1x

 10

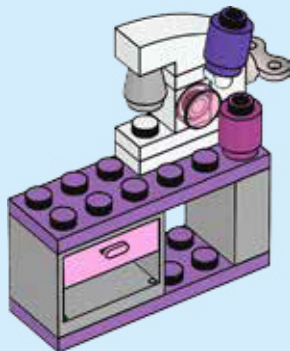





1x



1x

  11

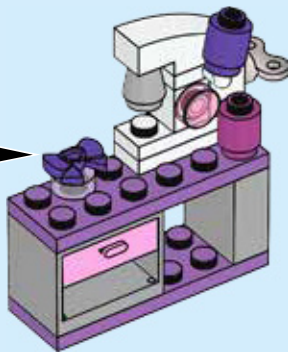

14

 


1x



1x

12






1x


2x

 
1

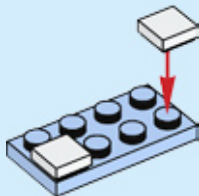

2x

  
2

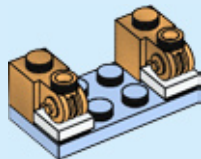



1x

 3

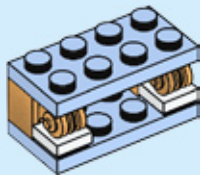

16



1x



1x

4



 


1x



1x

5



1x



2x



1x

6

1



 
2





1x

1

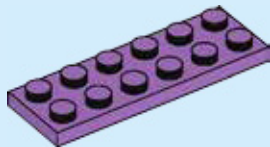


18



2x

 
2

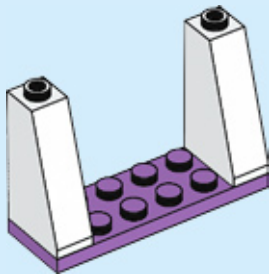




2x

 
3

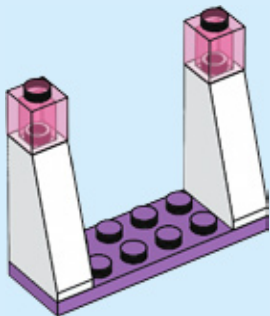



2x

  
4

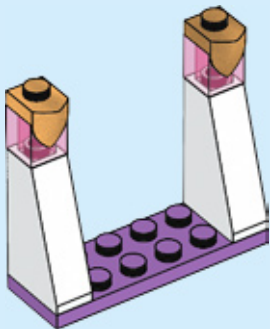

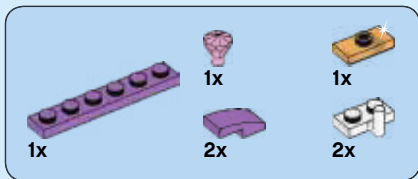

5

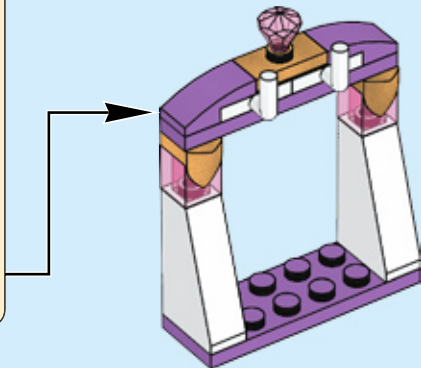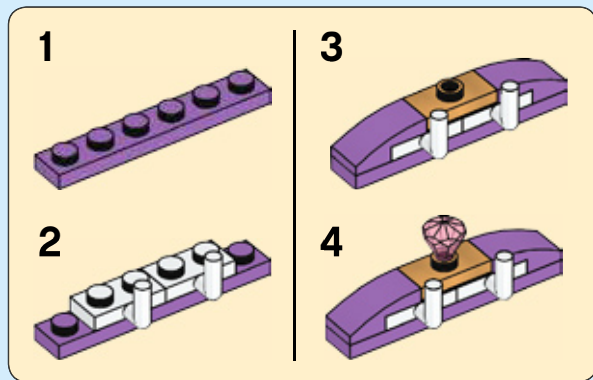  



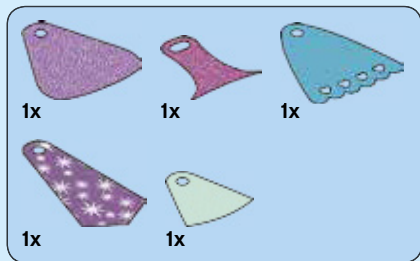 


6





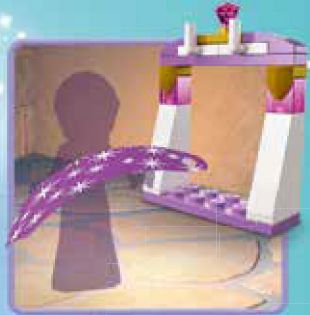 

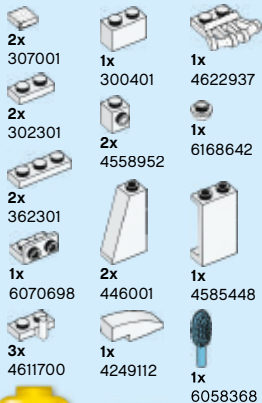  

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :

1-800-422-5346 :