



# CREATOR

6741



6745

 


6743



6747



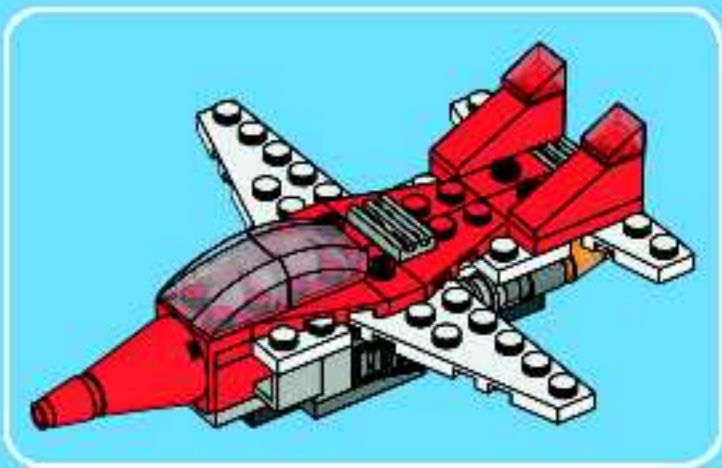

1

 


2


2




3

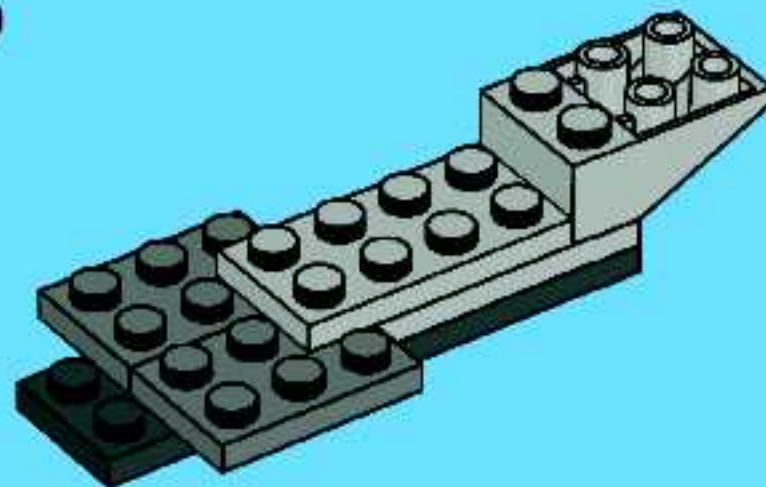



4

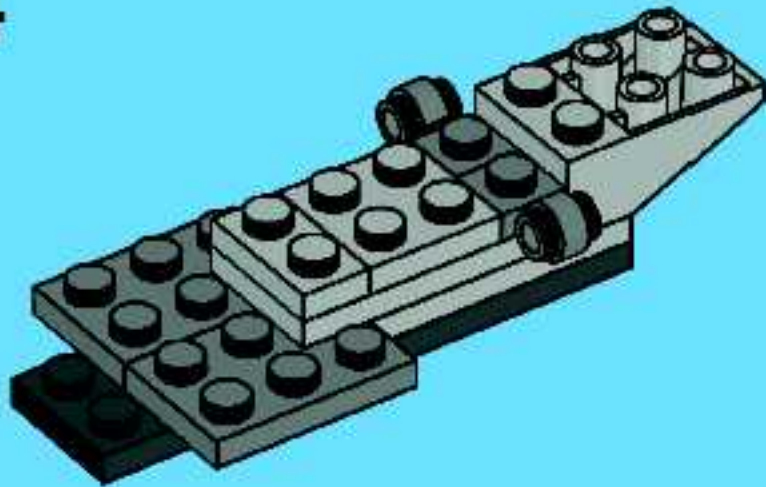 


5

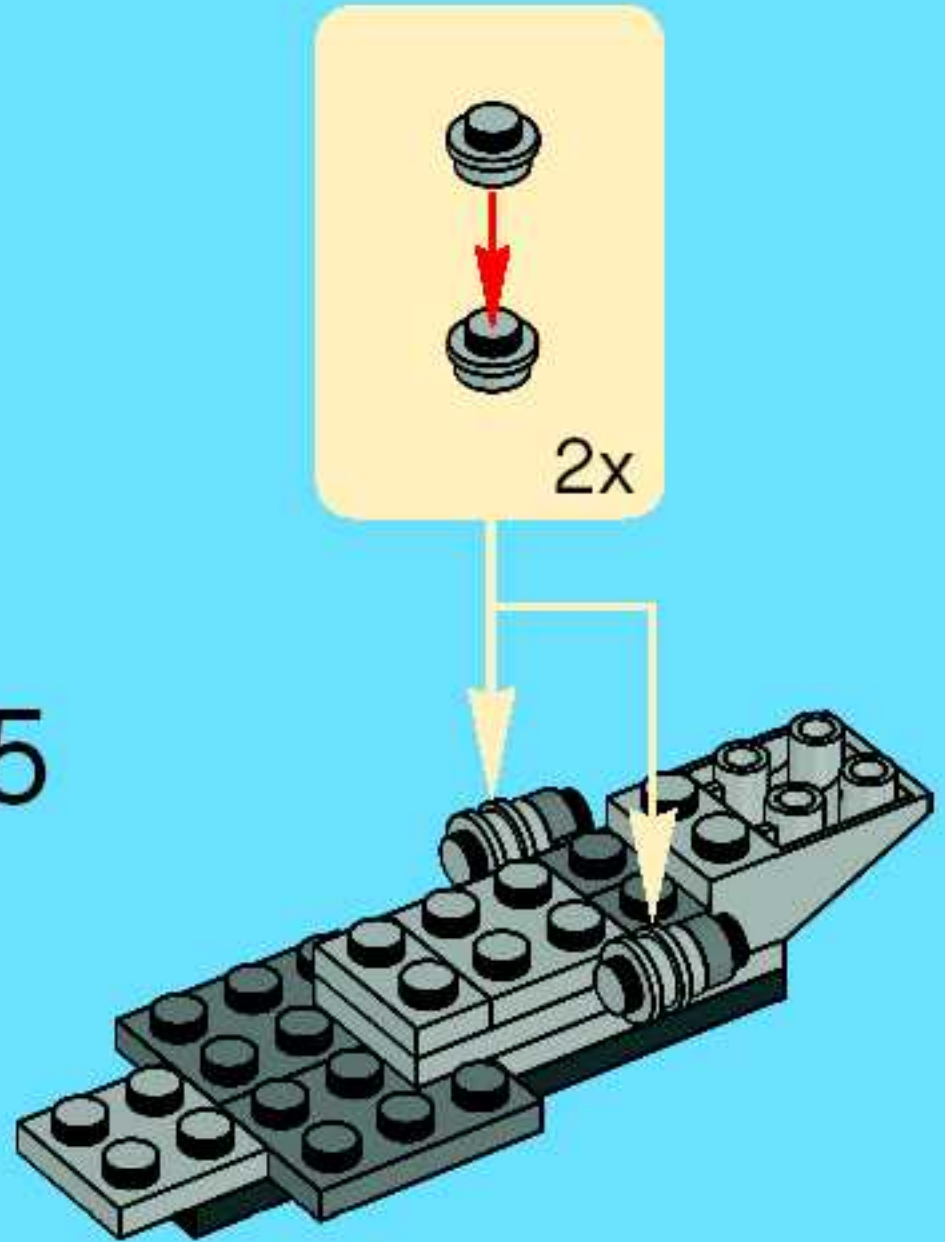 


6

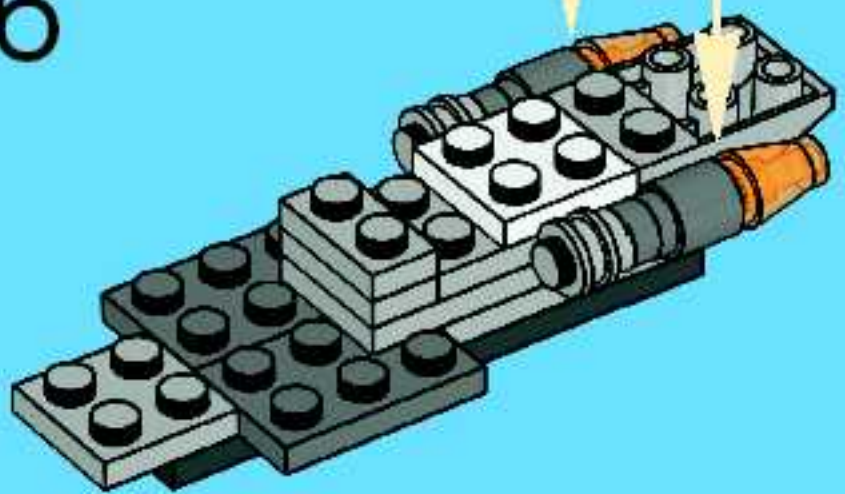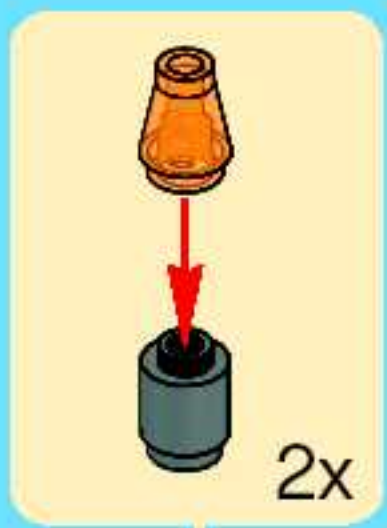  


7

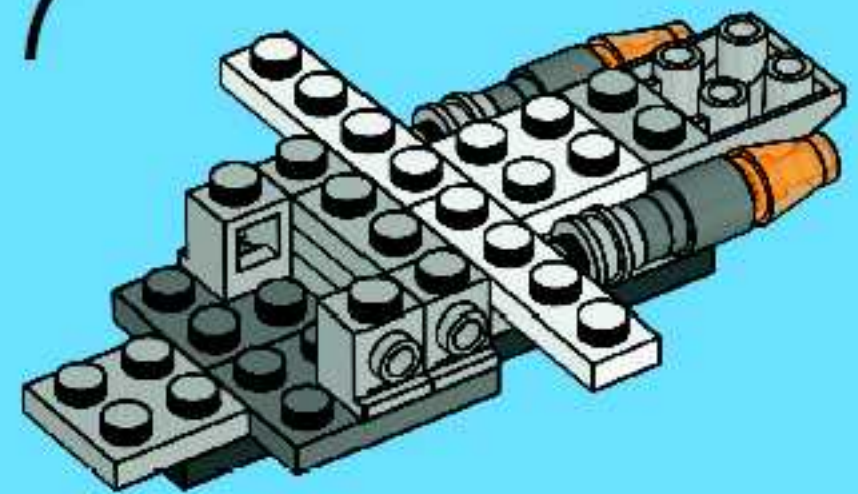 


8

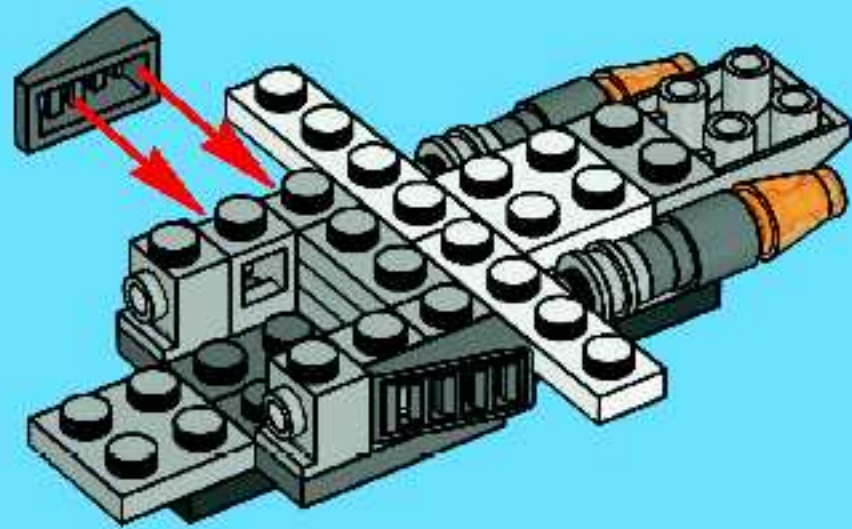 


9

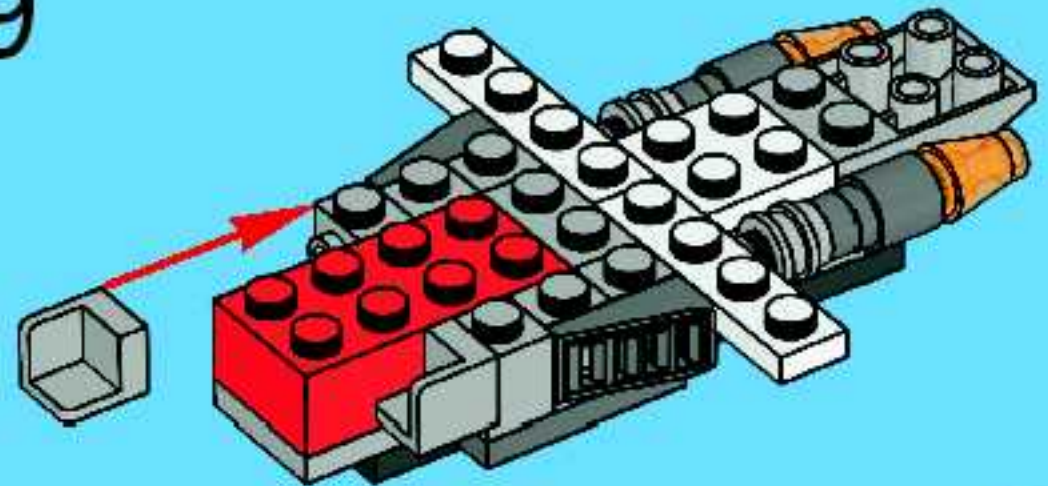 


10

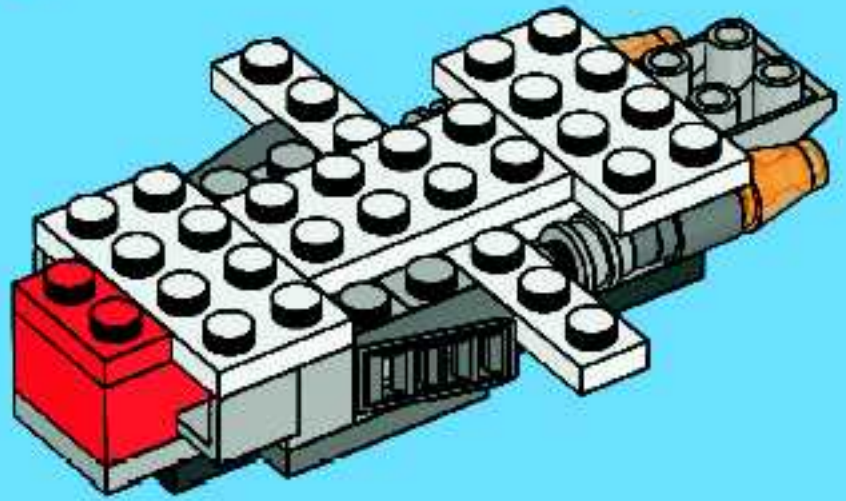 


11

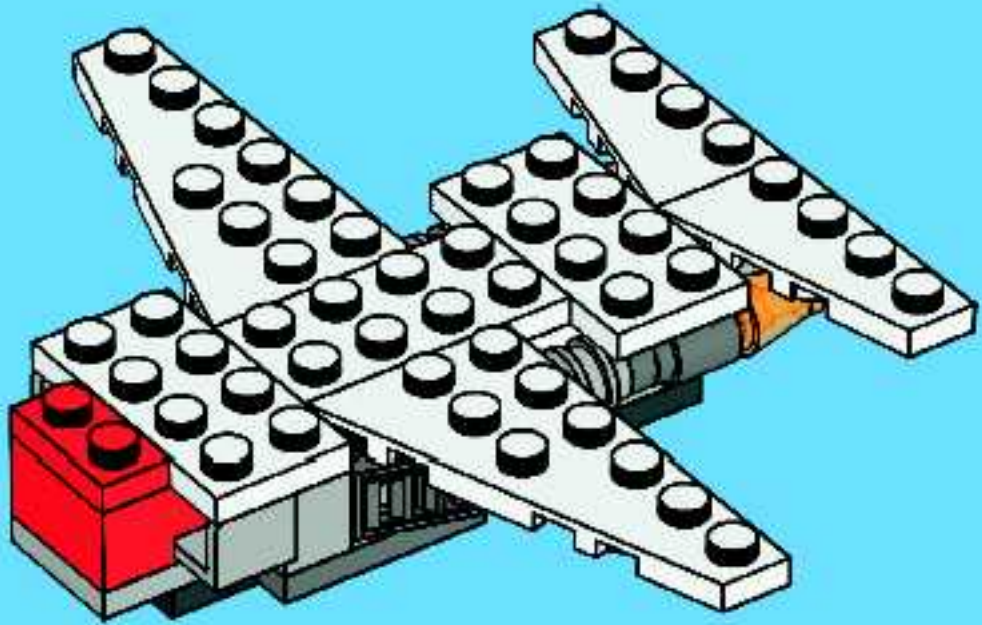 


12

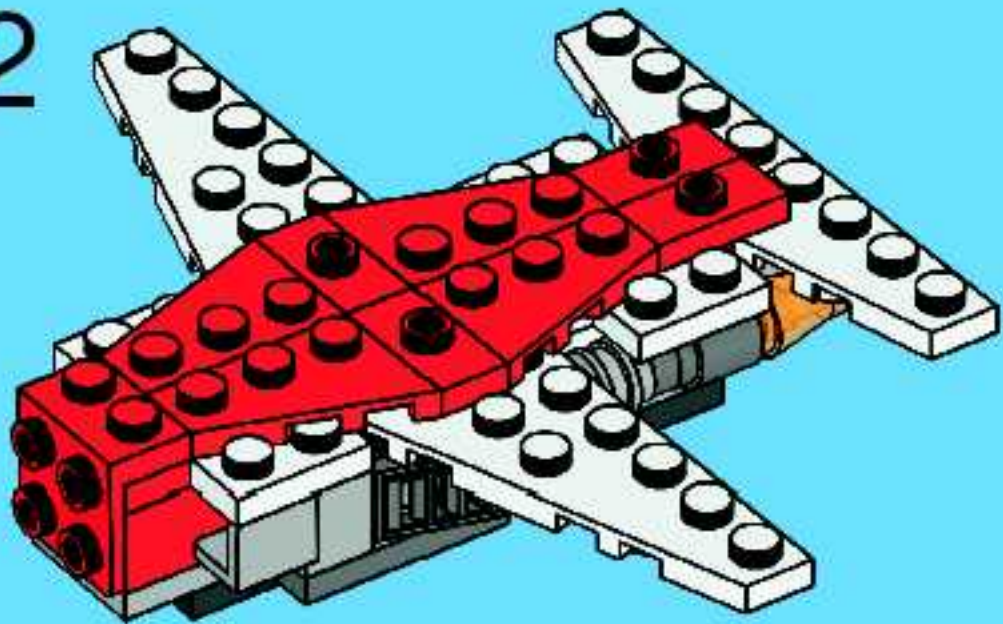 

13

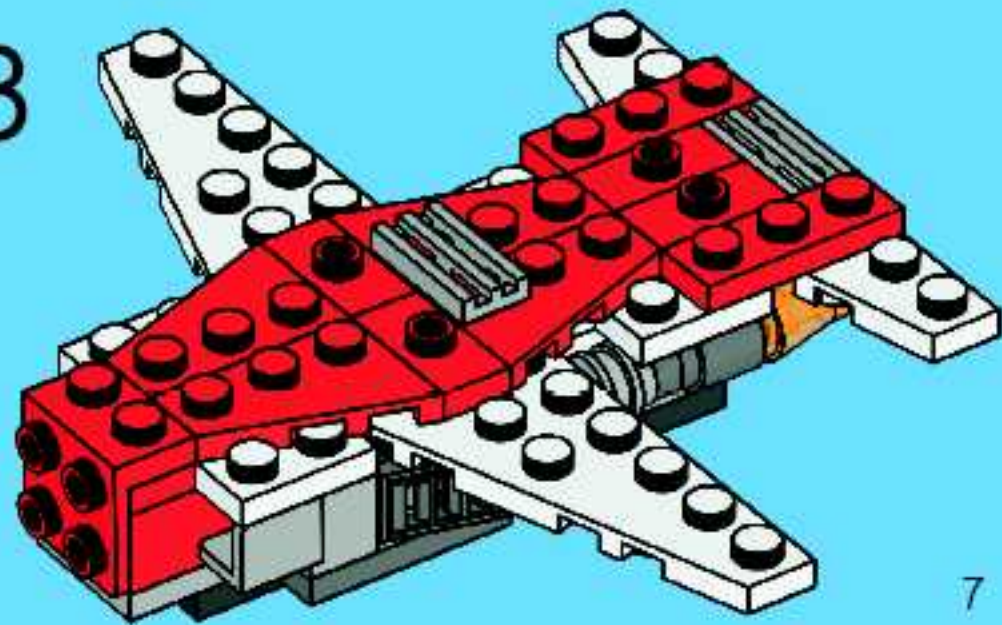 



14

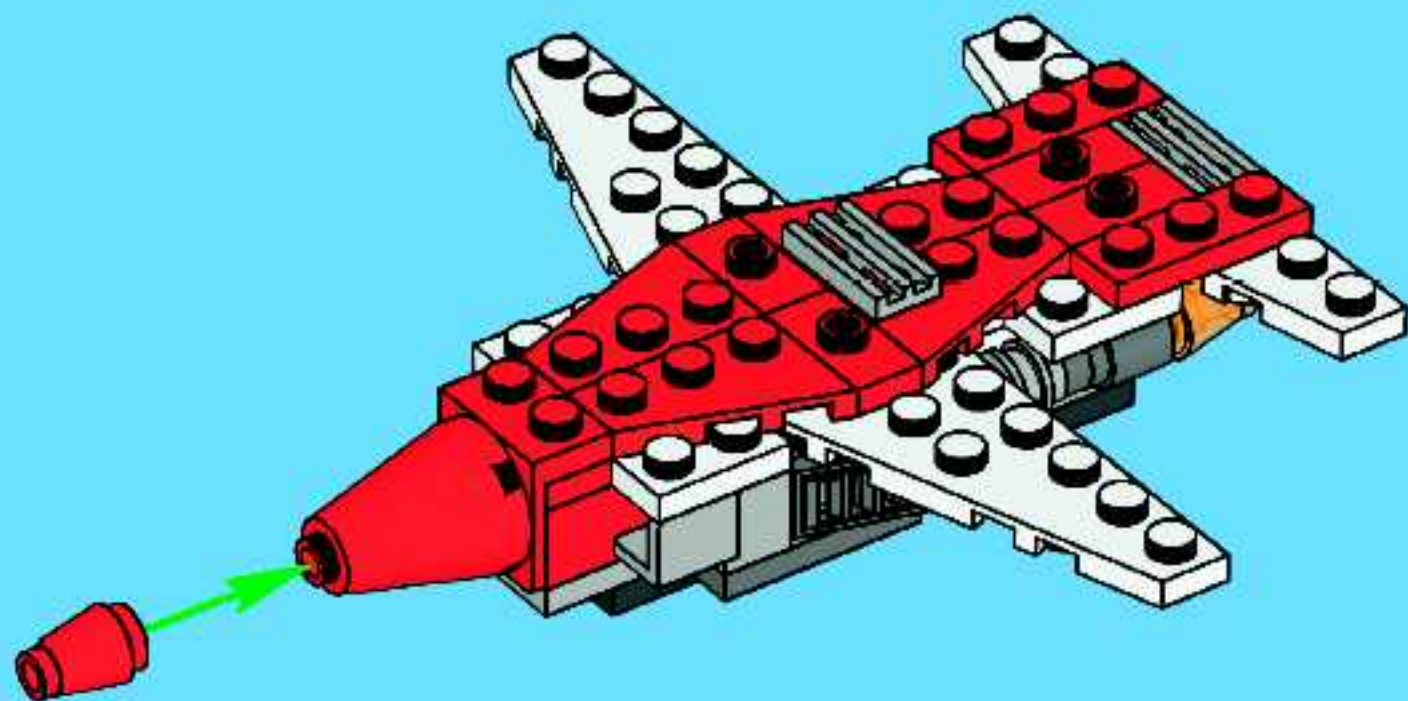 




15

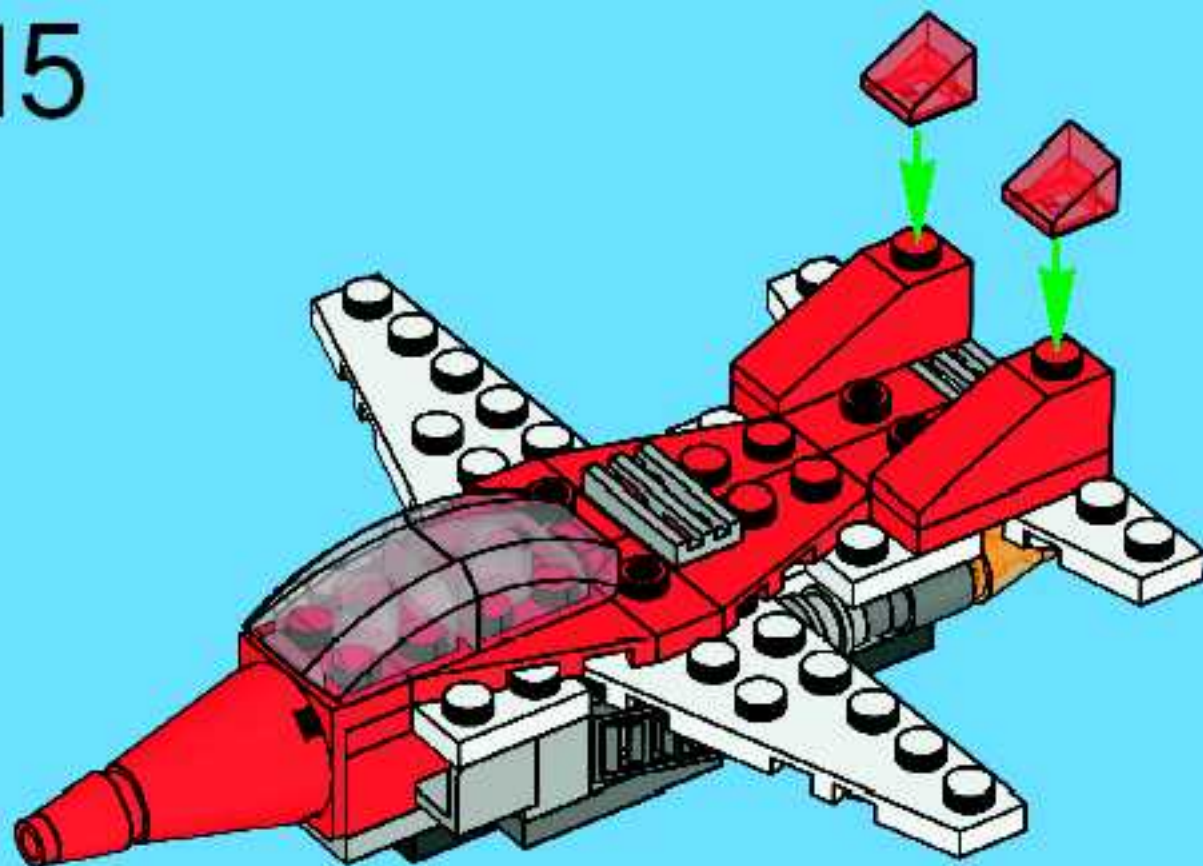 


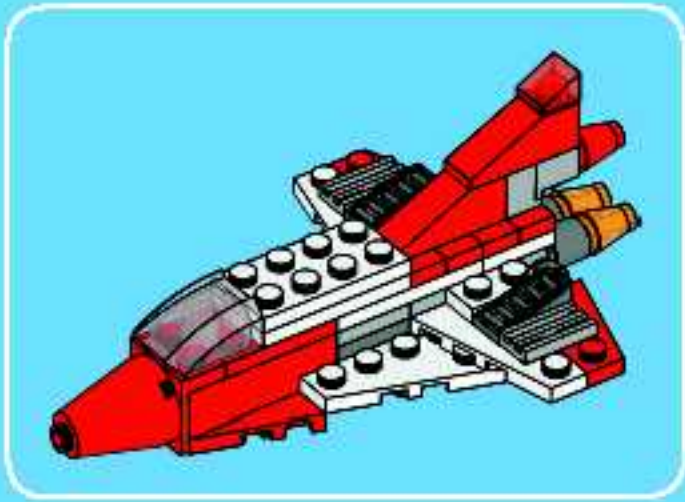 


1

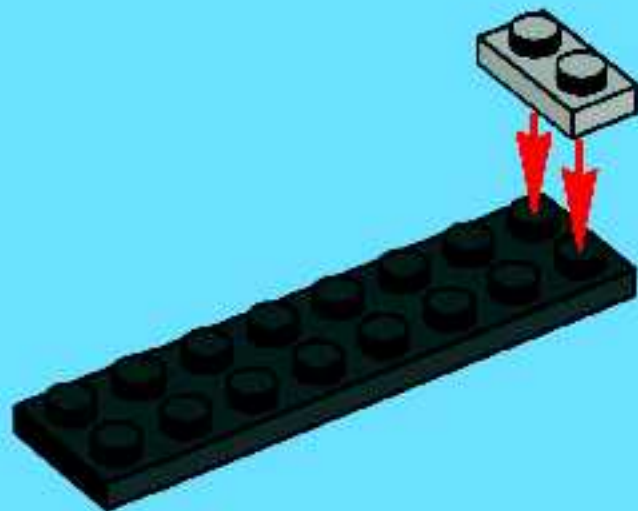 



2

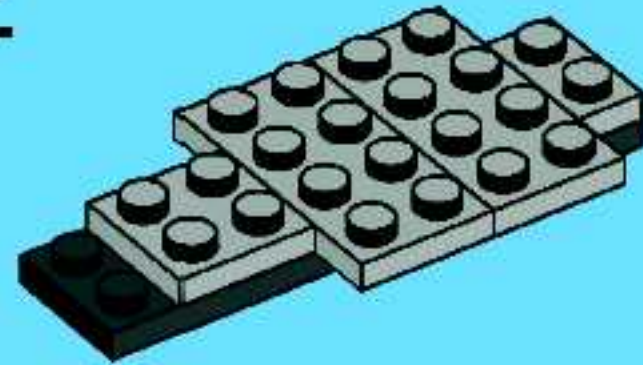 


3

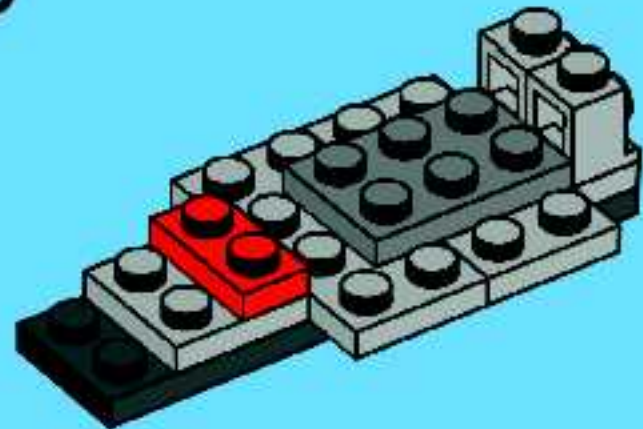 


4

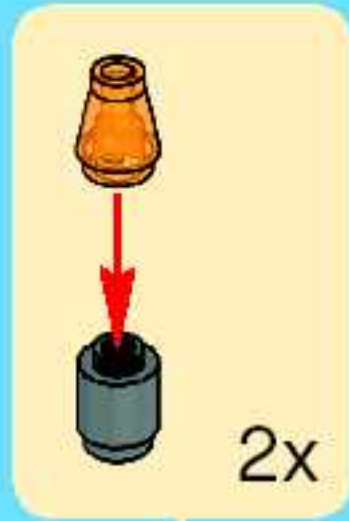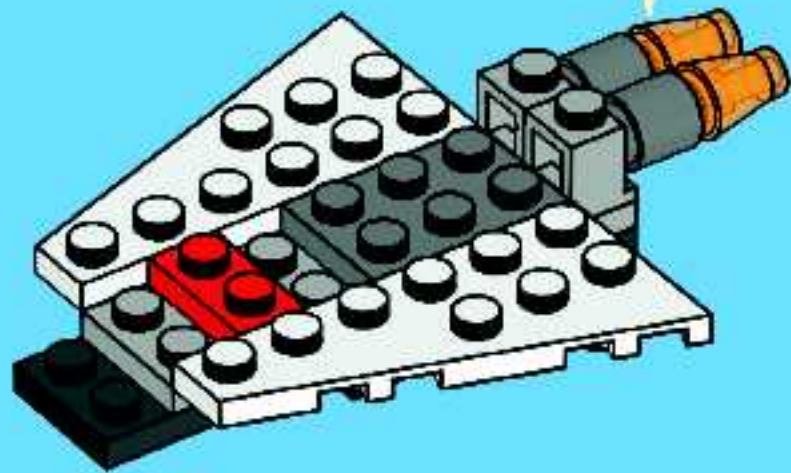  


5

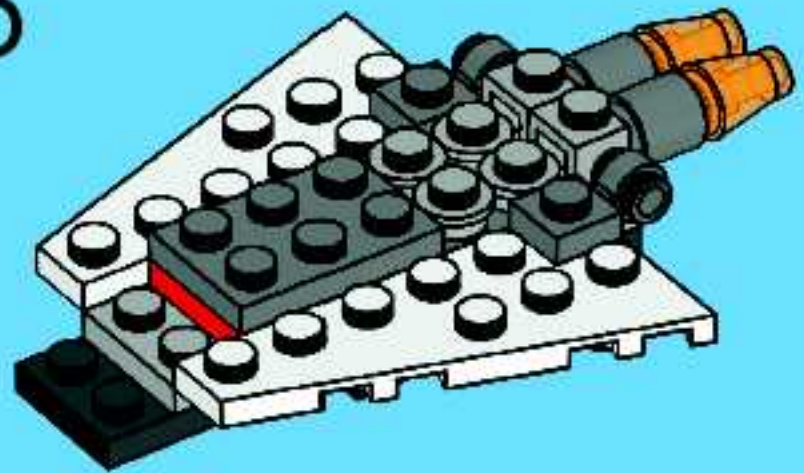 


6

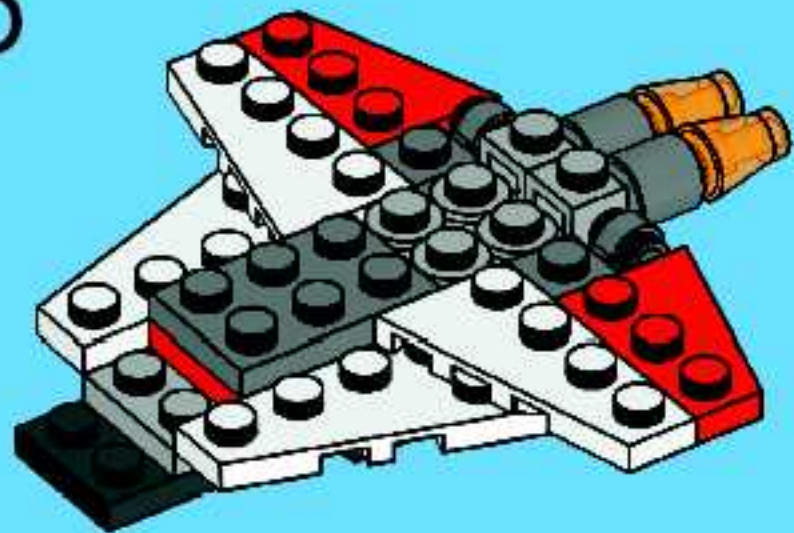 

7

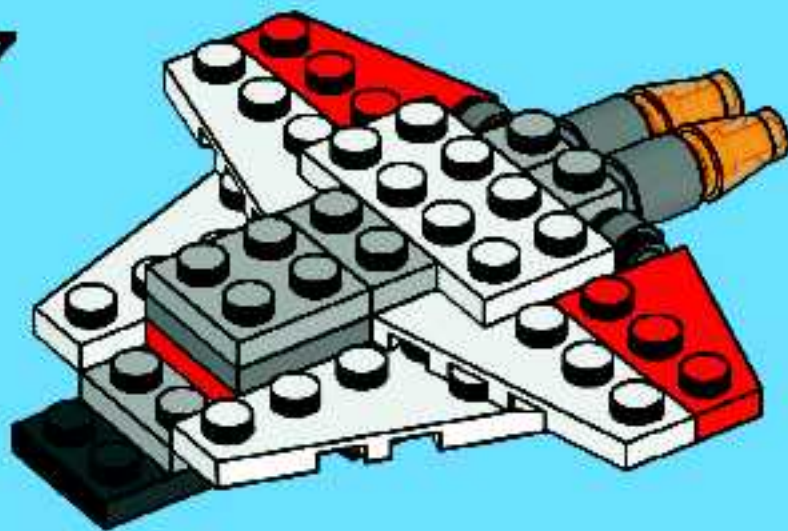 


1

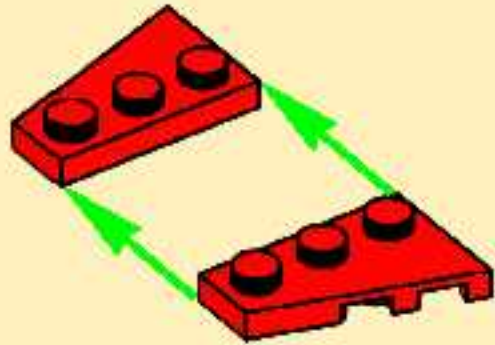 


2



 
8

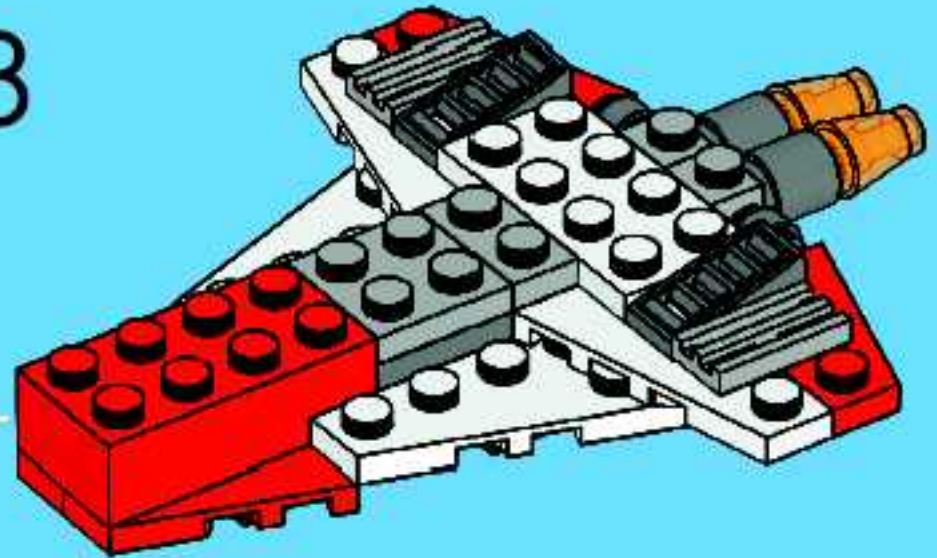


9

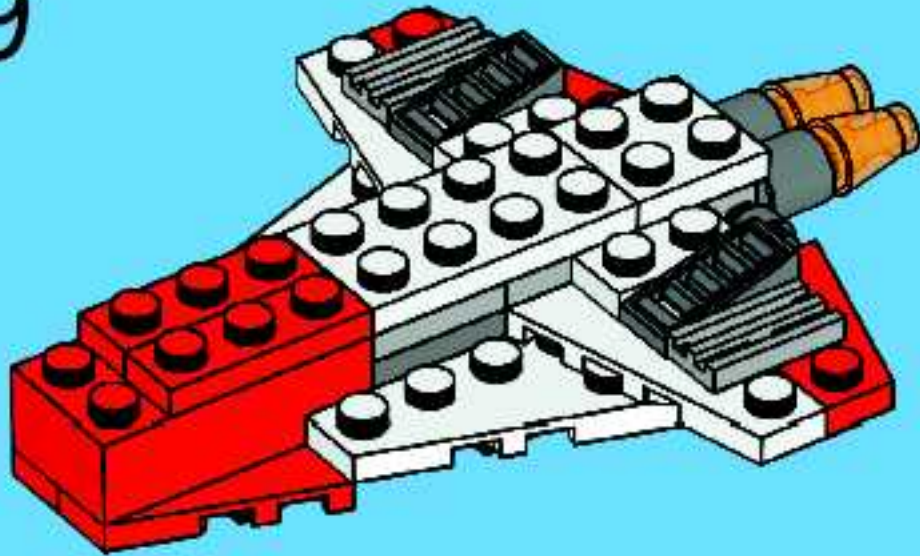 



10

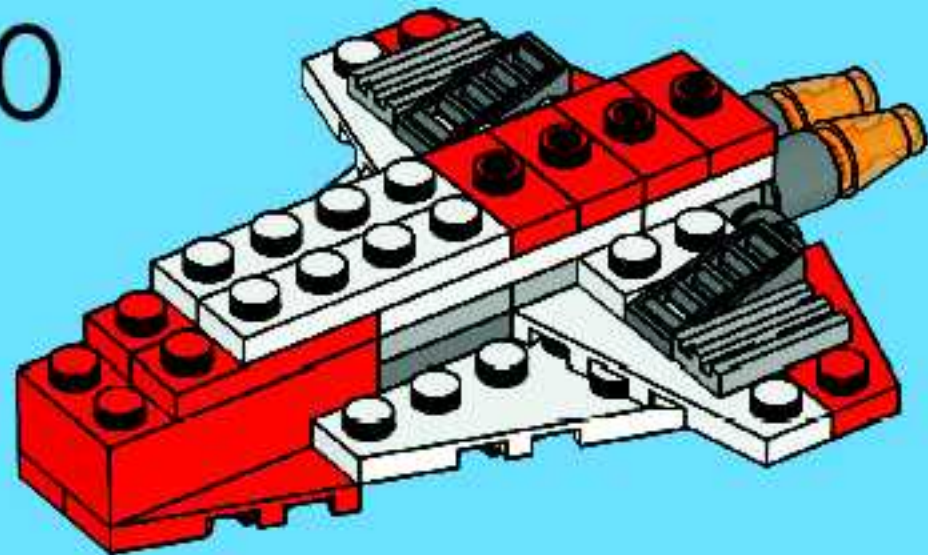 


11

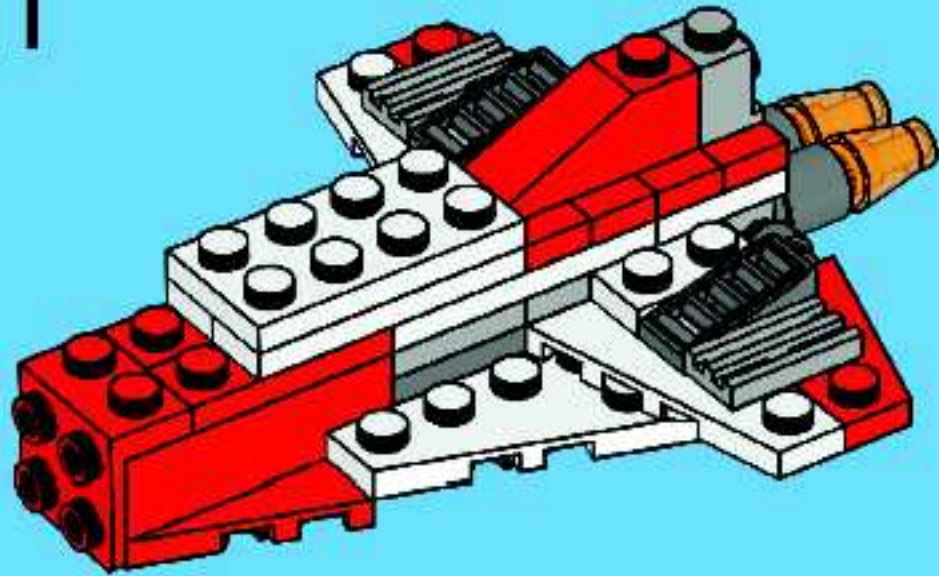 

12

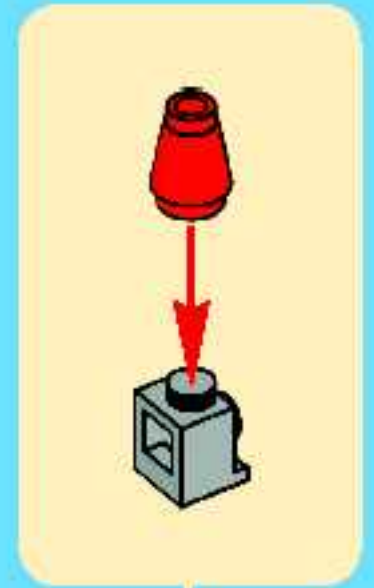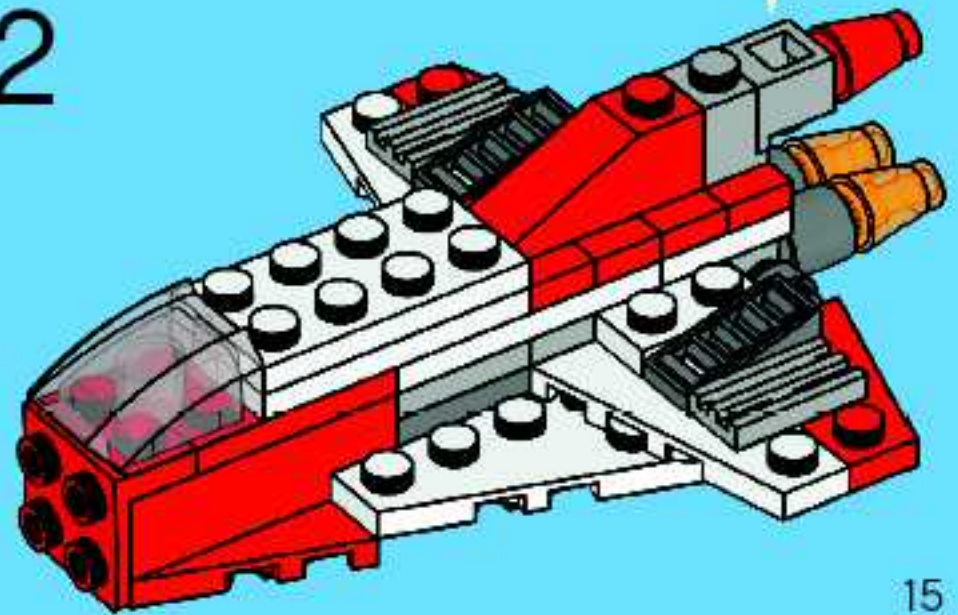  


13

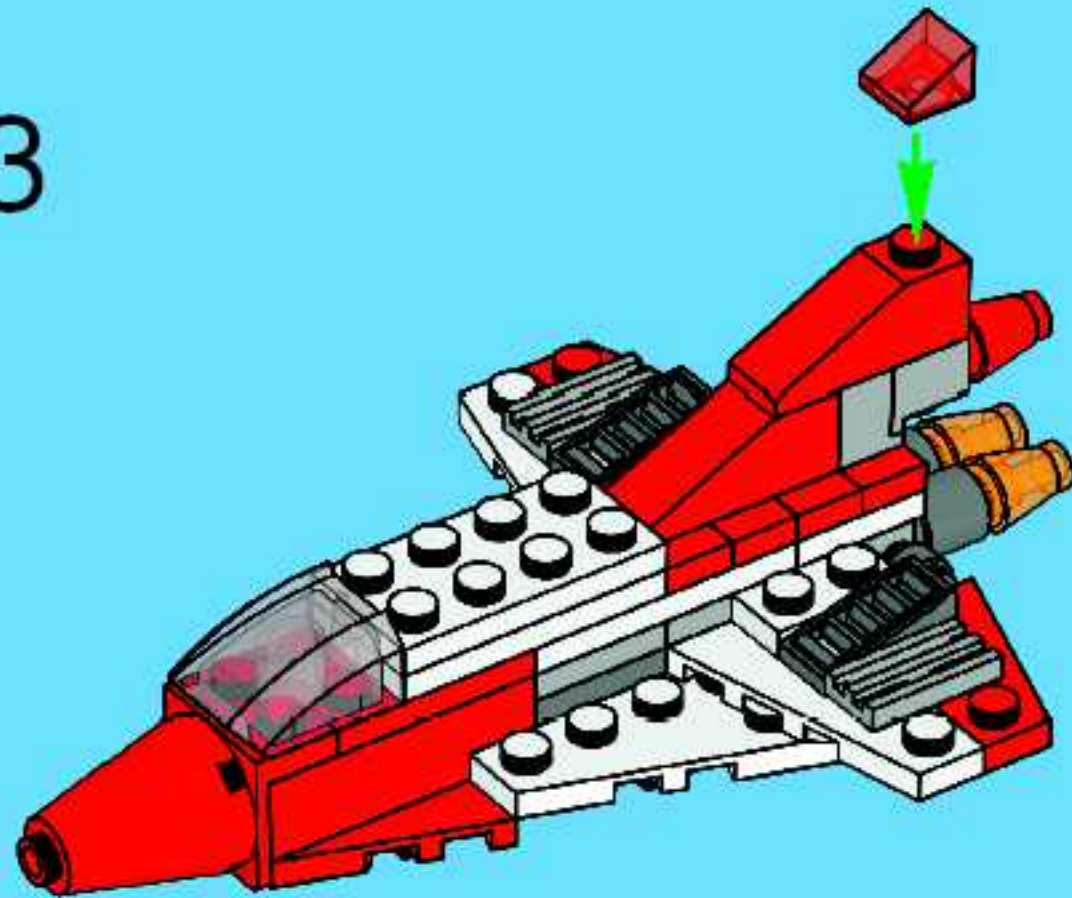 








1

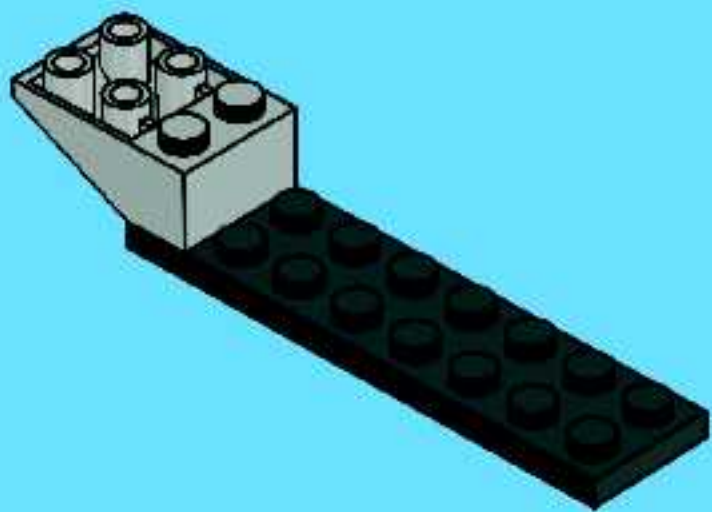 



2

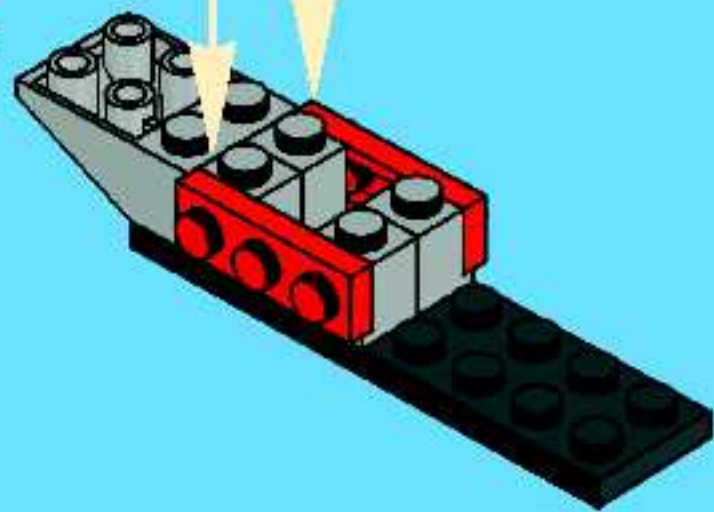 


3

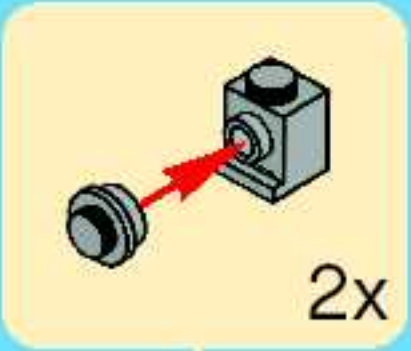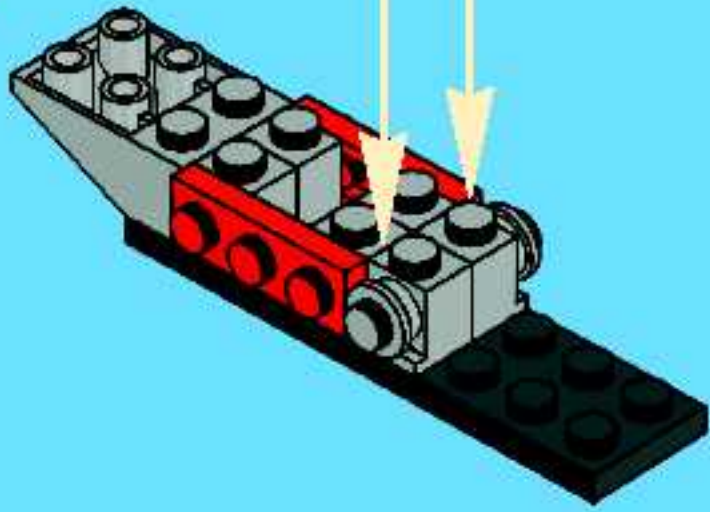  


4

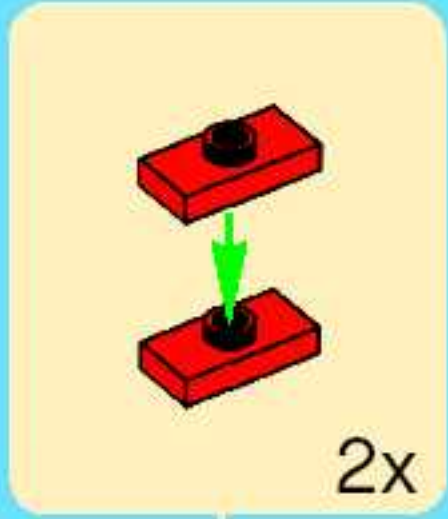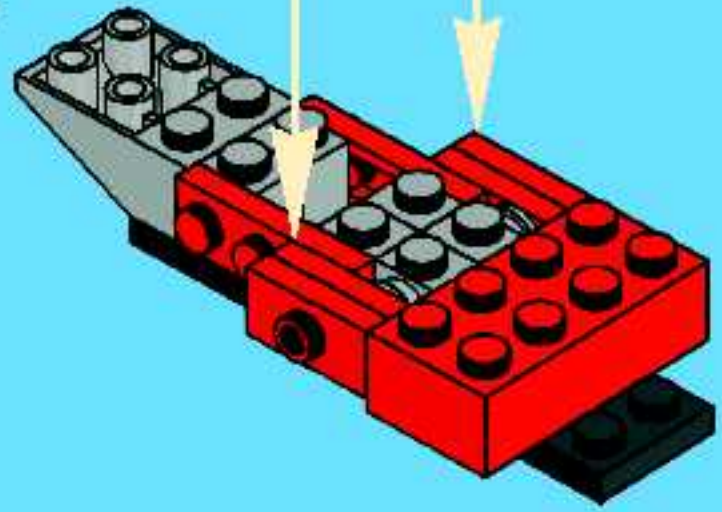  


1

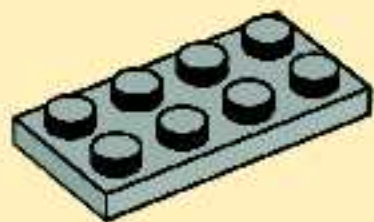 


2

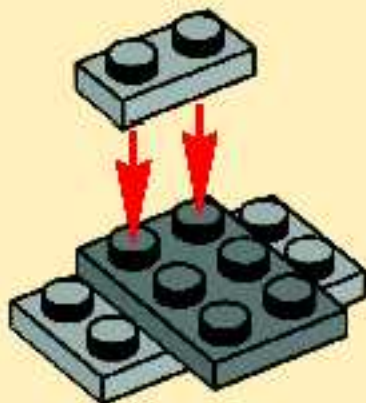 


3

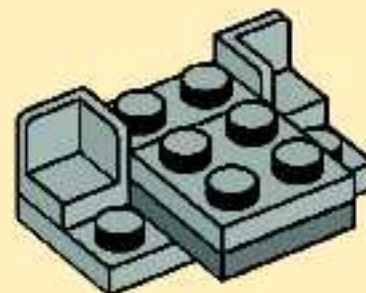 

5

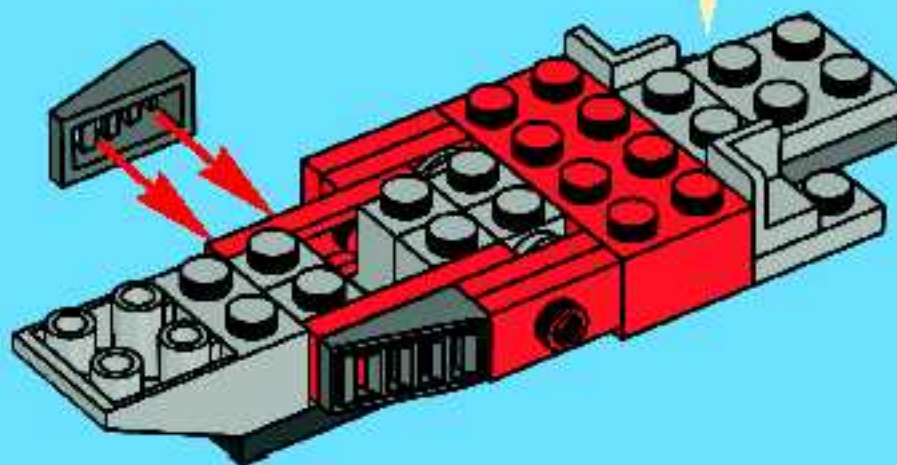 

6

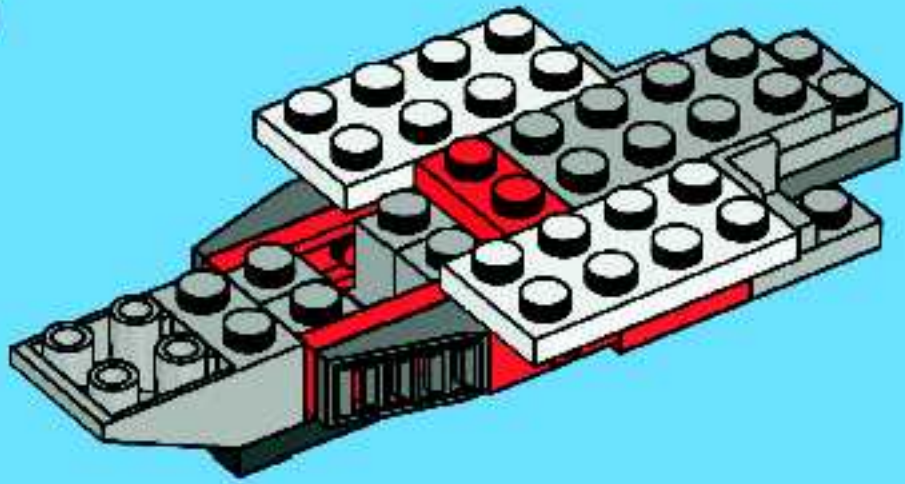 

1



 
2




7




8

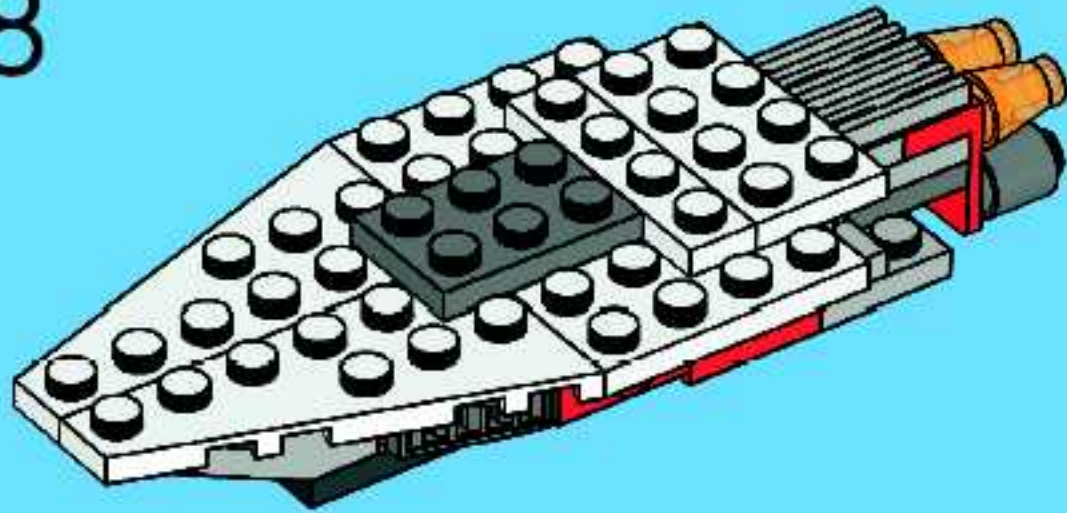


9

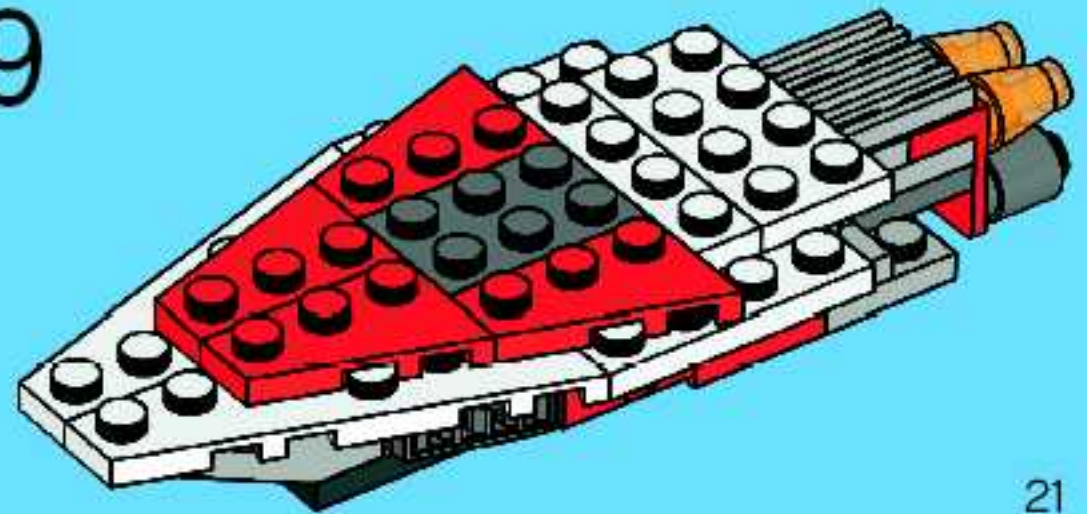 


10

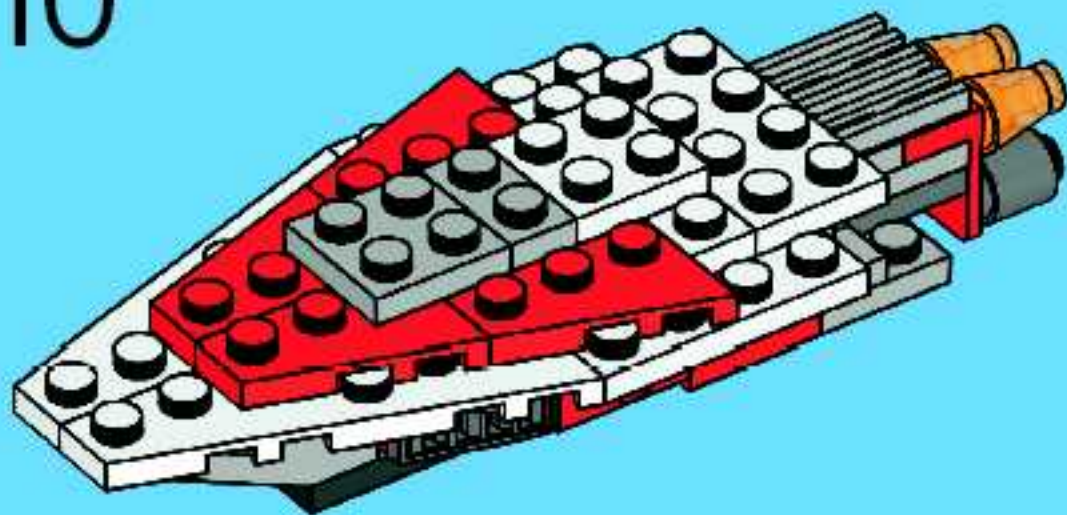 


11

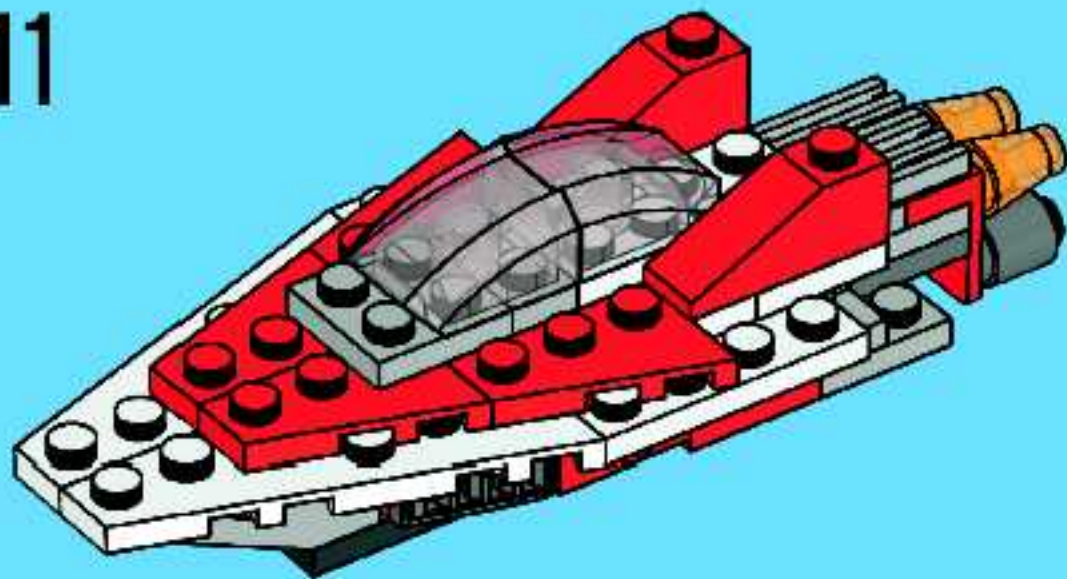 


1

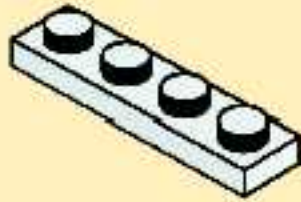 


2

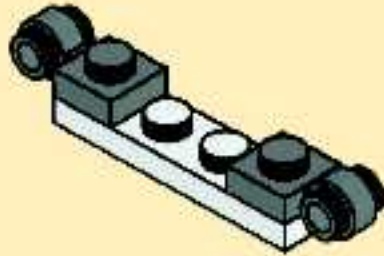 

3

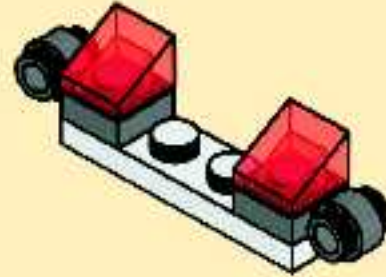 

12

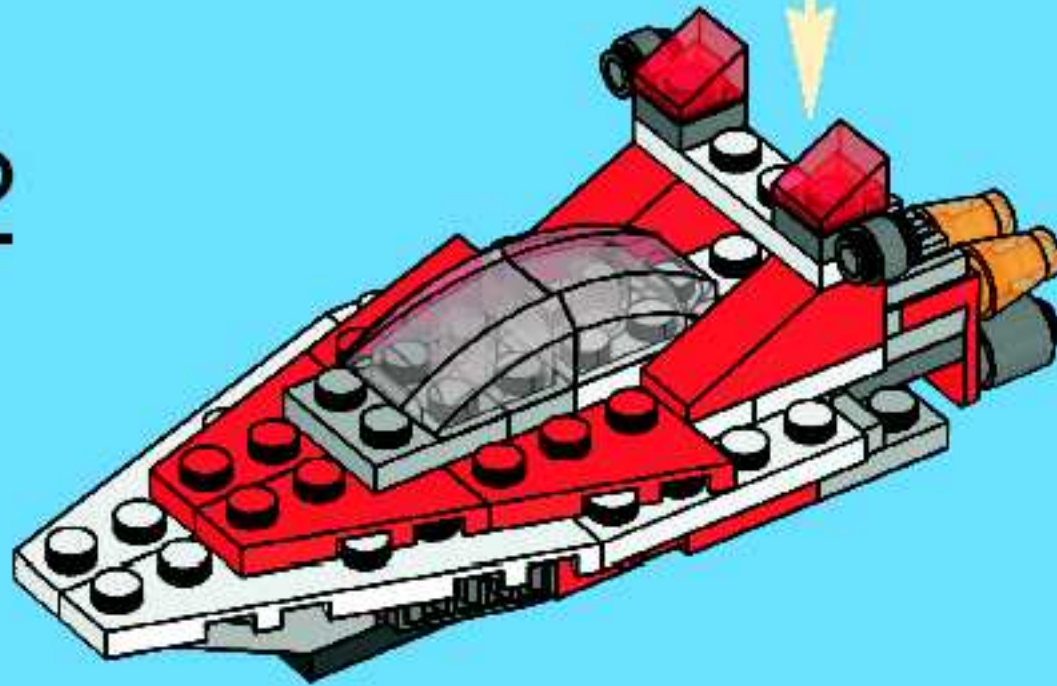 



2x  
4210828



1x  
4161326



1x  
4160857



1x  
302201



2x  
4211397



1x  
4529234



 
2x  
428621



2x  
4211043



1x  
4287708

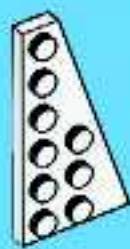

1x  
4287707



6x  
4211476



2x  
4211395



1x  
302321



1x  
4277933



2x  
4540386



2x  
371001



3x  
302001



2x  
4211398



2x  
4211350



4x  
379421



1x  
300121



2x  
4211090



4x  
4211525



1x  
4211570



2x  
362321



2x  
4180504



1x  
4528786



2x  
4215513



2x  
4180533



2x  
4244363



2x  
4221195



2x  
4217722



1x  
303426



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

[www.lego.com/service](http://www.lego.com/service) or dial



00800 5346 5555 :



1-800-422-5346 :

