

 


20008


CREATOR




BrickMaster

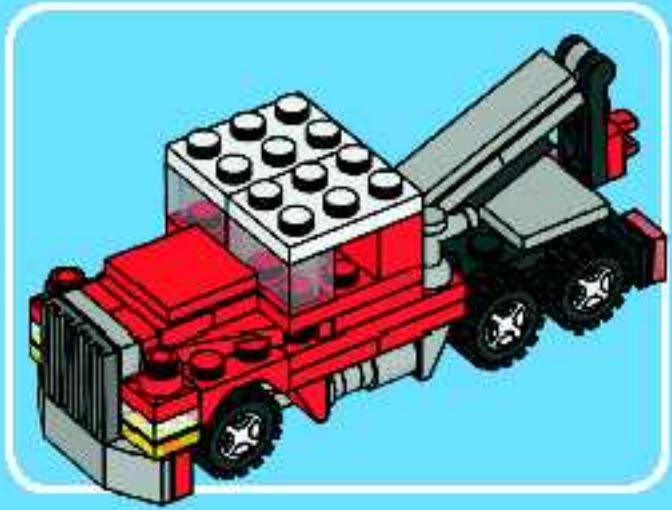

1


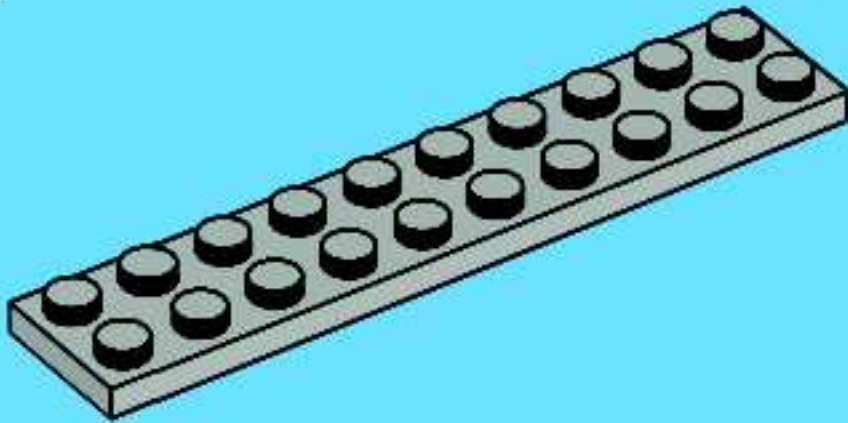 


2


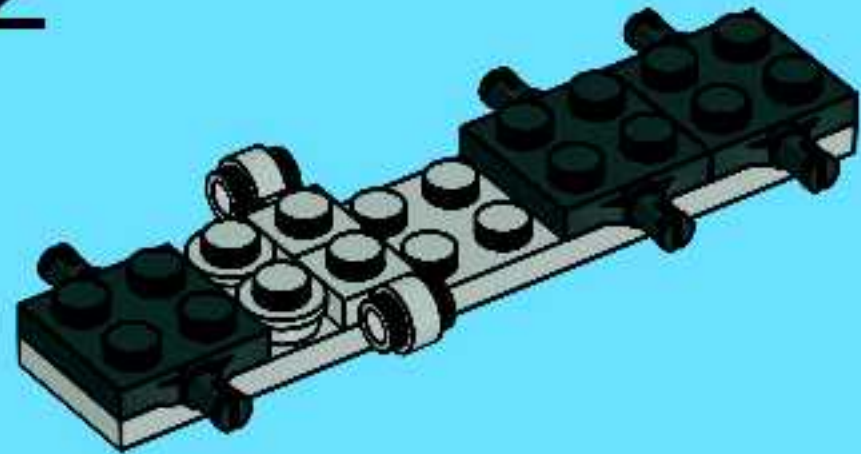 


2

 
 
3

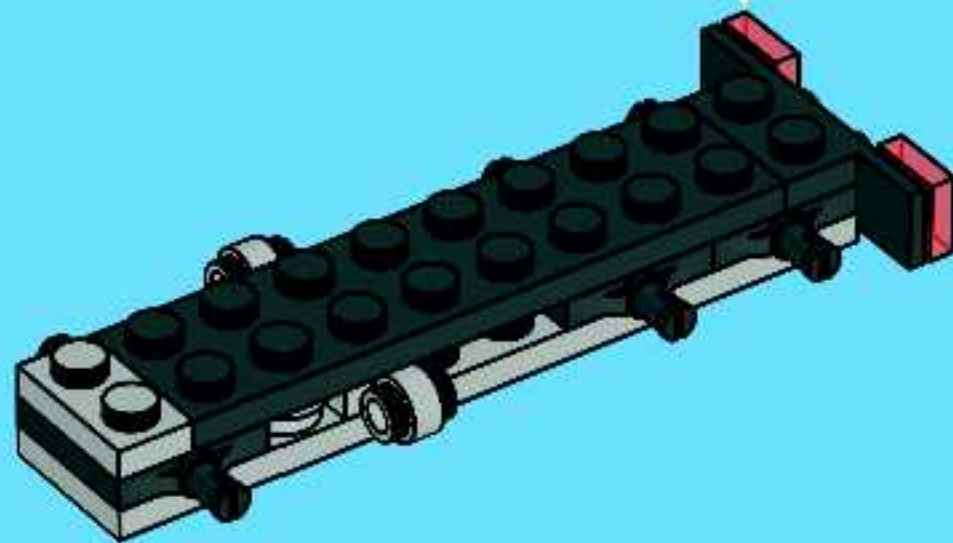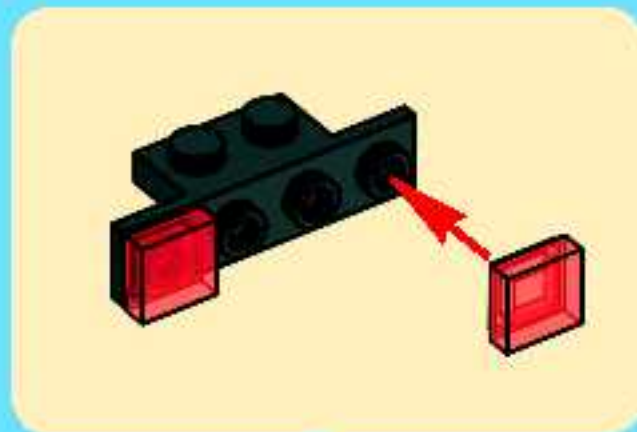


4

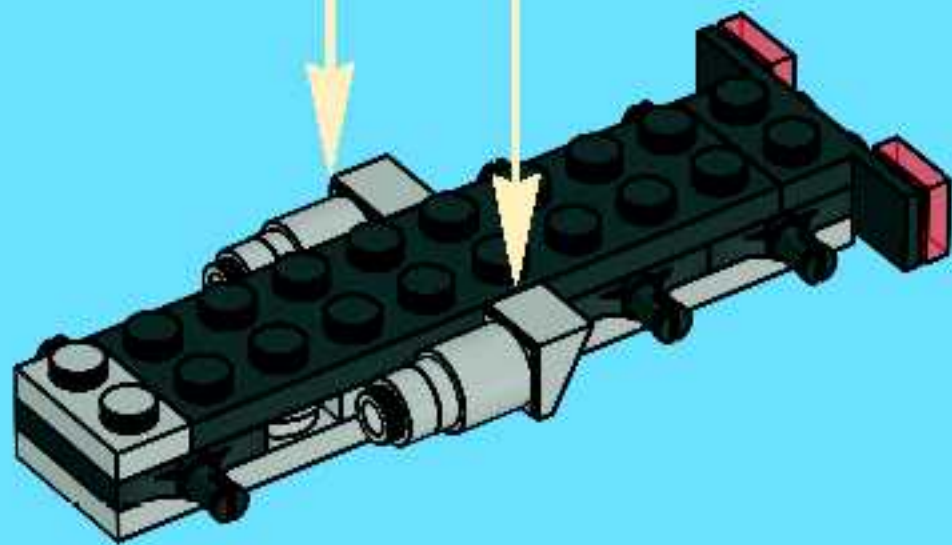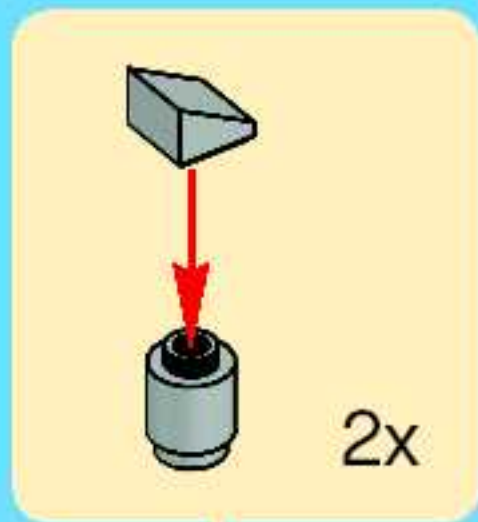  


5

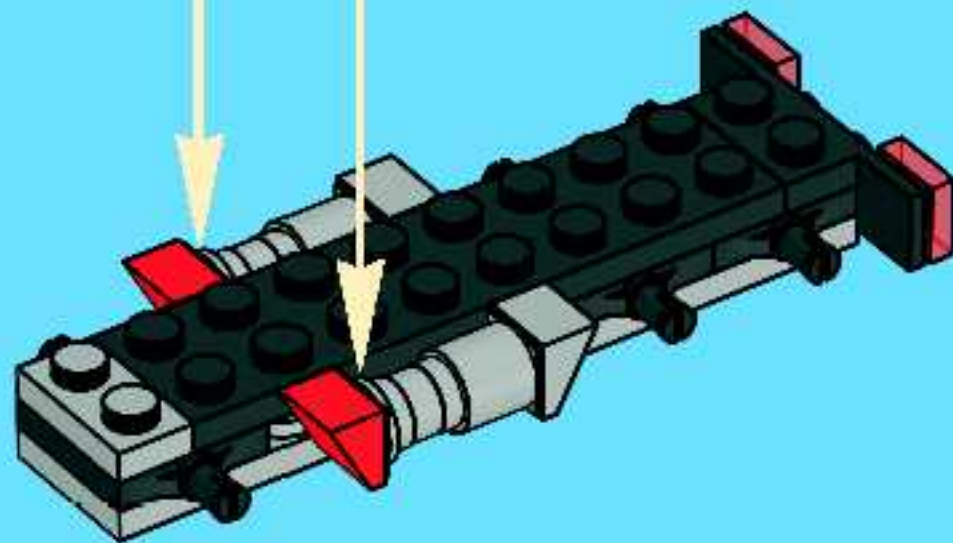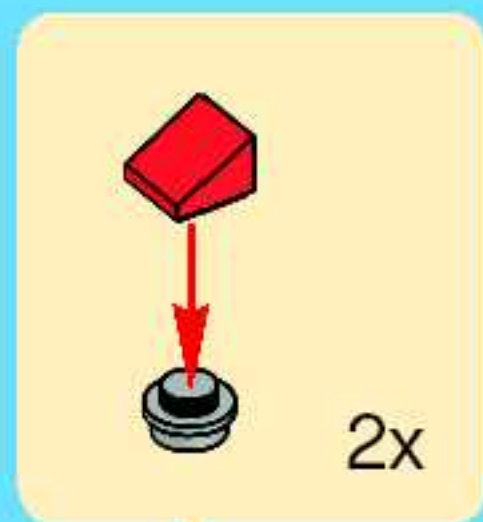  


6

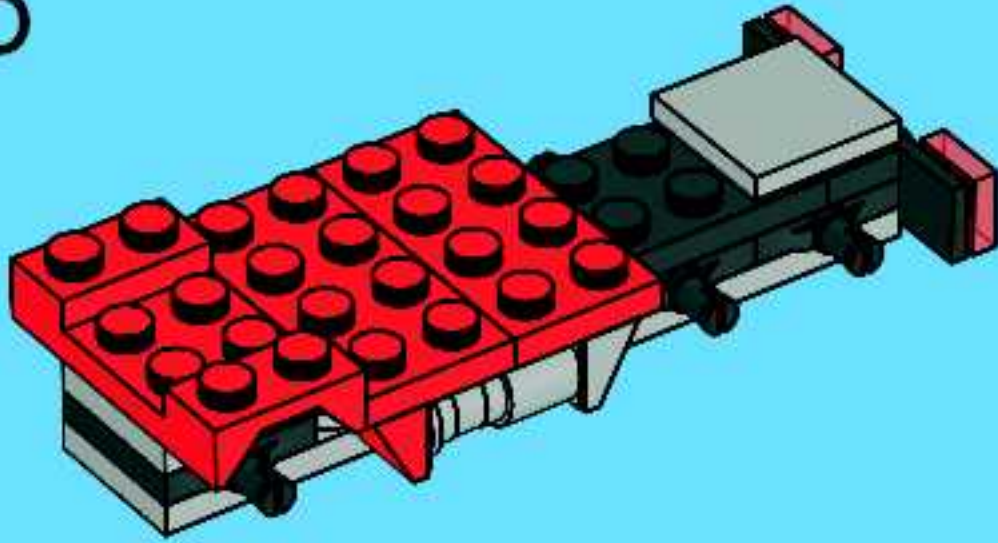 


7

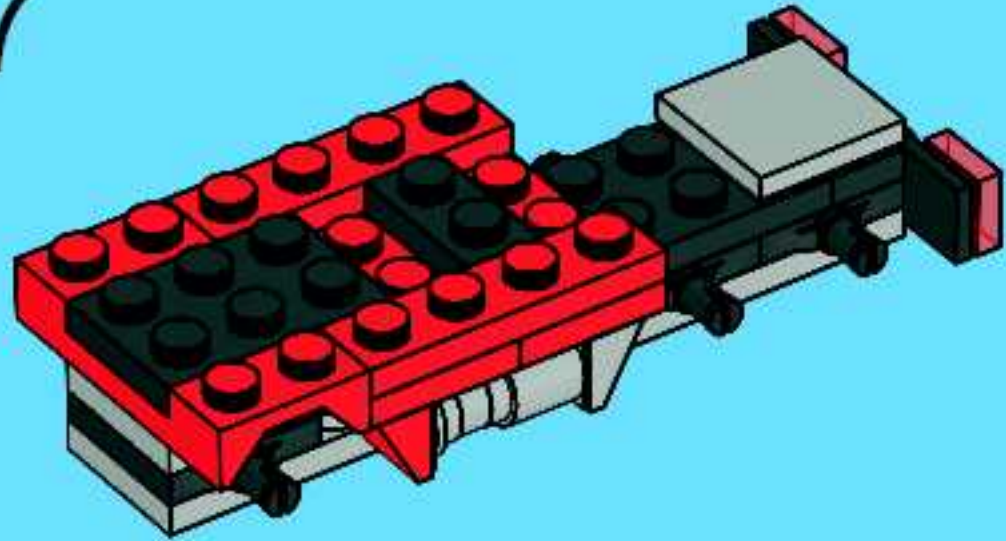 

8

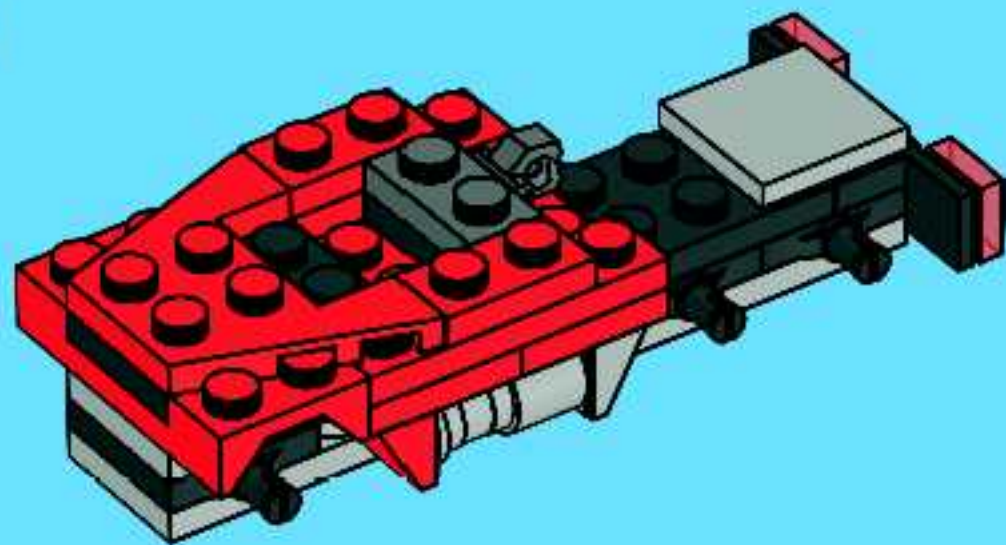 


1

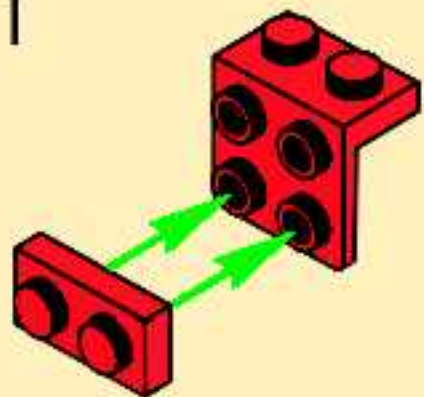 

2



 
9

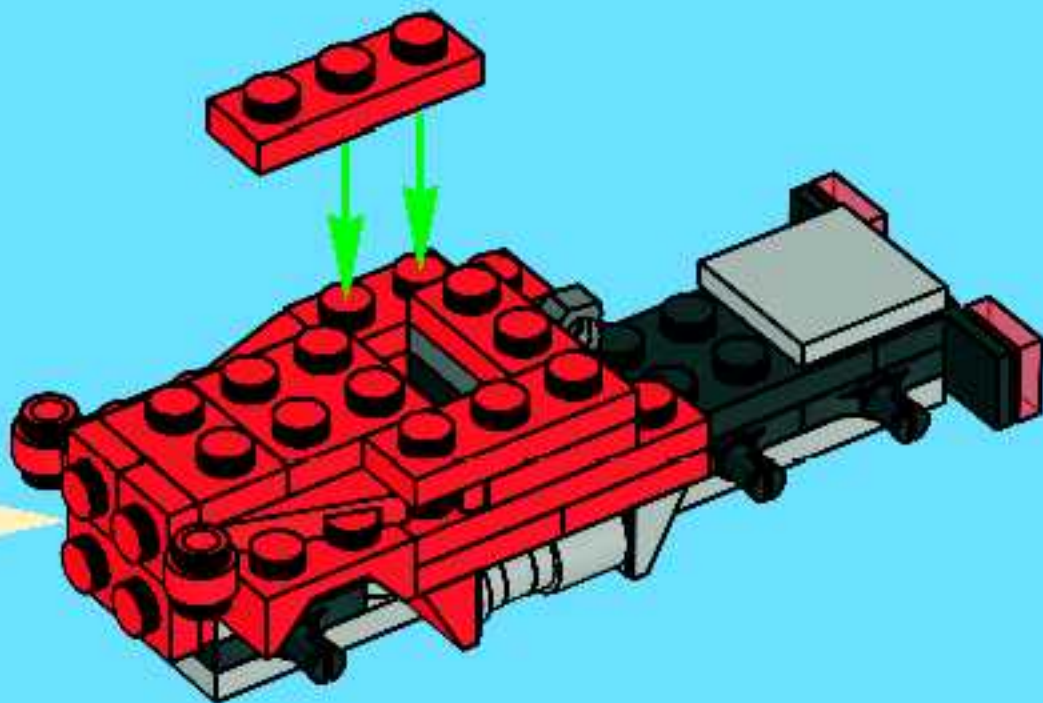


1



 
2

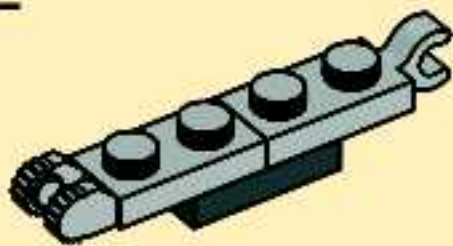


3

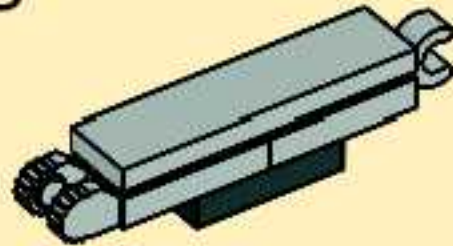 


10

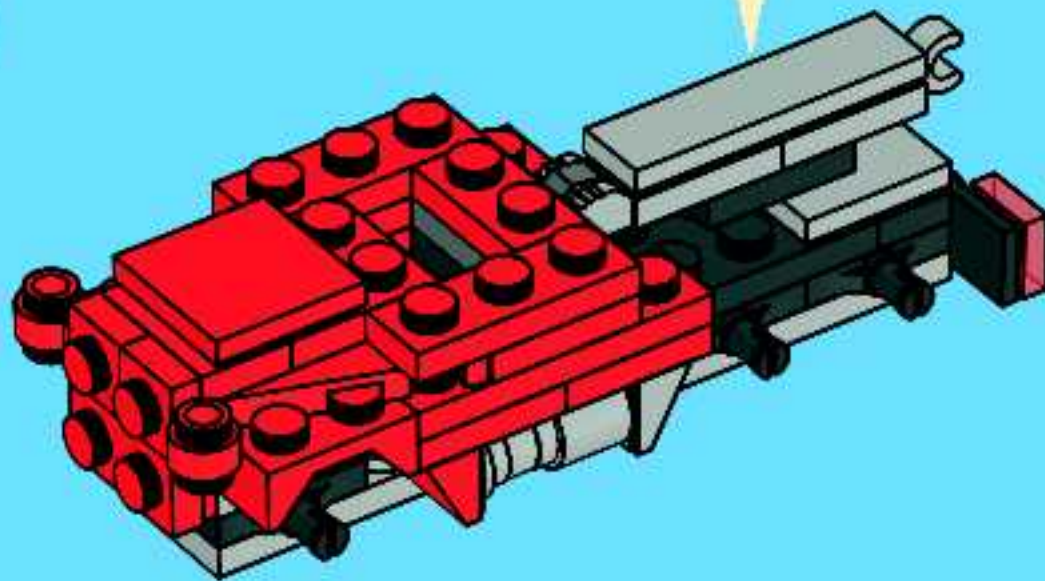 



11

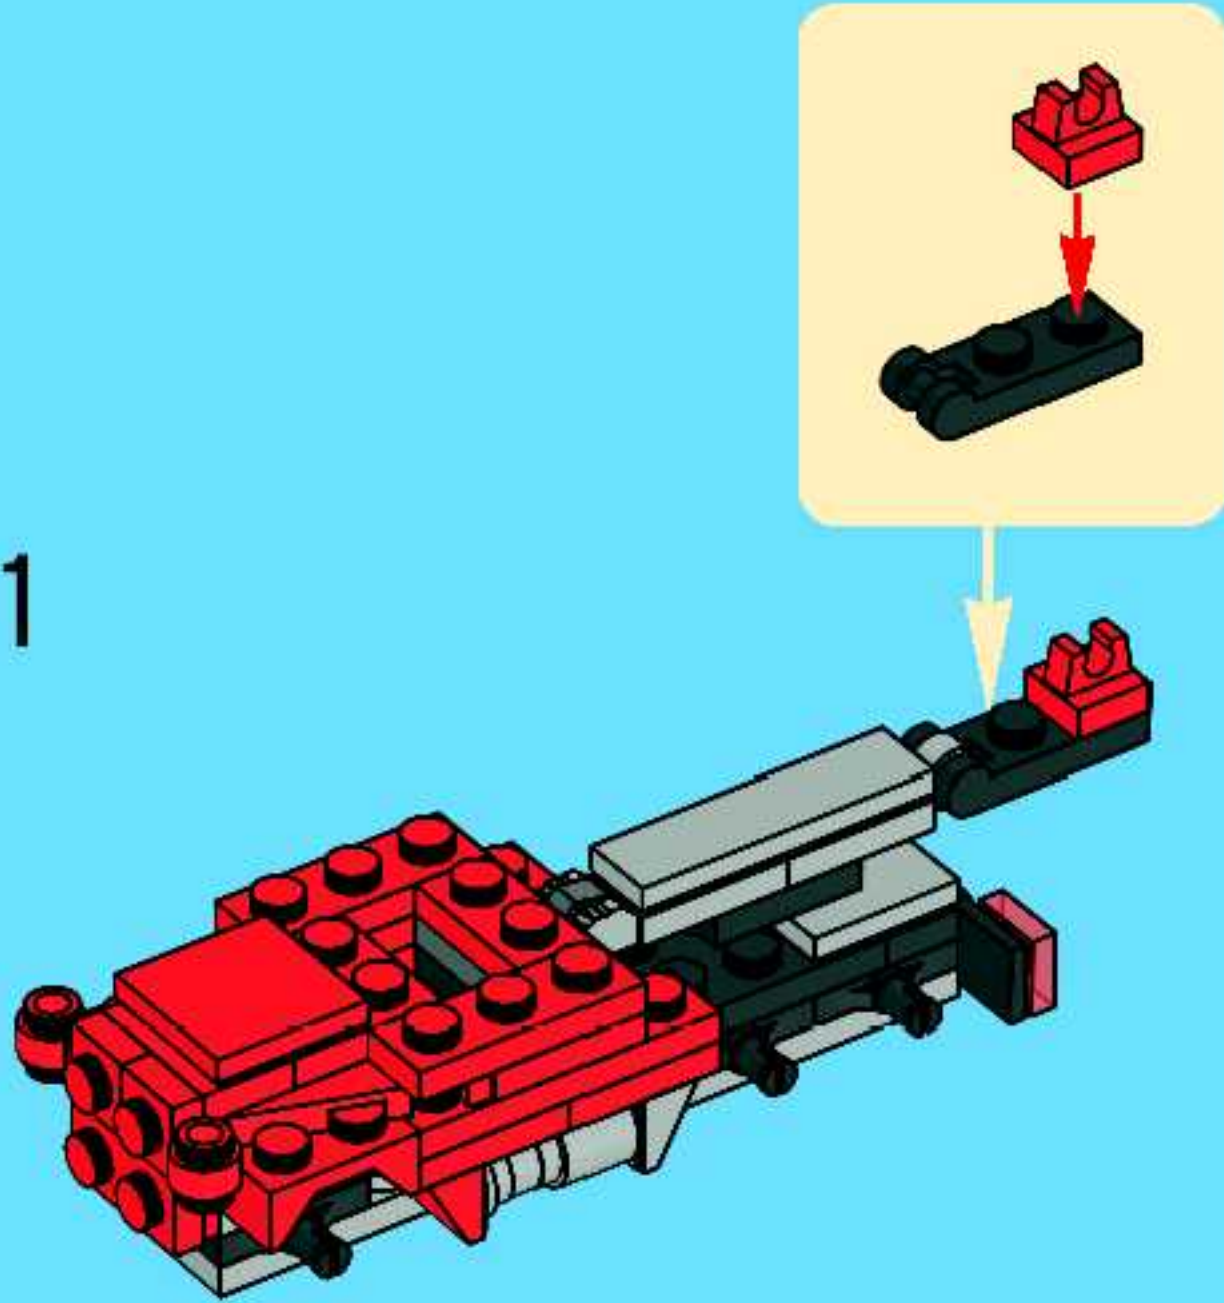 


12

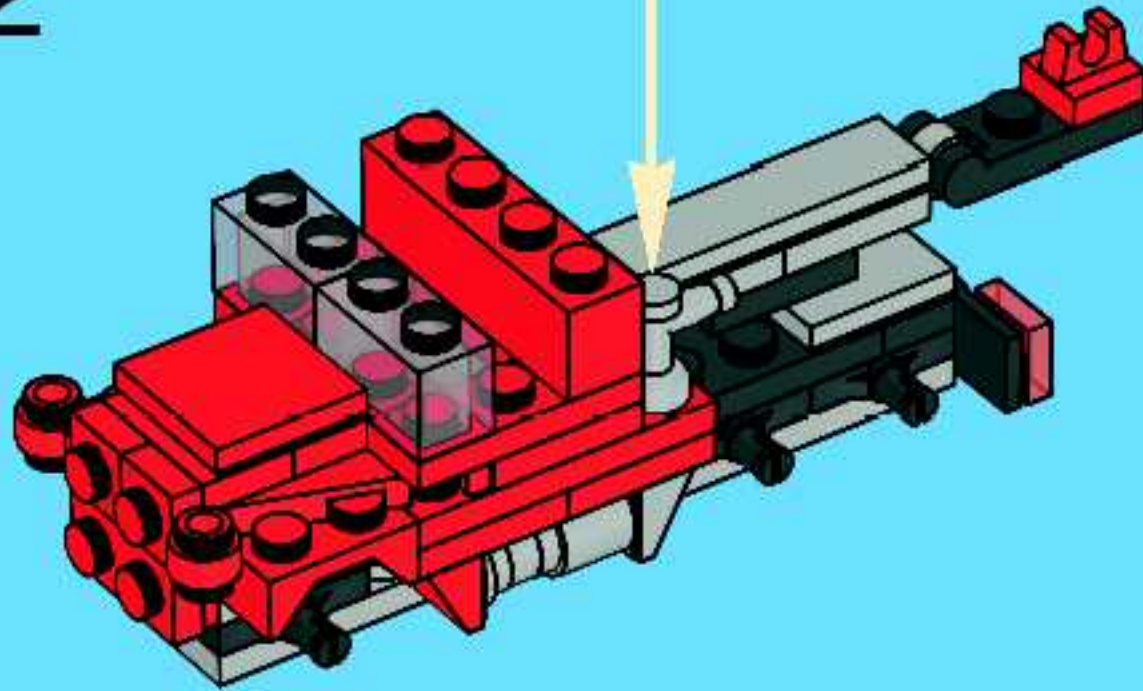 

13

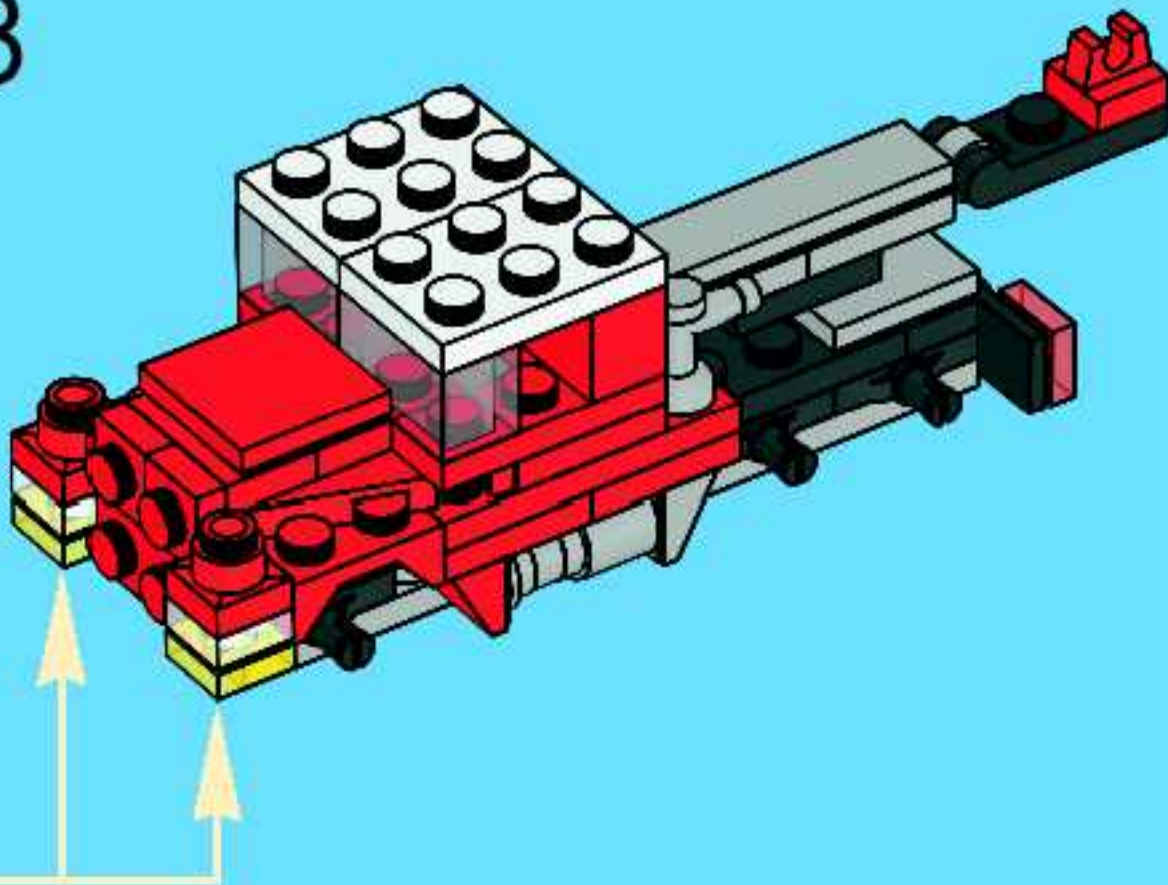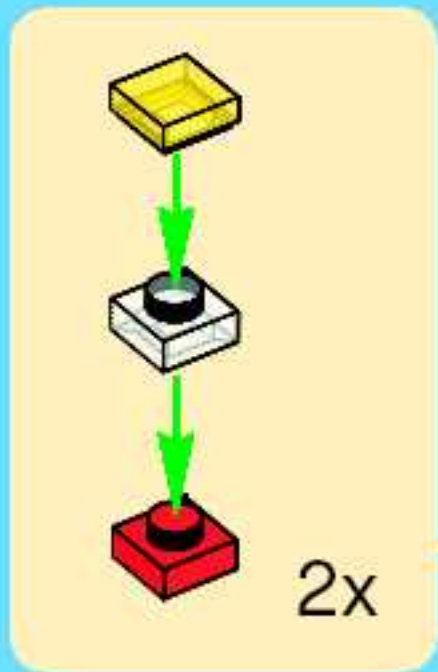  


14

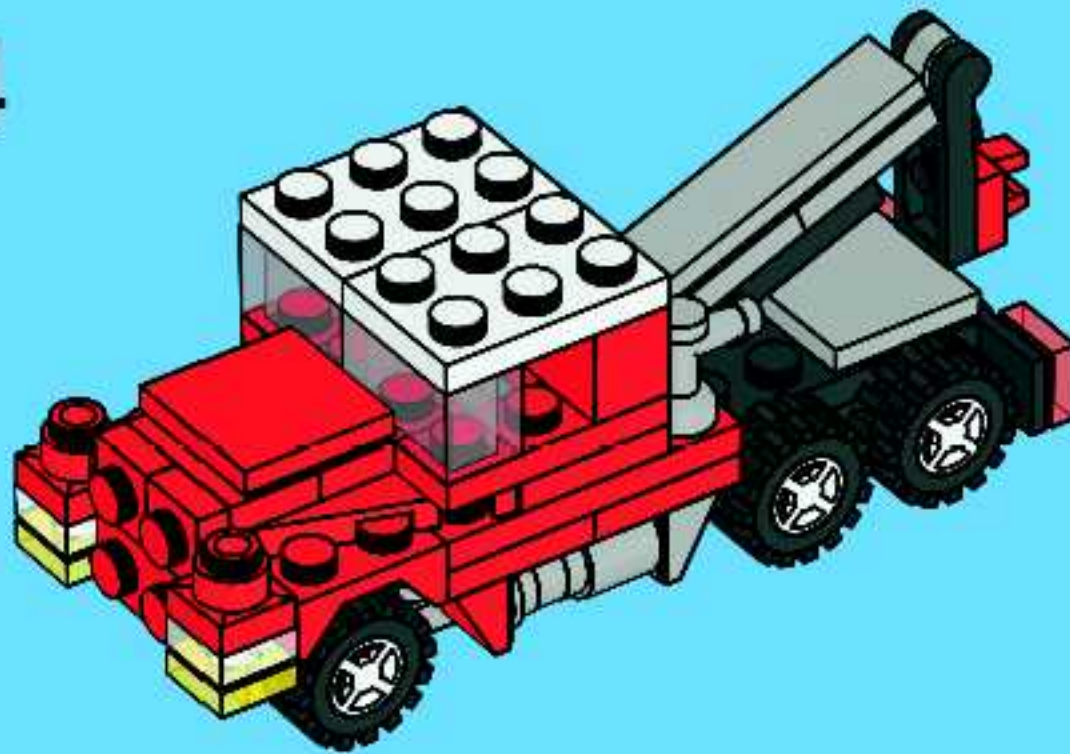 


1



 
2

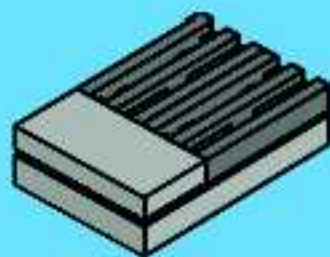


3

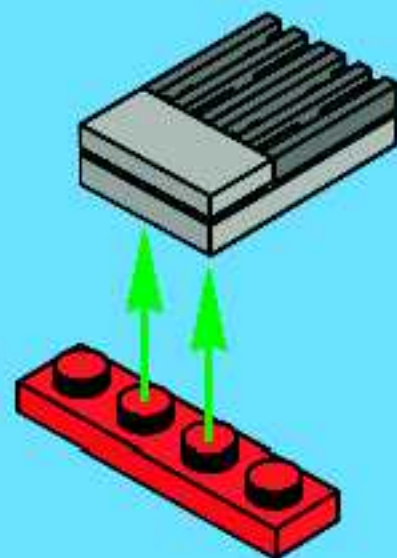 

4

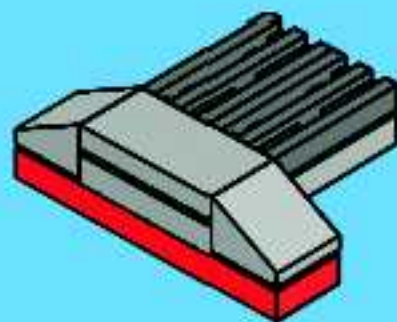 

15

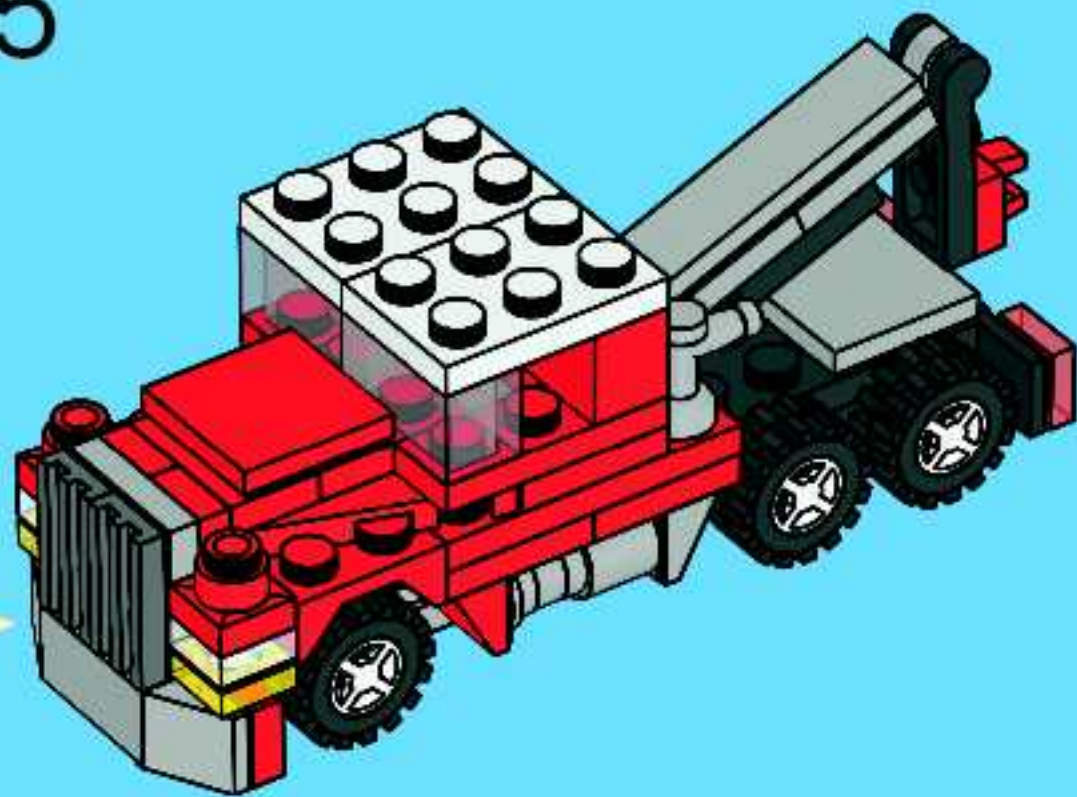 



2x
302101



6x
462401



2x
4226179



1x
4277933



1x
301021



1x
306821



2x
4161412



1x
255521



2x
4504379



1x
378821



2x
302421



4x
302321



2x
362321



3x
371021



1x
302221



2x
302021



1x
4238305



1x
4282746



3x
460026



1x
303426



2x
302326



1x
302126



1x
4515368



6x
4501046



2x
3000840



2x
3003941



2x
3003944



1x
4211396



1x
4211398



1x
4211804



1x
4535738



1x
4211414



1x
4211356



1x
4211413



2x
4211477



1x
4211462



2x
4211412



4x
4521921



4x
4211525



1x
4211503



2x
4210631



1x
4210892



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :

