

 
LEGO
LEGOLAND.




40081


6055342

1

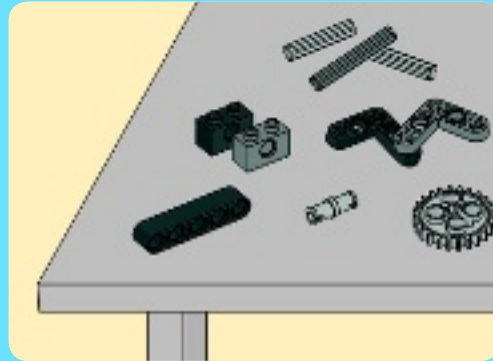


2

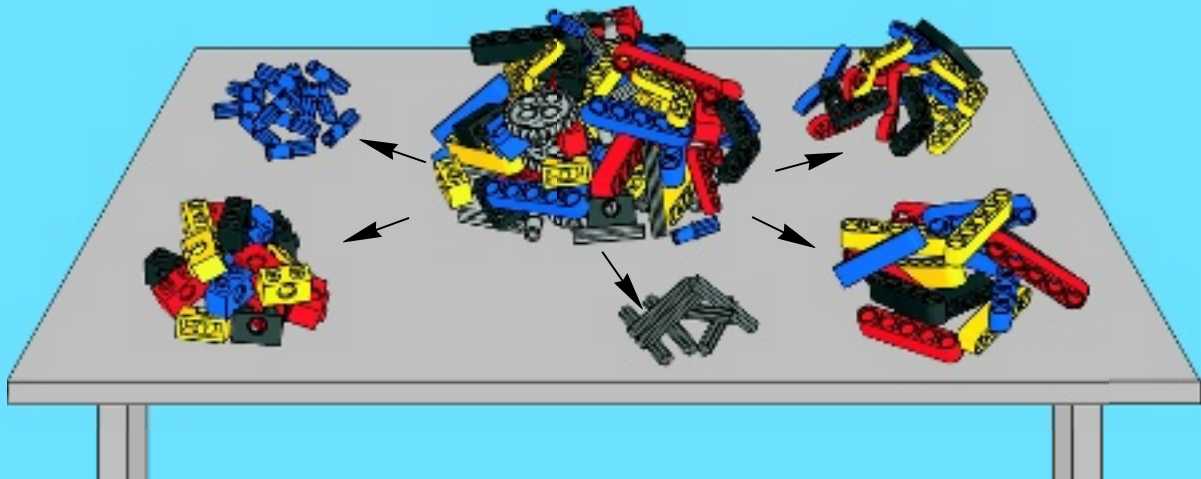 


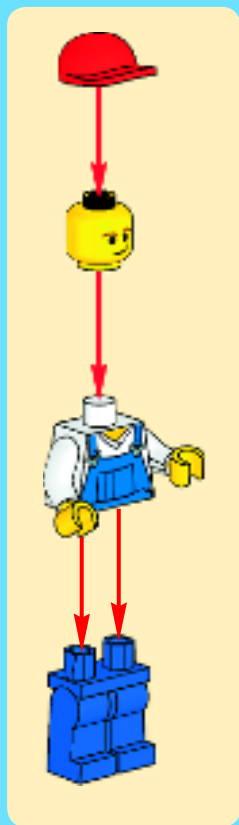 


1

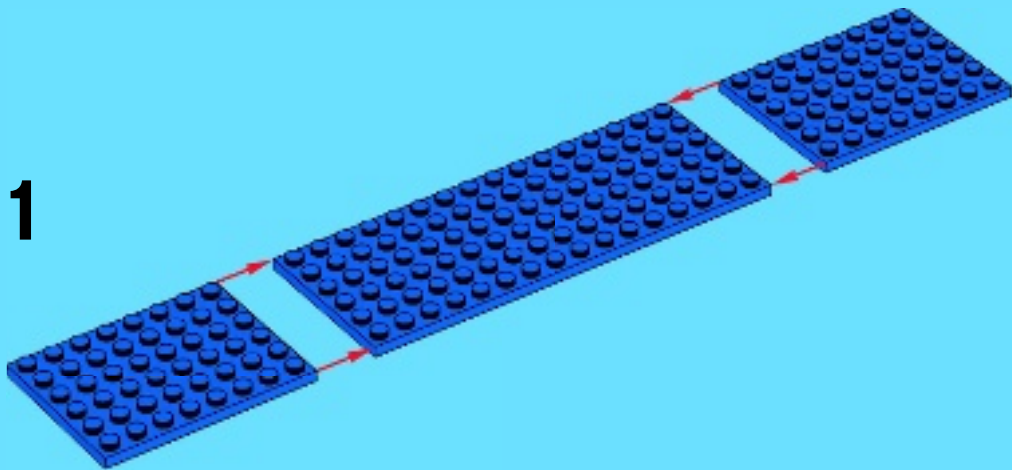 


2

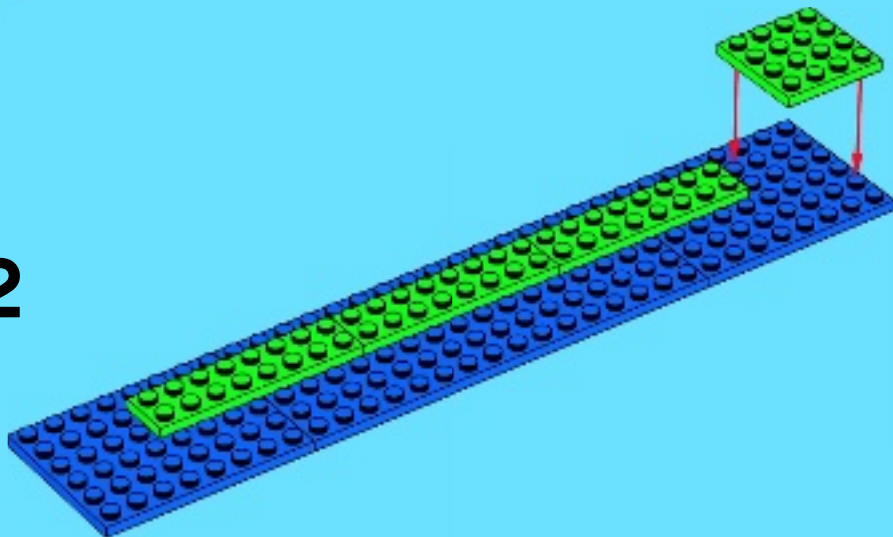 


3

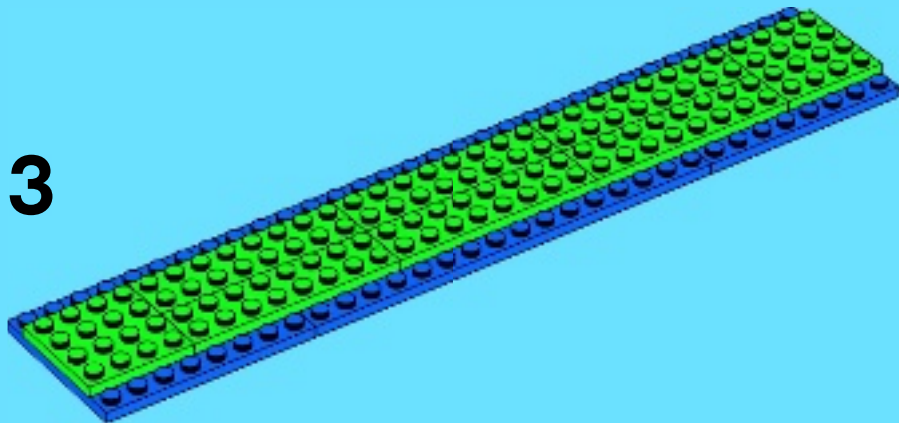 


4

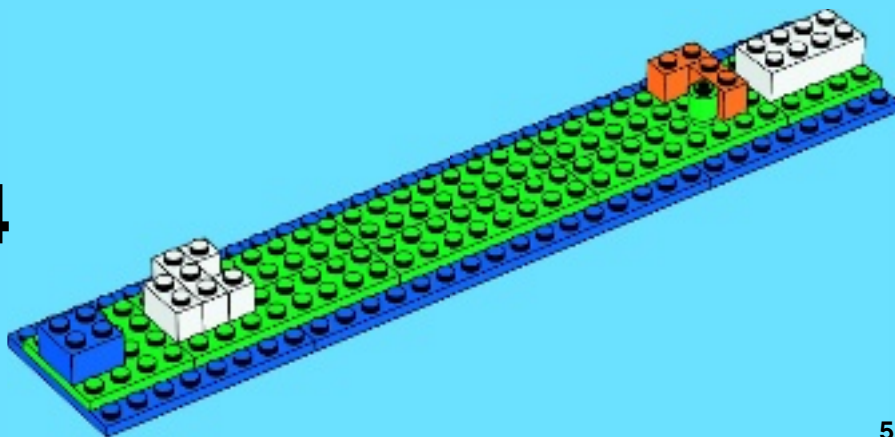 


5

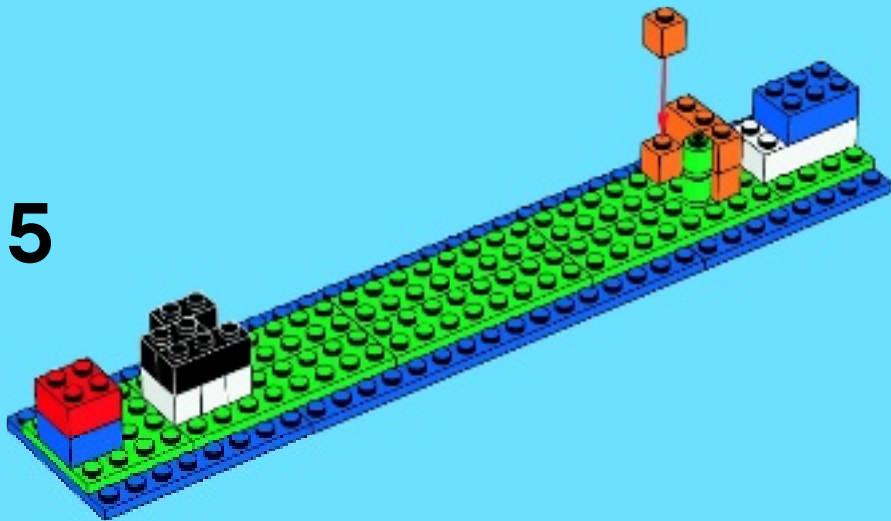 


6

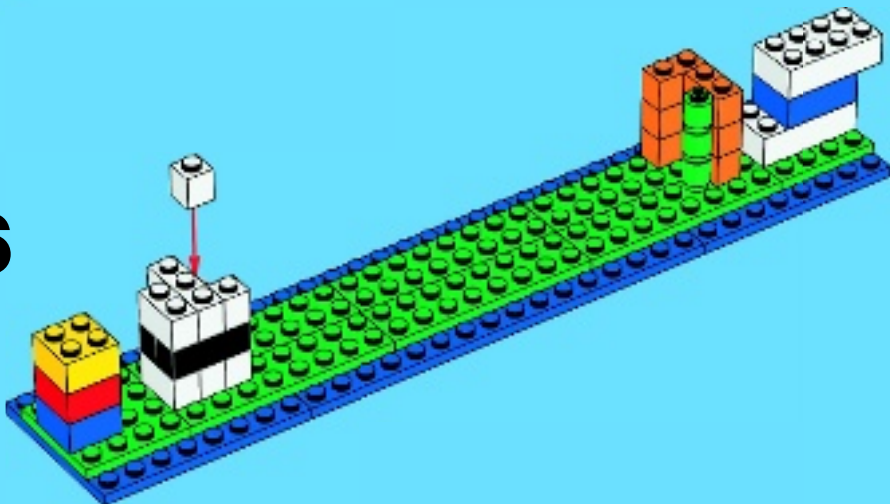 


7

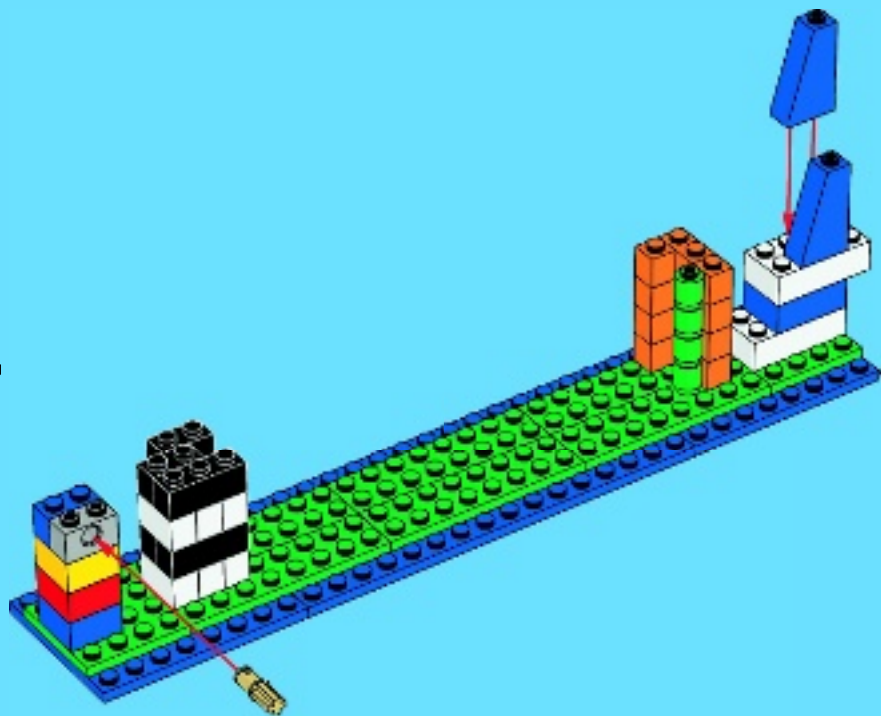 


8

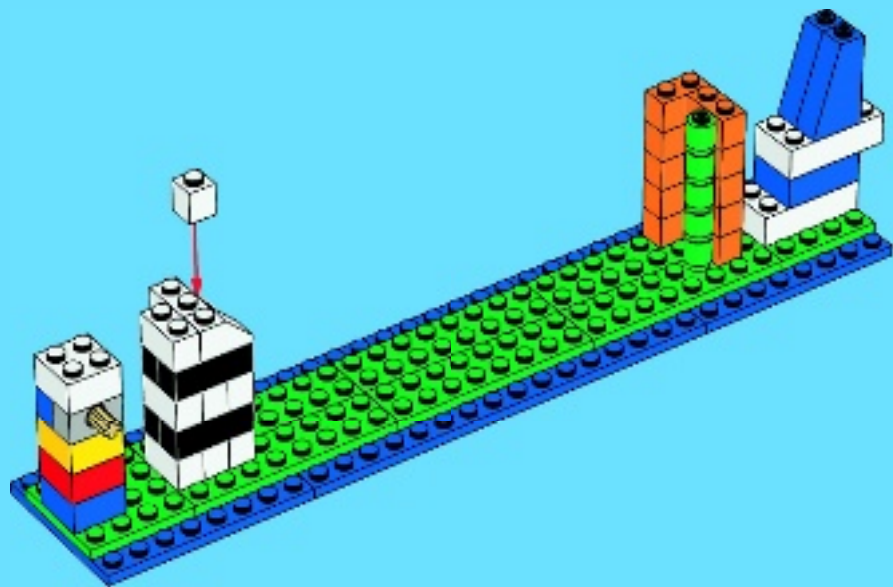 


9

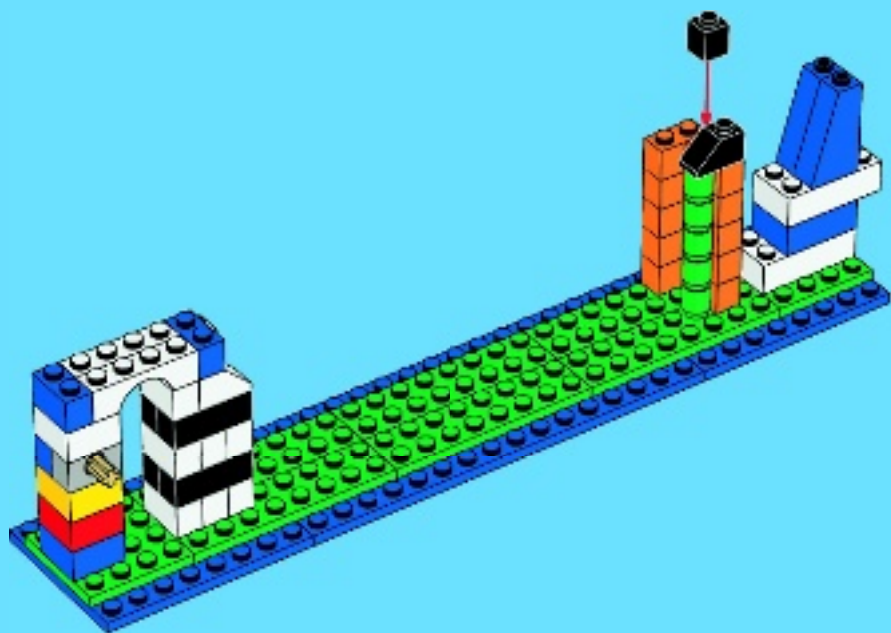 


1

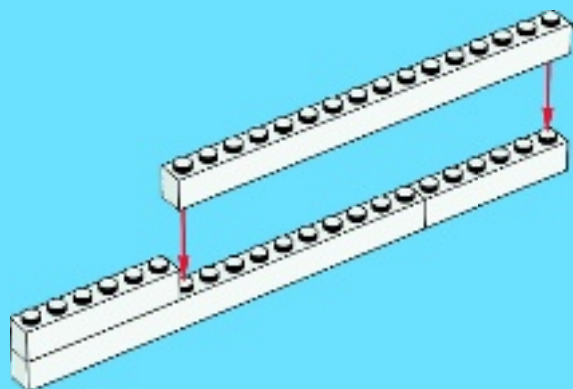 


2

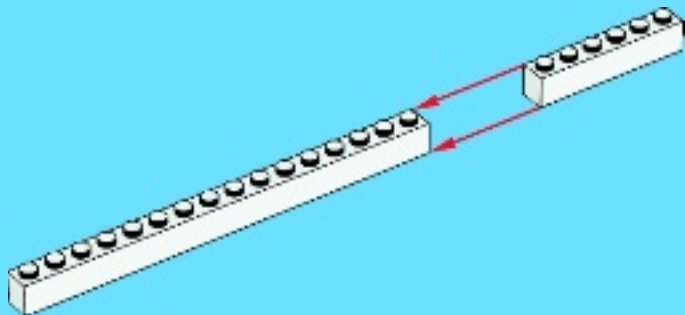 


10

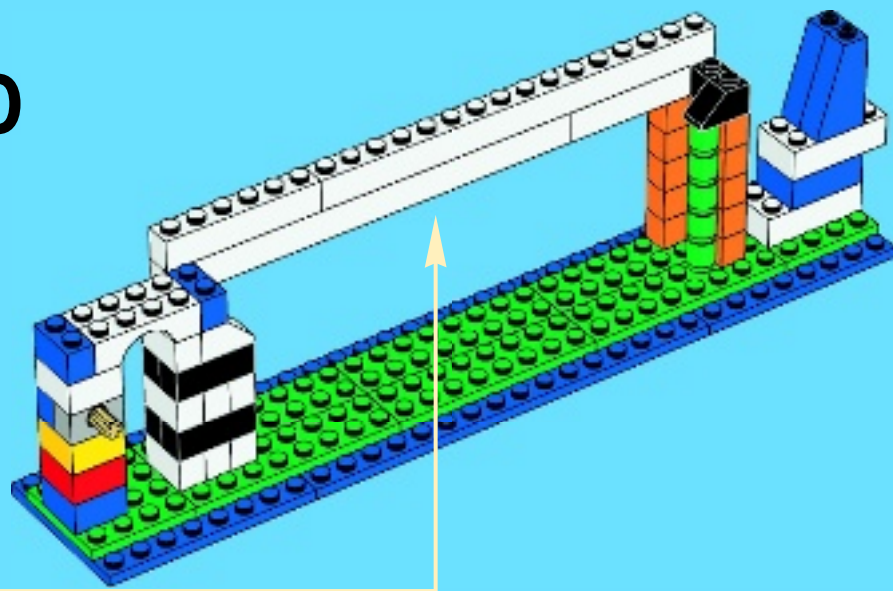 


11

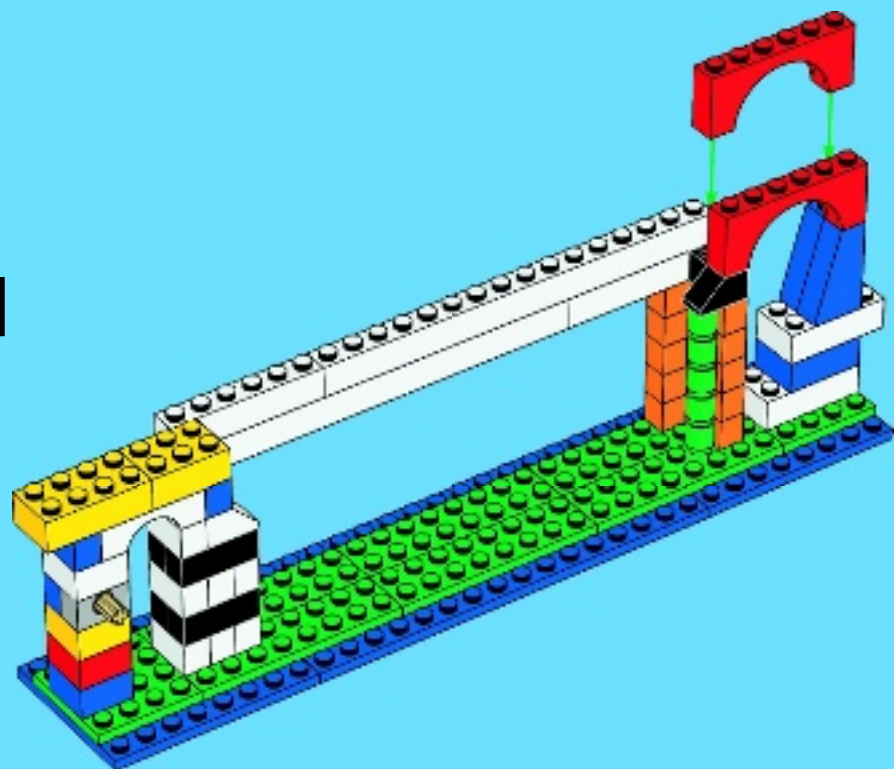 


12

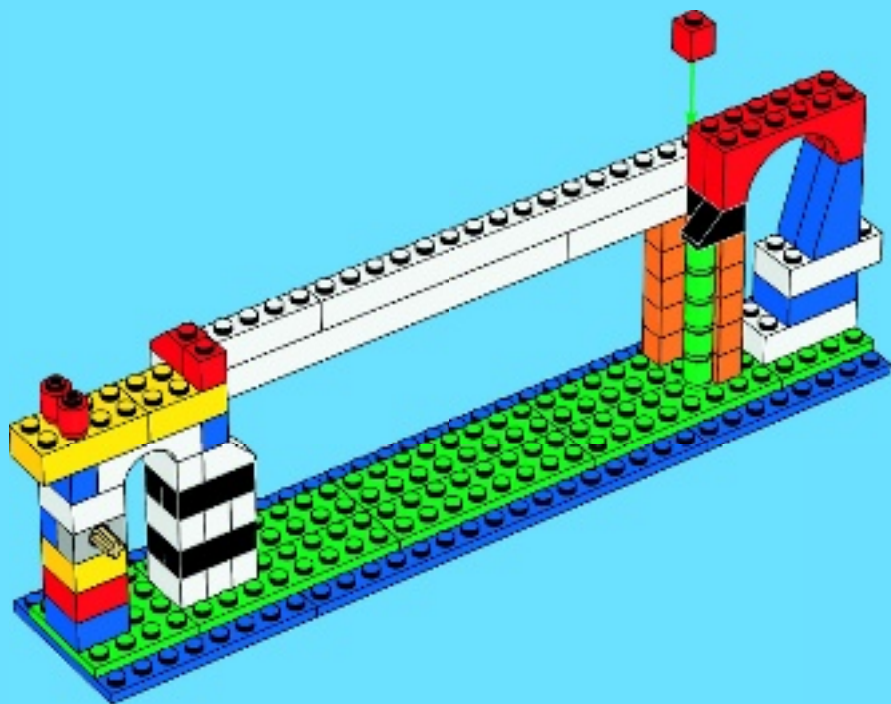 


13

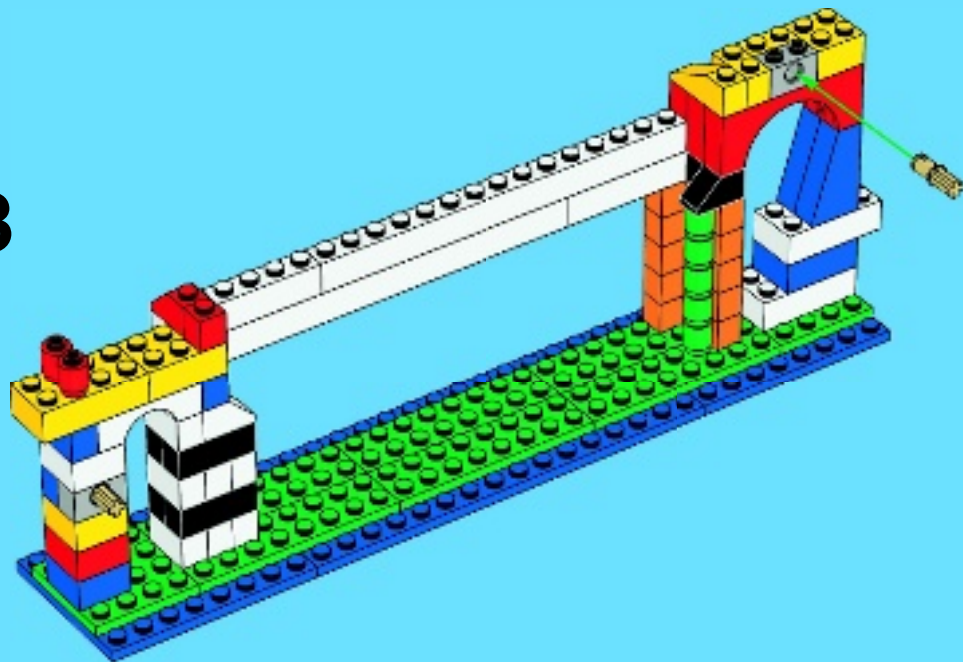 


15

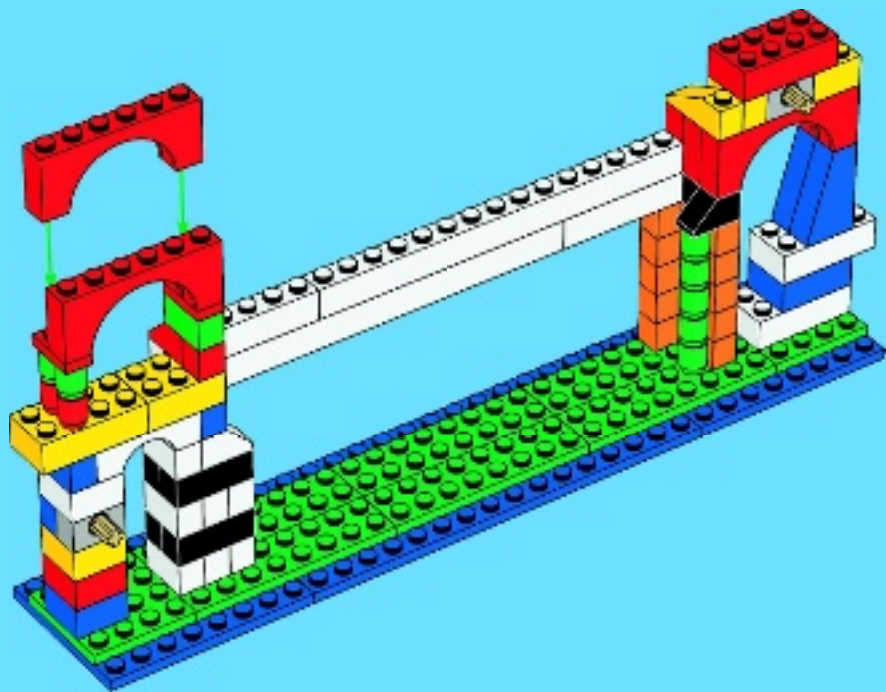 


16

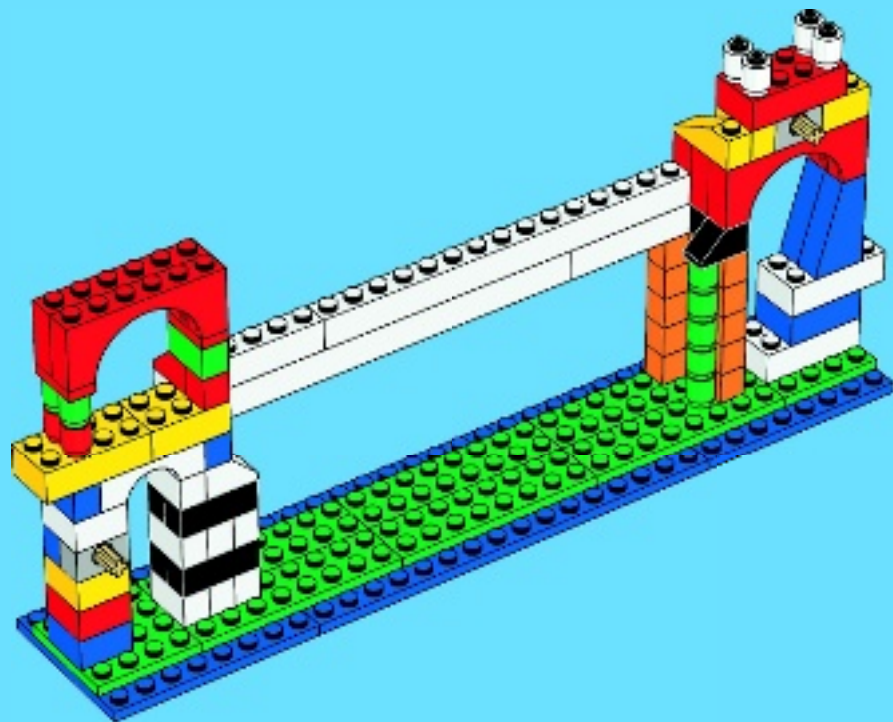 


17

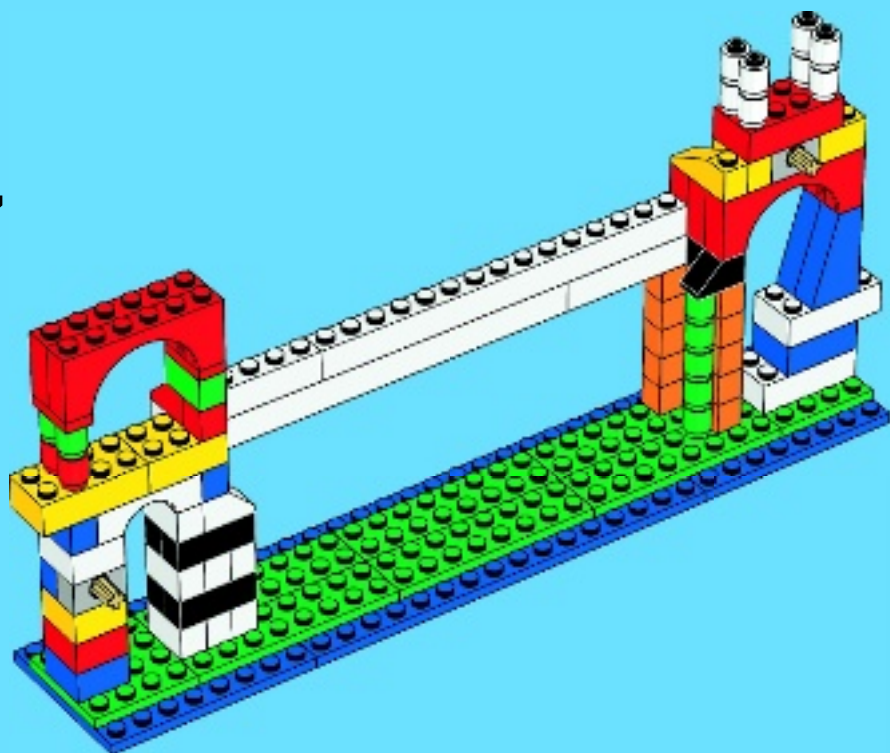 


18

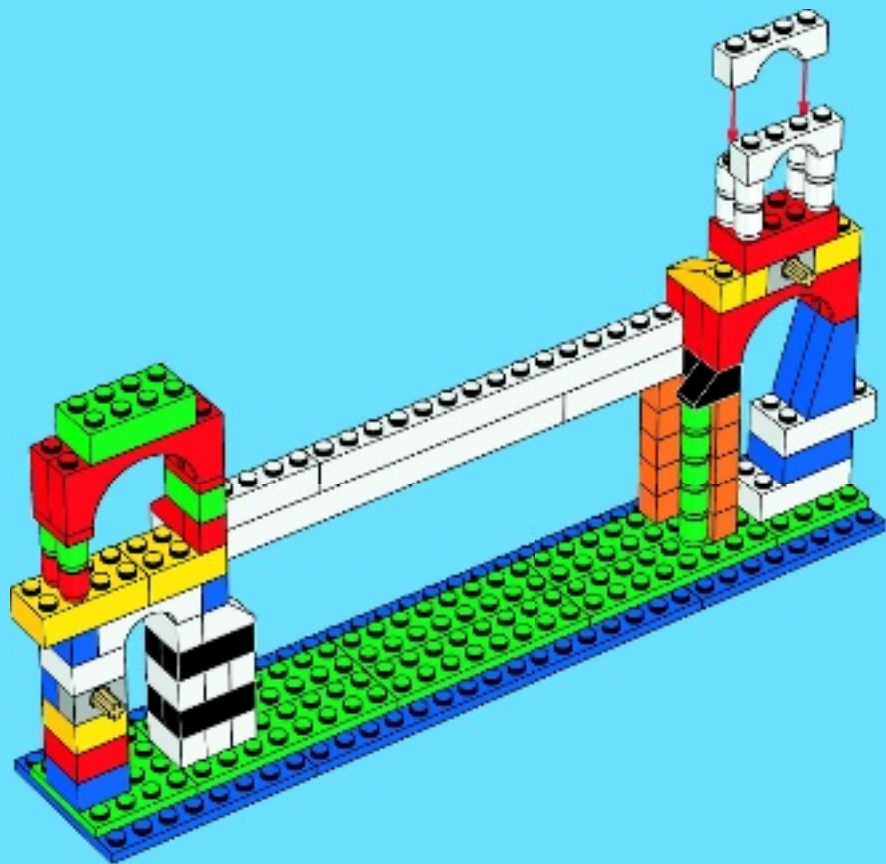 


19

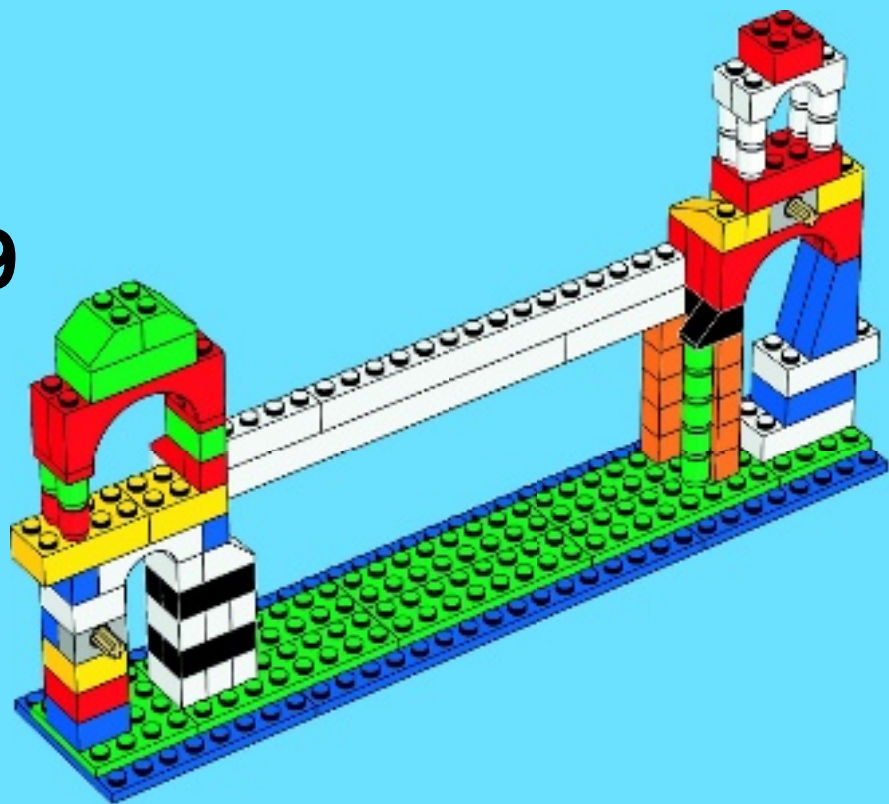 

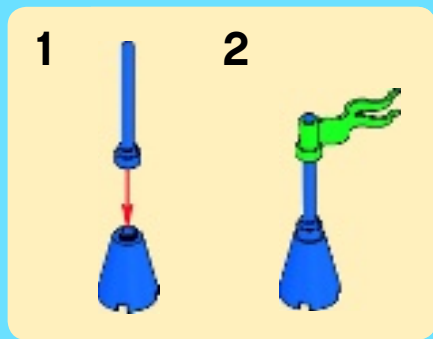 

20

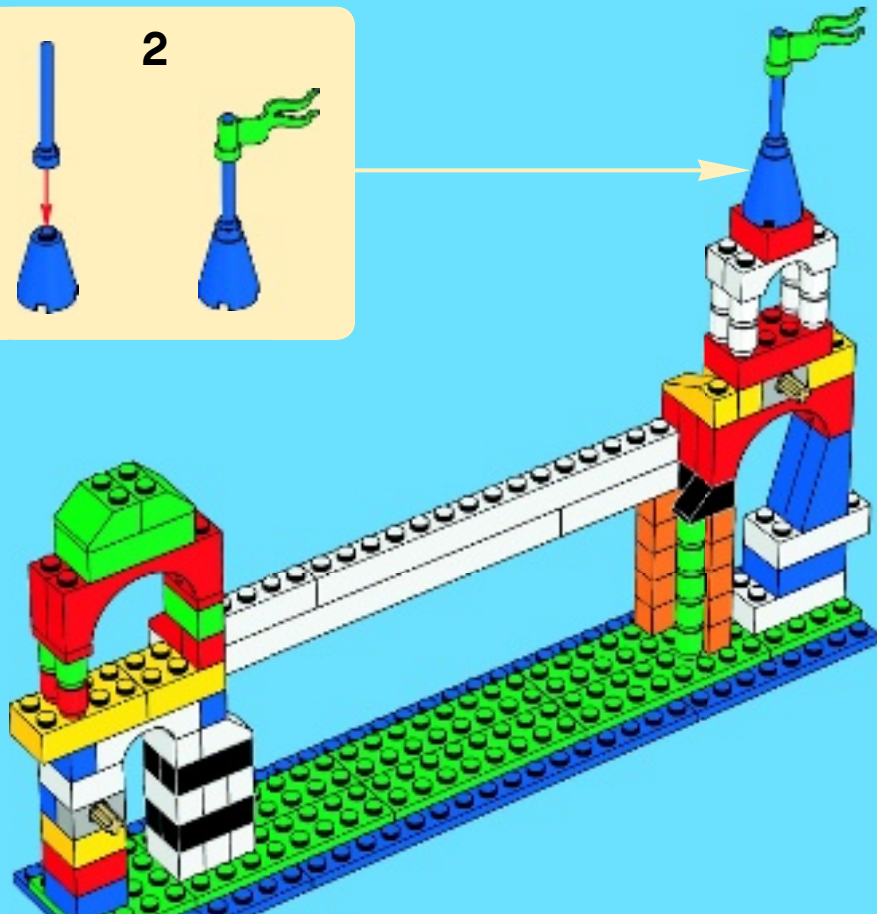 

1



2



 
3



4



21

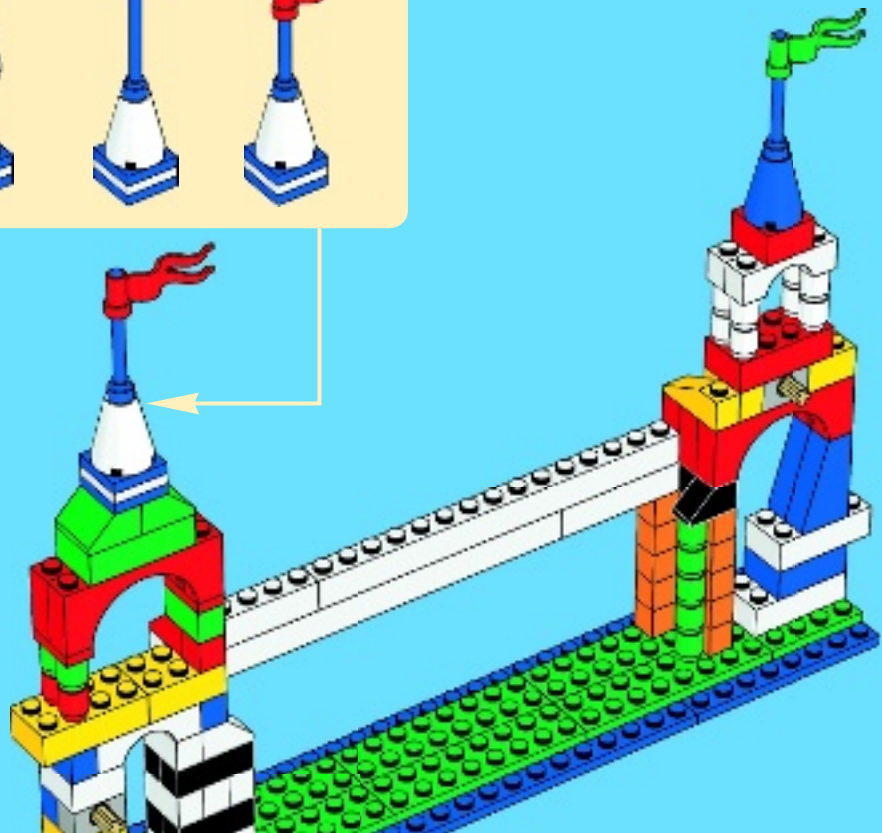

22



1x
4107736

1x
300526

4x
300426

2x
362226

1x
4121966

1x
4106552



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



1x
4106356



7x
306228



2x
303928



2x
4243821



6x
303428



4x
4173805



8x
4121739



2x
300424



2x
300324



1x
300224



1x
300124



1x
428624



2x
4211440



1x
4285634



 
3x
300423



1x
300323



1x
6022149



2x
303623



1x
4611373



1x
300223



2x
4166140



1x
9341



2x
4121925



2x
302223



2x
300521



2x
300321



1x
300121



2x
306221



1x
4121934



4x
6040248



2x
302321



1x
449521



1x
4562544



1x
6016195



5x
300501



4x
300401



 
1x
300301



2x
362201



2x
300101



2x
300901



2x
246501



1x
449528



1x
4506998



2x
4666579



8x
306201



1x
6022158



1x
4121932



4x
365901



1x
302201



1x
4514558

