

6061

LEGOLAND®

 
LEGO



700011



1



2



3



 
4




5



6

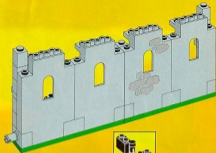


7

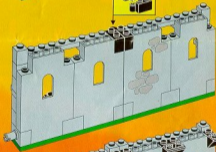 


8



 
9

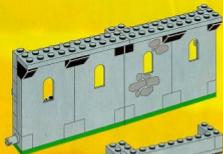

10

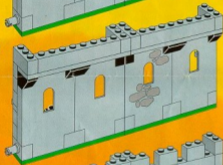 

11

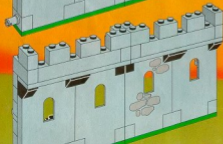 

1



2



 
3





4




5



6

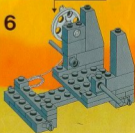  


7

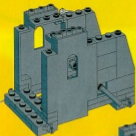 

8



 9

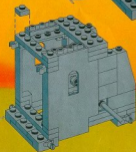

1



 
2




3




10

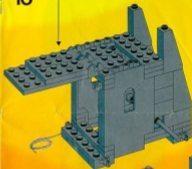


11

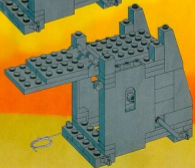 


12

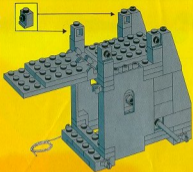 


13

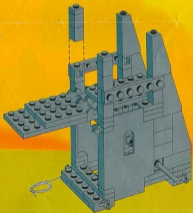 


14

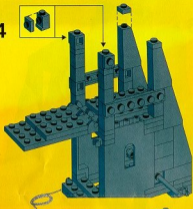 


15

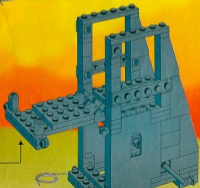 


16

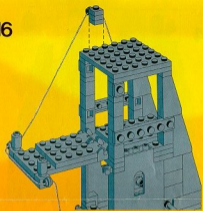 

18

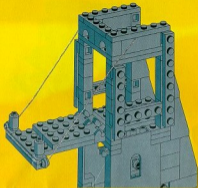 

17

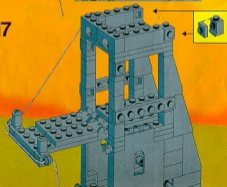 

19

