 
 


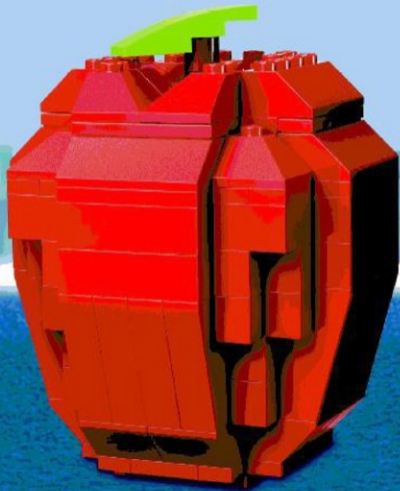


3300000



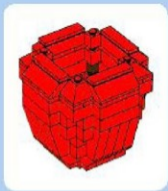


 1




2

 
2

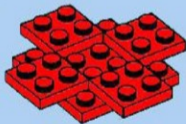


3

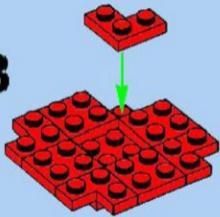 


4

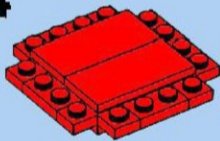 


5

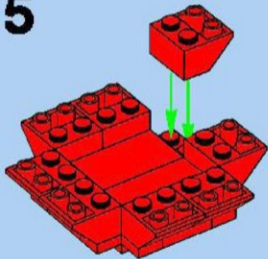 


6

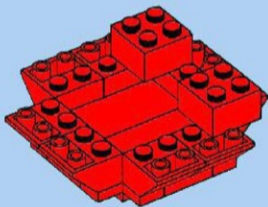 


7

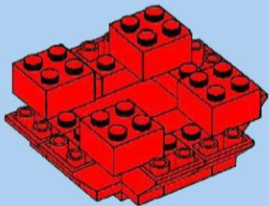 


8

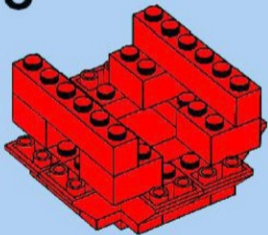 


9

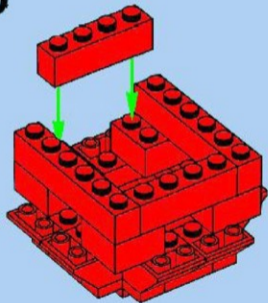 


10

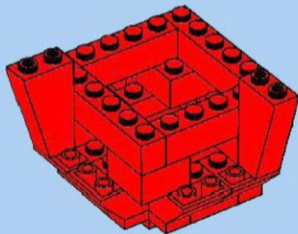 


11

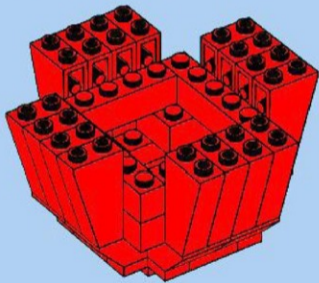 


12

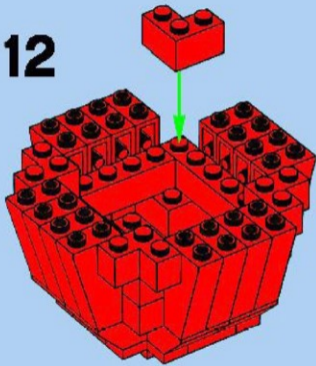 


13

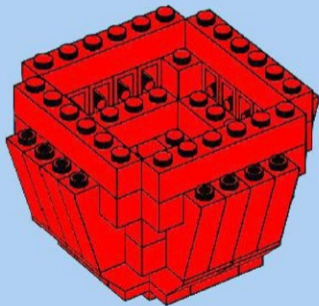 


14

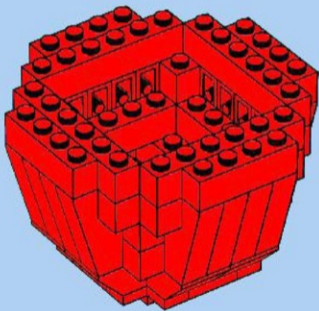 


15

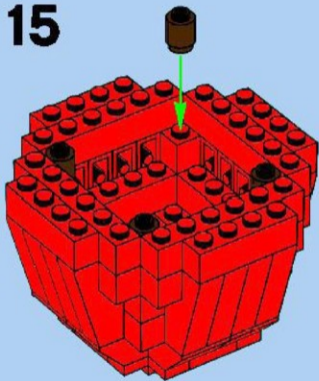 


16

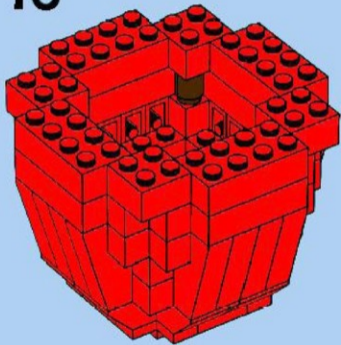 


17

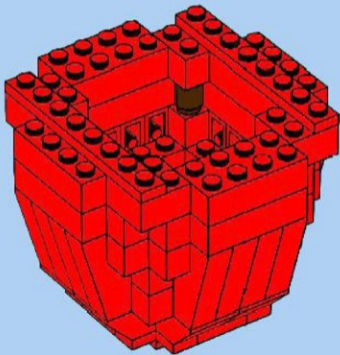 


18

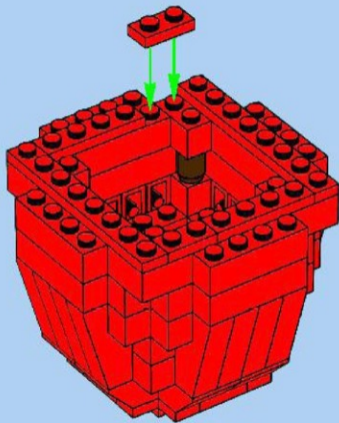 


19

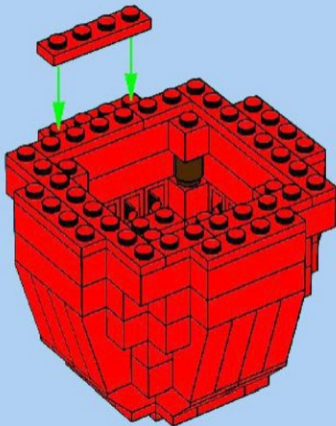 

20

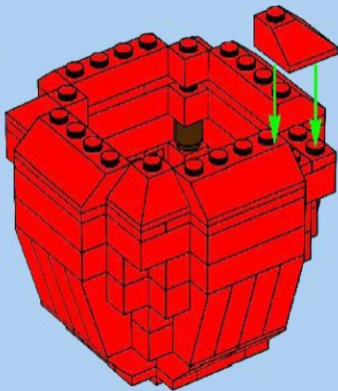 


21

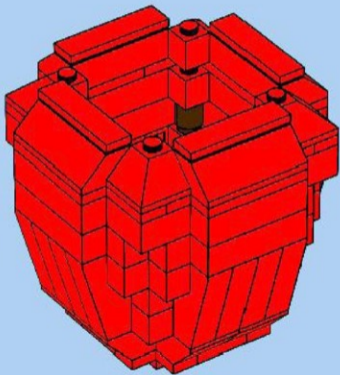 





1

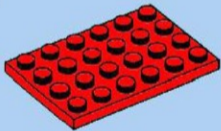 


2

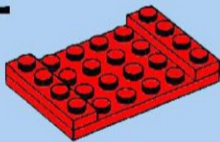 

3

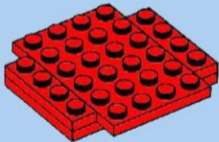 

4

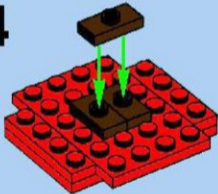 

1



2

 


3x


5




6

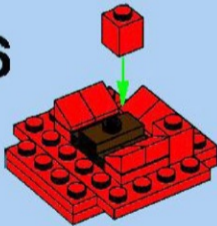


7

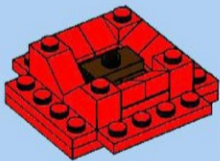 


8

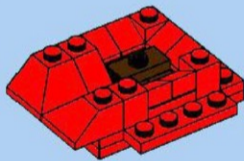 


9

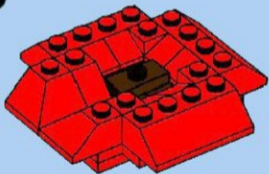 


10

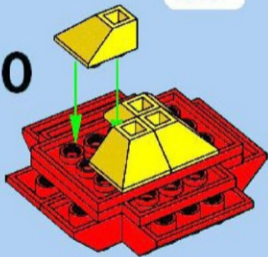 


11

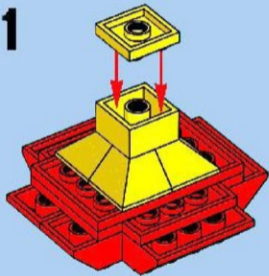 


12

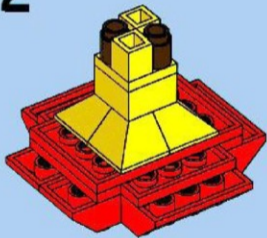 


13

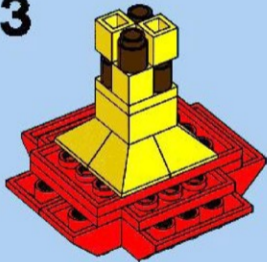 


14

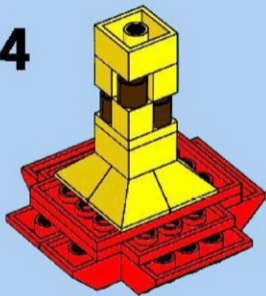 


15

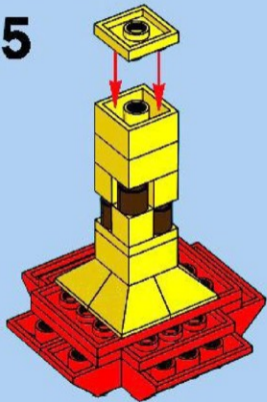 

16

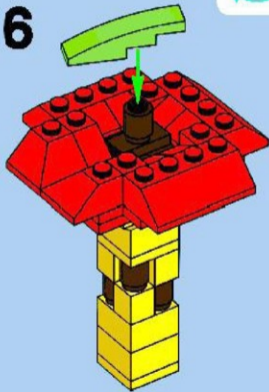 

17

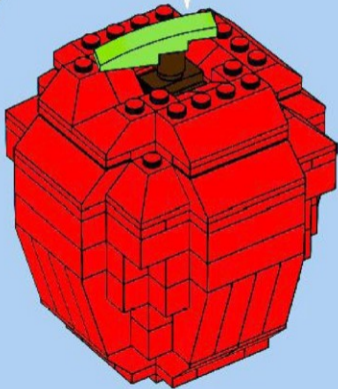 



2x
300521



8x
300321



4x
235721



6x
301021



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



4x
300121



6x
300921



6x
4504379



2x
4121934



16x
4501534



6x
4163087



8x
366021



7x
303721



5x
302321



4x
302221



4x
243121



8x
371021



2x
4560179



1x
4243814



2x
346021



2x
303221



4x
242021



4x
300524



3x
300324



4x
4264338



2x
302224



1x
4537927



9x
4211183



3x
4219726

