



Mixels

TRUMPSY

41562



 
 LEGO.com

6146189


1



2

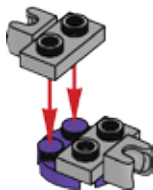


3

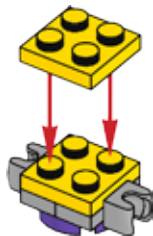 


4



 5

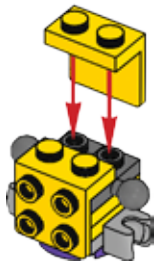


6

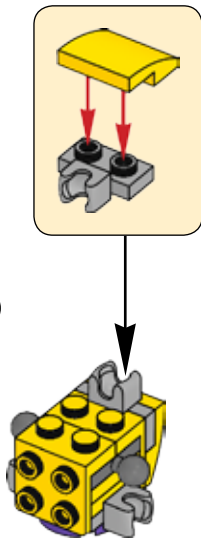 


7




 8

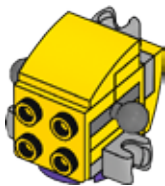


9

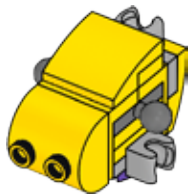 


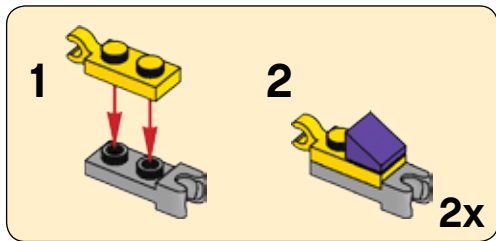 


10

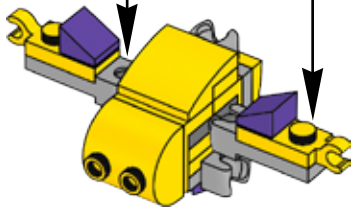 

11

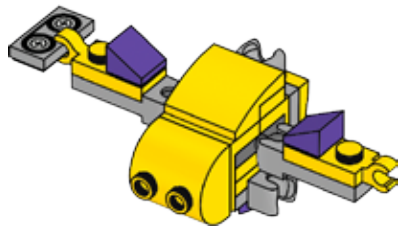 

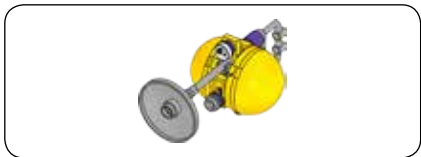 

12



13



 
14




15




16

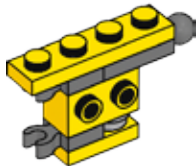

17

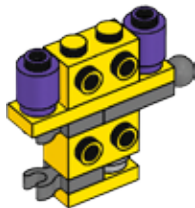 


18

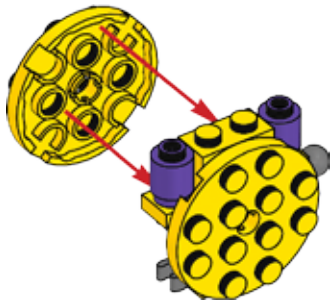 


19




 20

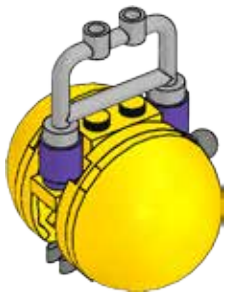



21

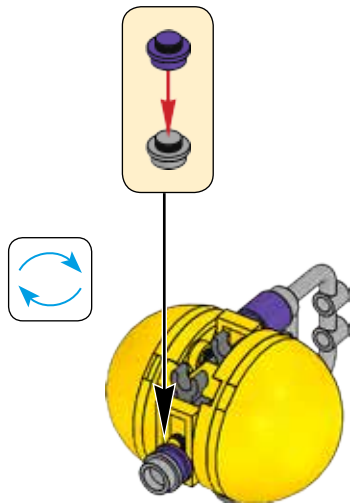 

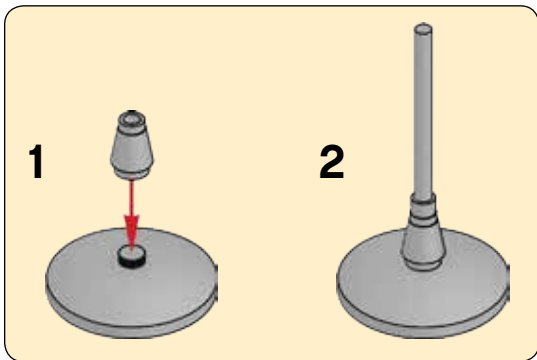 


22

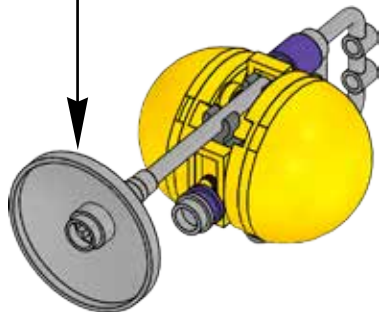 


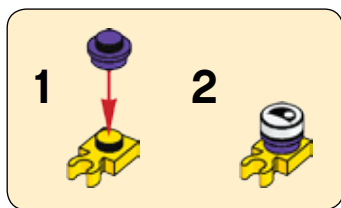 


23

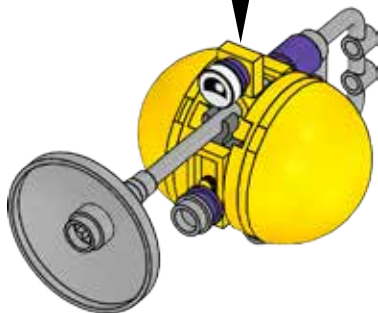 

24

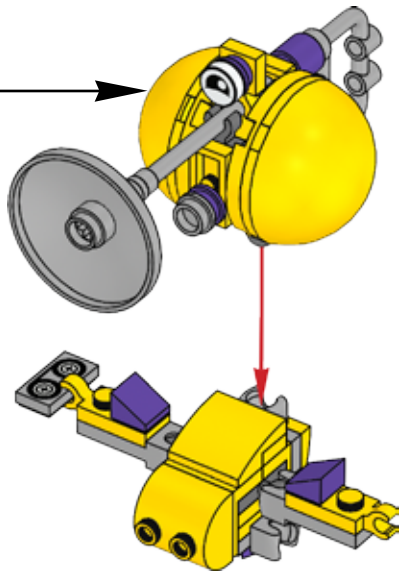 


 

25



 26



27

 


 
28



2x

29

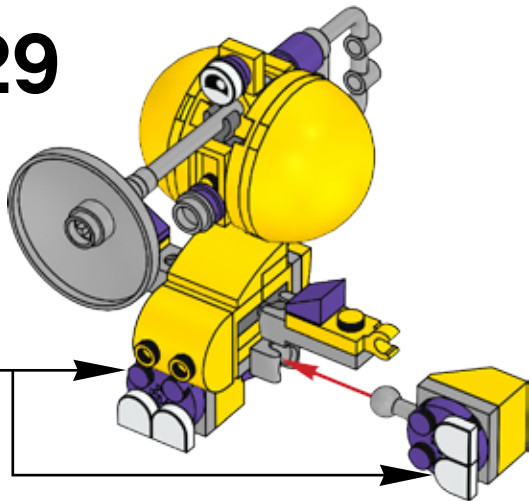

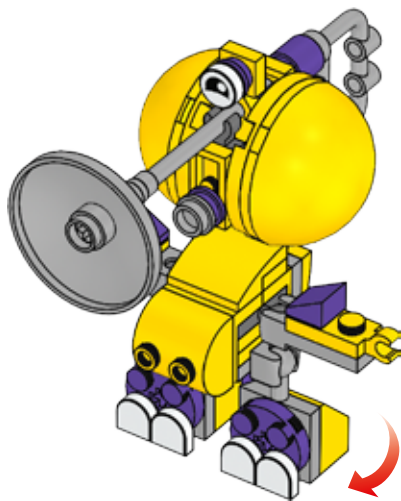



2x
4587212



2x
4211525



2x
6063611



1x
4613258



2x
366024



4x
6131655



2x
6039479



1x
4654046



1x
4211664



2x
302324



1x
4187061



1x
6099548



1x
6123814



3x
6043656



1x
6133587



2x
4535740



2x
302224



2x
4567509



2x
6043639



1x
6081975



2x
6079007



1x
371024



2x
6070305



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



2x
6117938



2x
4515349



3x
6030534



2x
4557157



2x
6133586



2x
4566522



**JAMZY
41560**

**TAPSY
41561**

**TRUMPSY
41562**

**MIXIES
MAX!**



 **LEGO.com/mixels** 

SERIES
7

WELCOME TO
MIXOPOLIS



**PALADUM
41559**



**CAMILLOT
41557**



**TAPSY
41561**



**TRUMPSY
41562**



**KUFFS
41554**



**JAMZY
41560**



**TIKETZ
41556**



**BUSTO
41555**



**MIXADEL
41558**



 LEGO.com/mixels 



club™



1 LEGO.com/club



2



3

