



7142




X-WING FIGHTER™



LUKE SKYWALKER



BOBA FETT

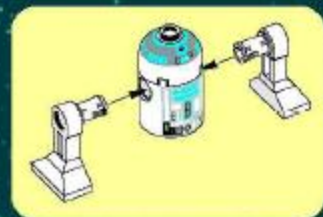

R2-D2



1



2




3



4




5

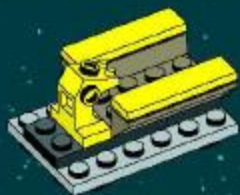

6



7

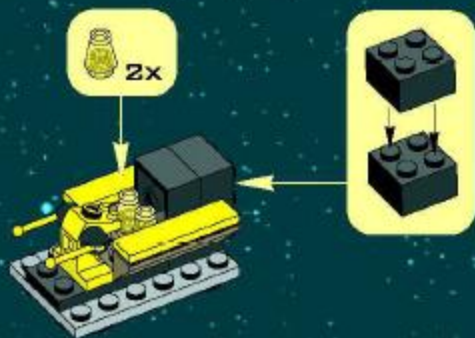

1



2



3



4



5



6



1



2



3



4



6




5



7




8

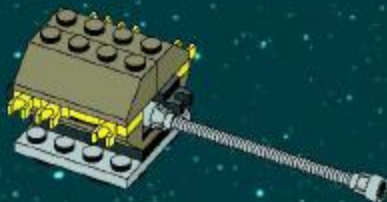


9




10

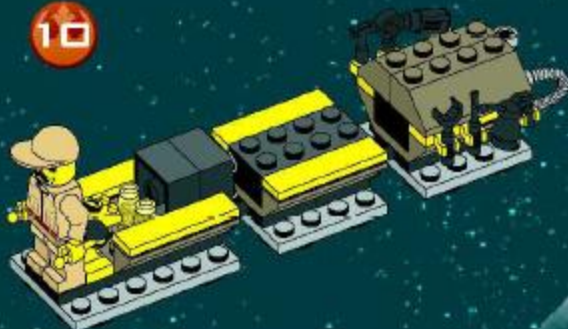


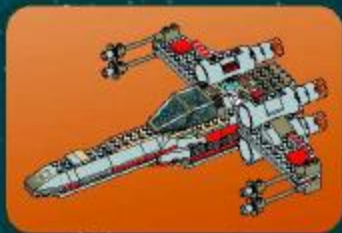

1

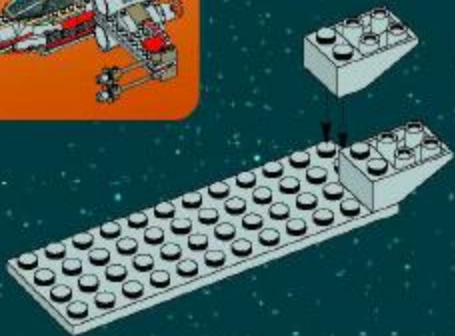

2

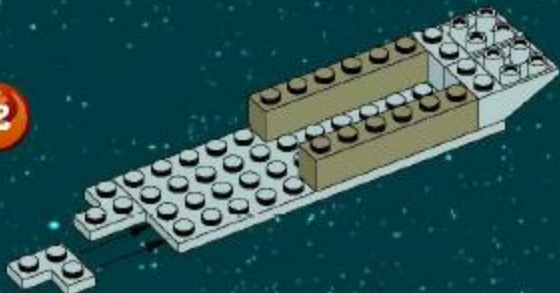

3




4



5




7

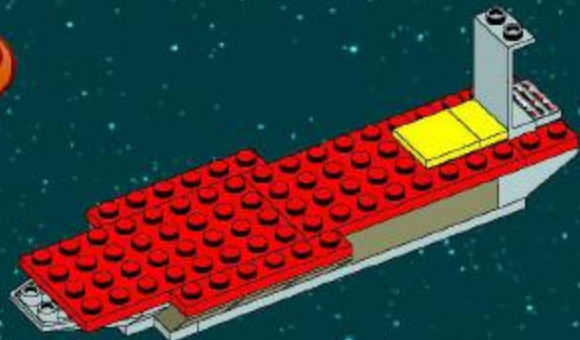

6




8

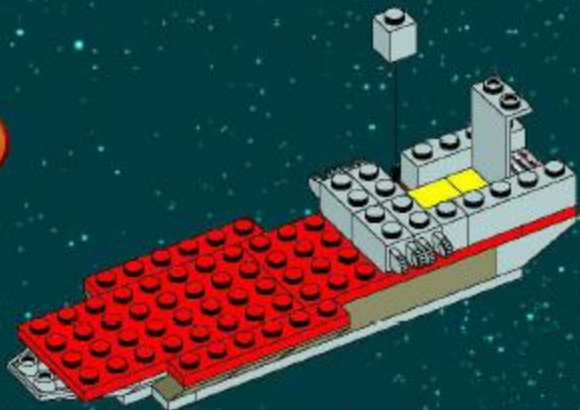





13

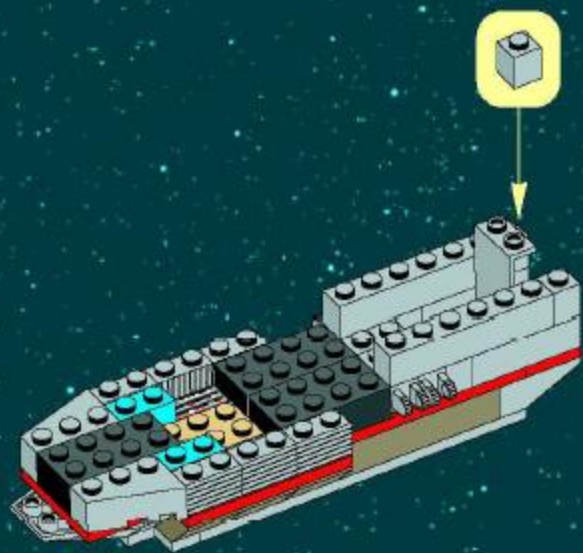

14



15



16



17



18




19




20




21

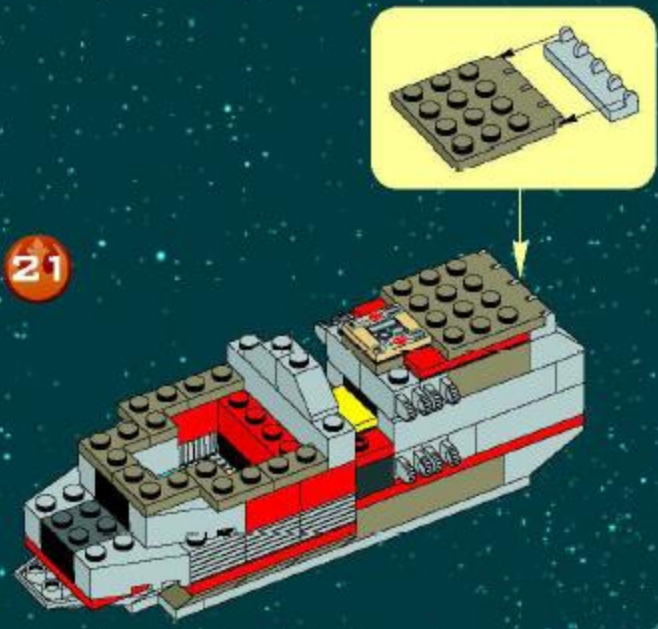

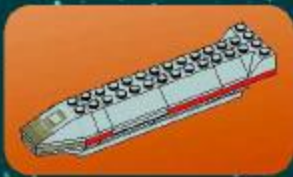

1

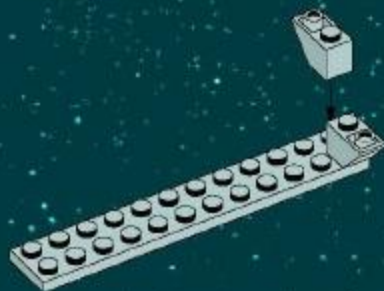

2




3




4



5

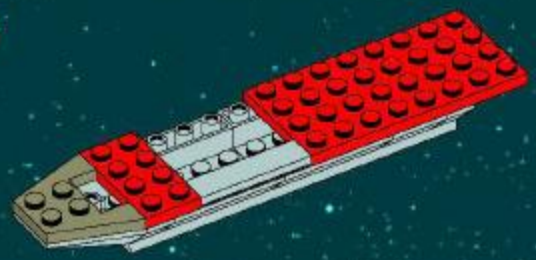


7

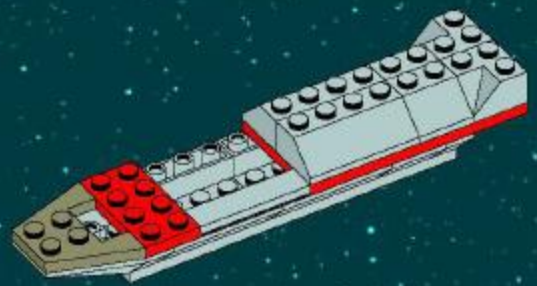

6




8

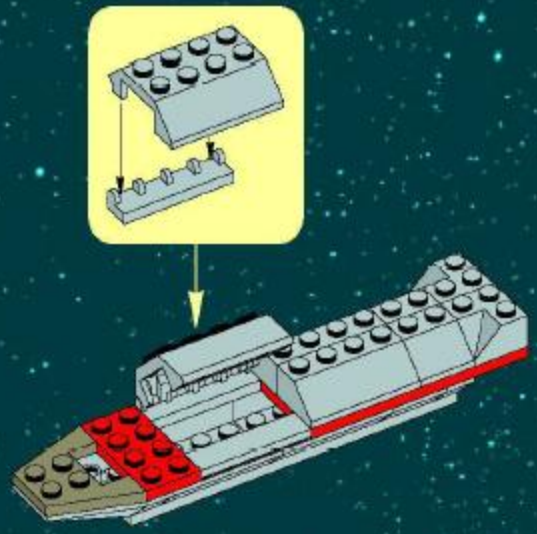

9



22

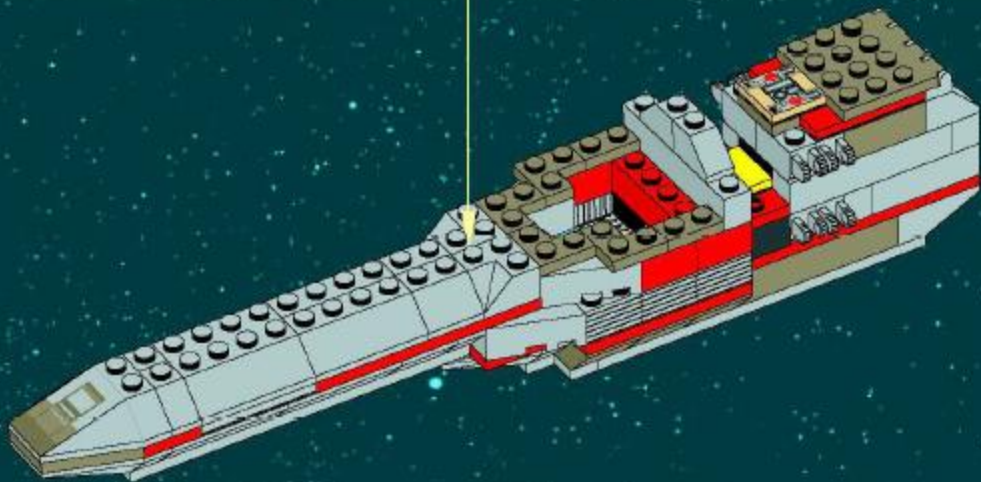

1




2




3



23

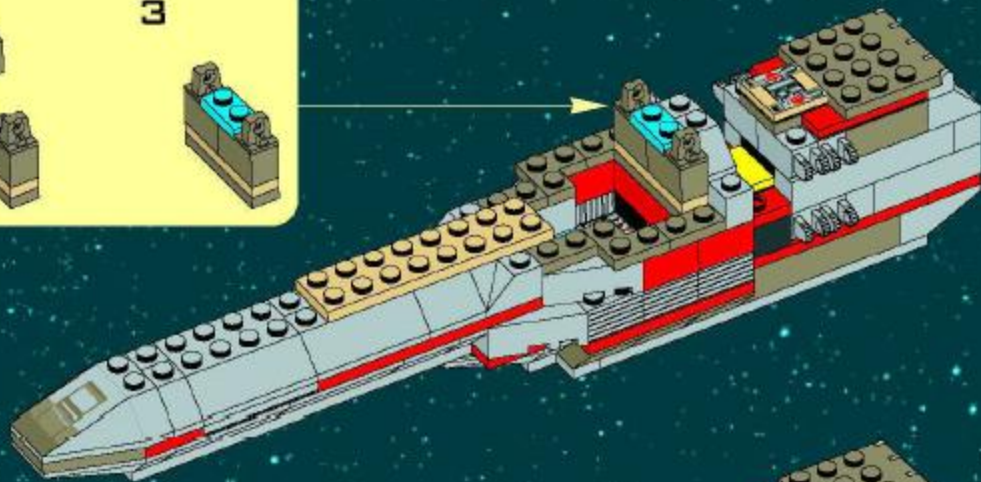

24

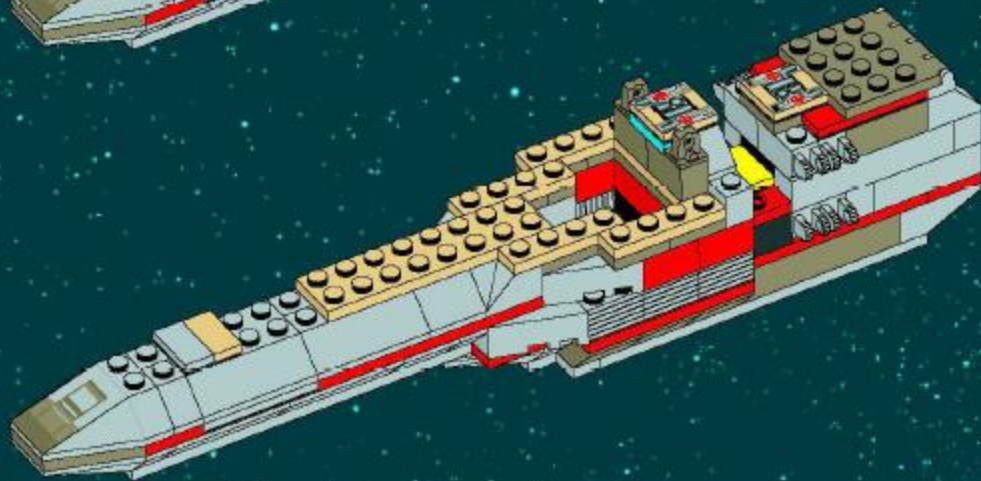


1



3




2

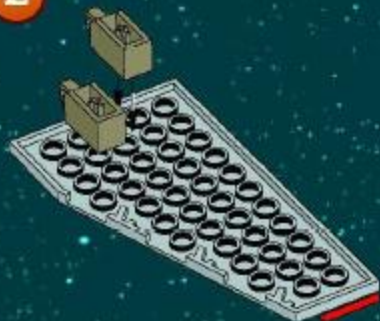

4




5

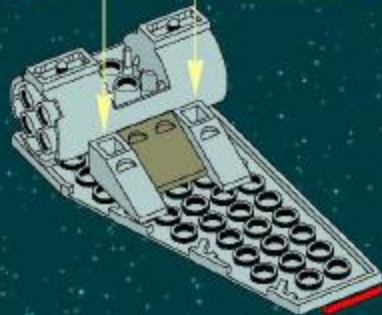





6

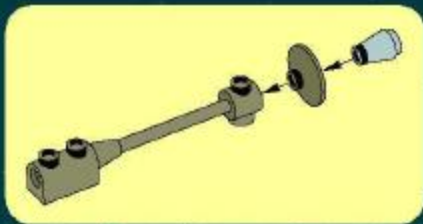

25

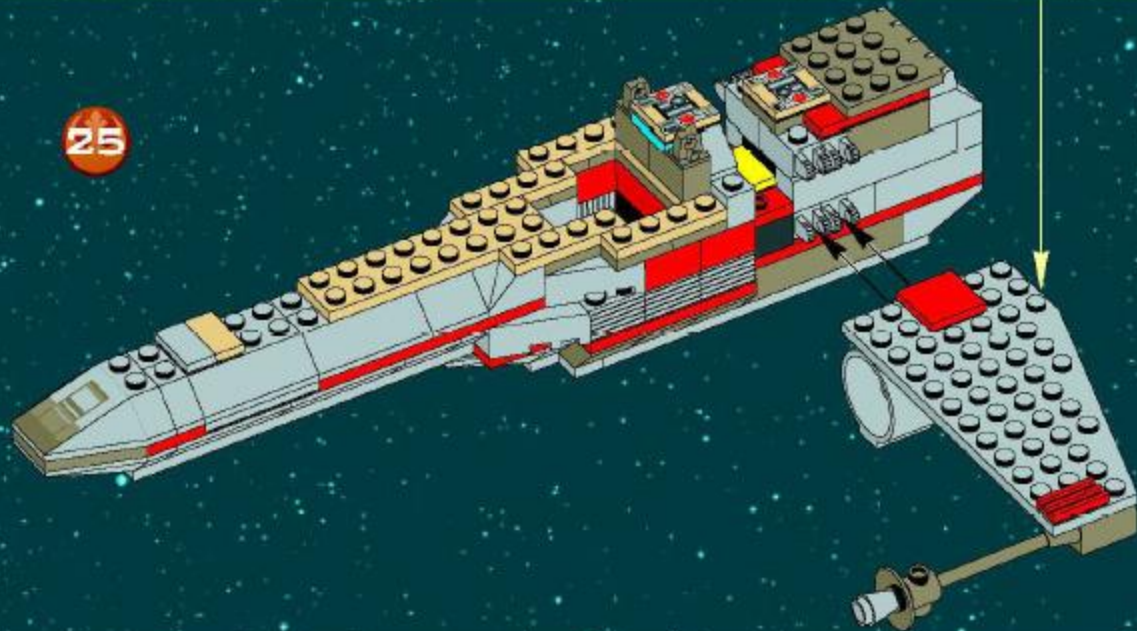

1

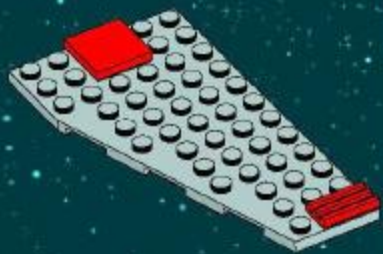

2




3




4




5

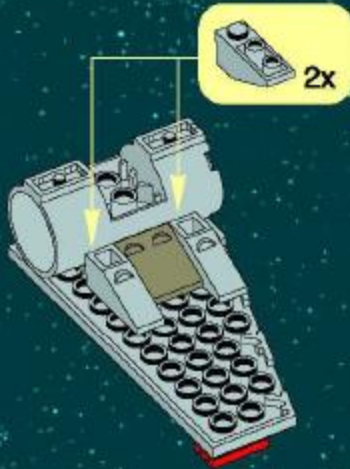


6

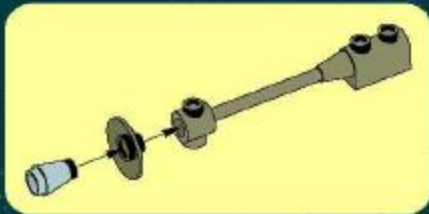

26

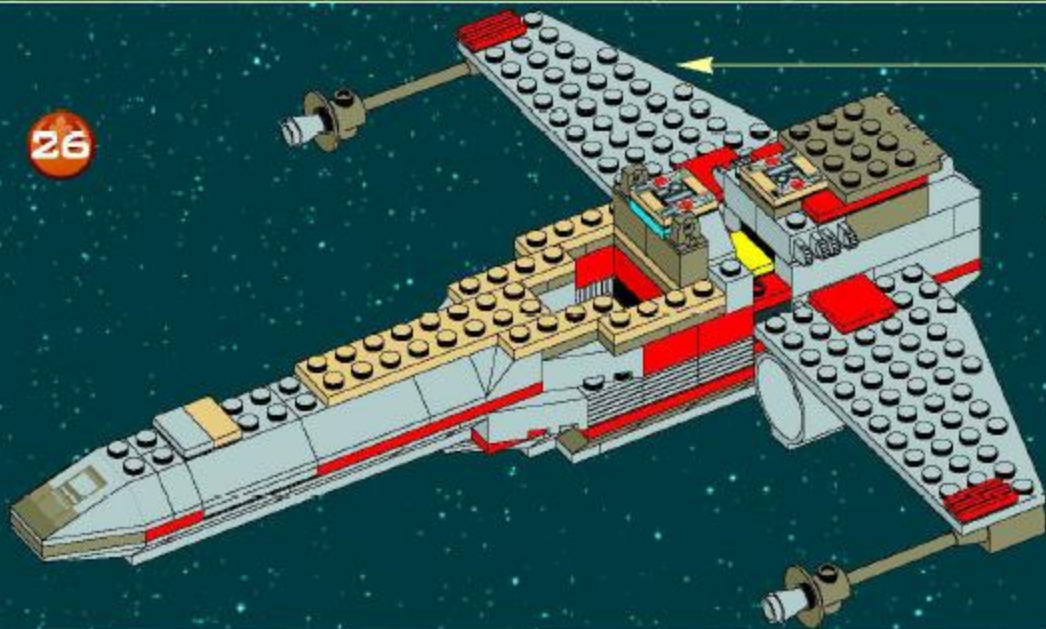


1

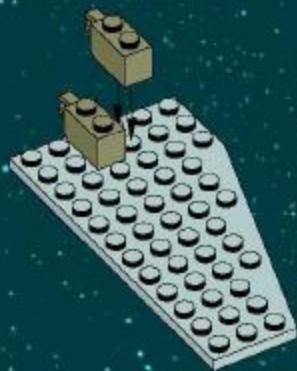


2



1

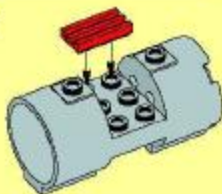

2

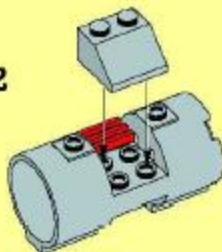

3




4




5



6

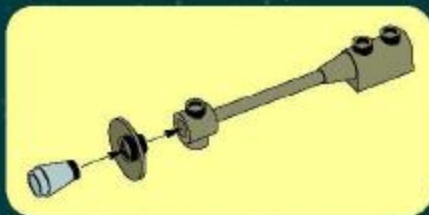

27

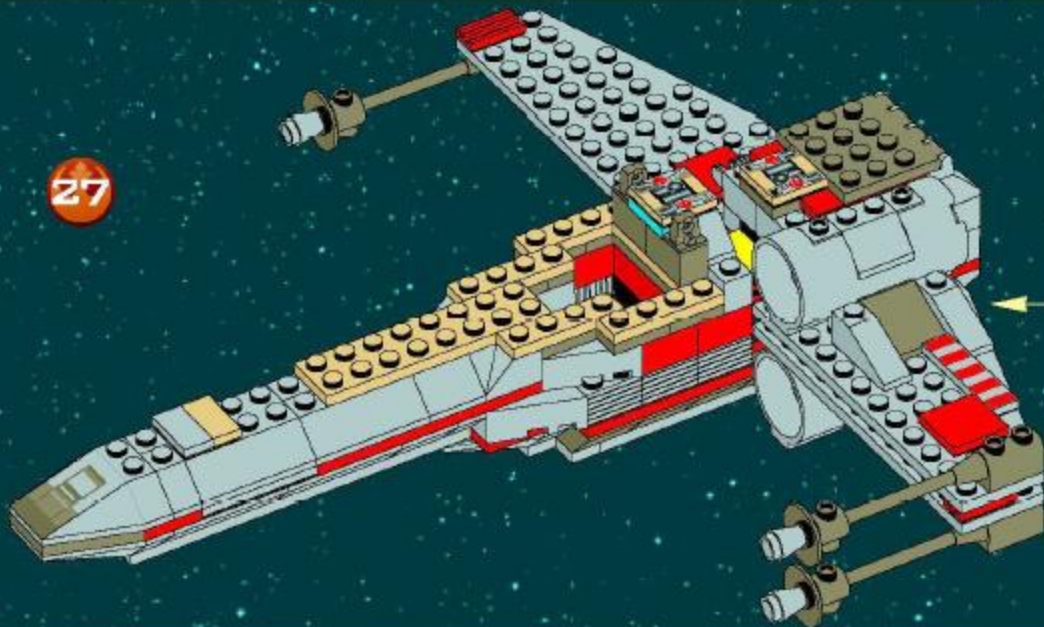


1




2



1

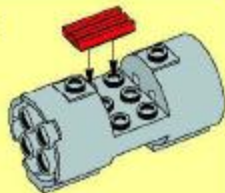

2

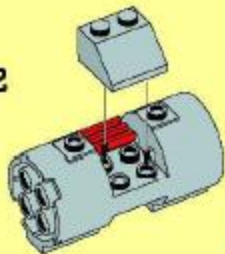


3




4




5

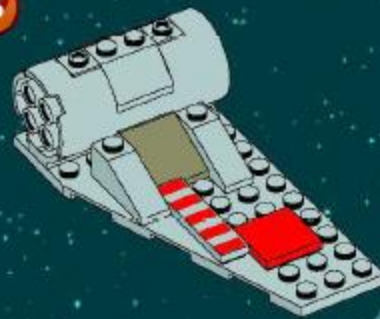


6

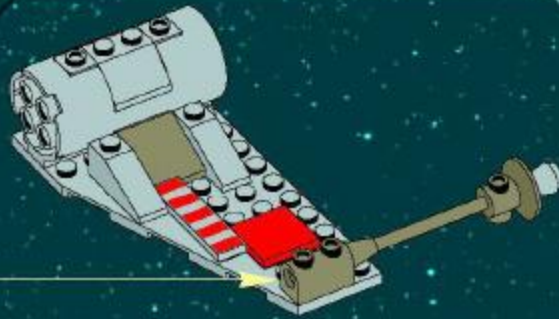

28

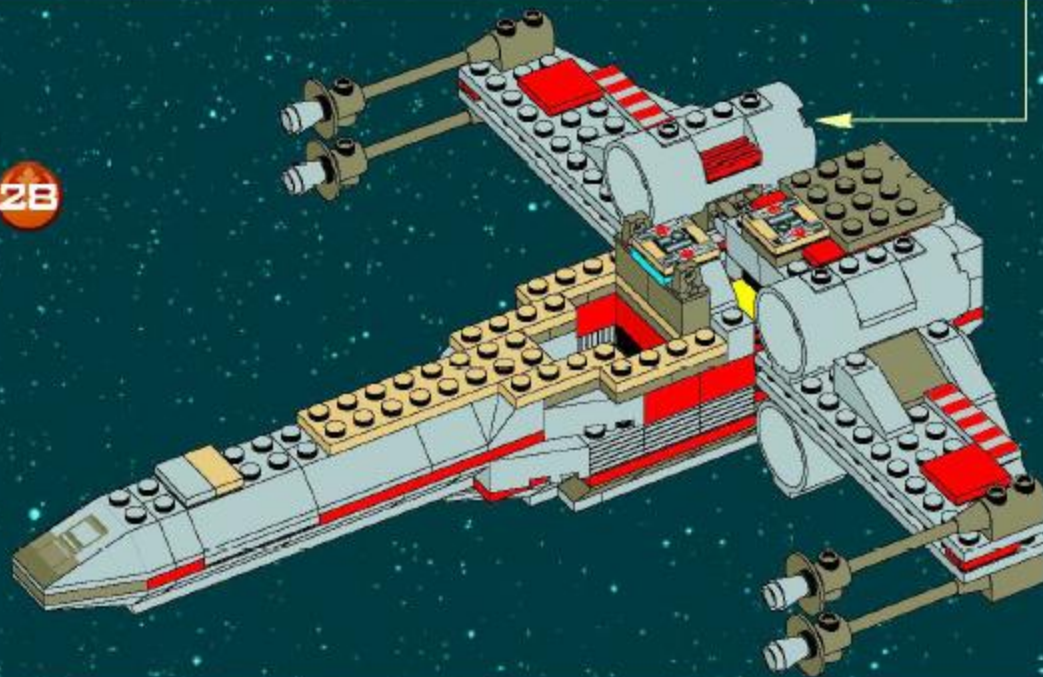

29

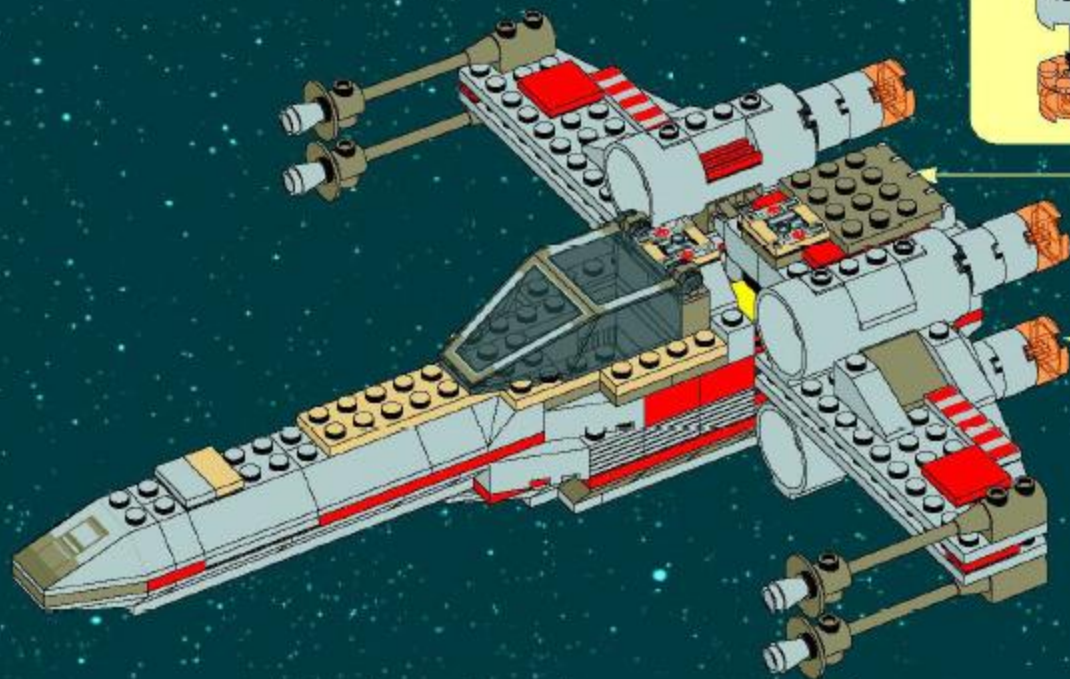

1


2

4x

The instruction callout box is yellow and contains two assembly sequences. Sequence 1 shows a black Technic pin being inserted into a grey Technic bush, which is then inserted into another grey Technic bush, and finally into an orange Technic axle. Sequence 2 shows a grey Technic bush being inserted into an orange Technic axle. The number '4x' indicates that four of these assemblies are required.



30

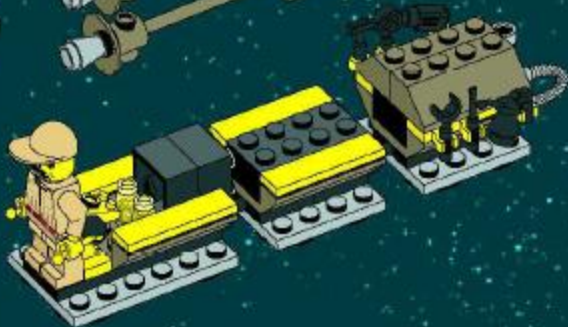








1



2

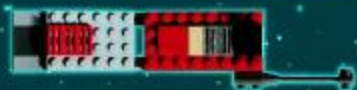

3





4



5



6



